

# SMARC T335X Linux Development

## Firmware Preload:

**When we reach production, and are ordering the SMARC modules from you, will they come pre-loaded with U-boot?  
Or should we be preparing the capability to connect to the JTAG on the module?**

No JTAG at all. It's way too complicate to use it.

It depends on where you would like to boot your device.

If you would like to boot from SD card, you can simply prepared a SD card and set the boot\_sel to SD device. If you would like to boot from onboard eMMC, you still need to boot from SD card first and prepared a shell script wring your binary to eMMC. That's it!

For how to set up SD card, please see

<http://developer.embedian.com/display/LOS/SMARC+T335X#SMARCT335X-SetupSDCard>

Unique solution ID: #1007

Author: Eric Lee

Last update: 2014-08-16 15:08