

User's Manual

SMARC Computer on Module

- NXP i.MX8M Mini Cortex A53 and Cortex M4
- 24bits dual-channel LVDS LCD
- 4 x COM Ports
- 1 x SDHC
- 1 x USB OTG 2.0, 4 x USB Host 2.0
- 1 x 10/100/1000M Gigabit Ethernet
- 2 x CAN Bus, 2 x SPIs, 4 x I2Cs
- 1 x PCIe 2.0, 1 x MIPI_CSI

SMARC-iMX8MM

Solo, Solo Lite, Dual, Dual Lite, Quad and Quad Lite Cores

(SMARC 2.0 Specification Compliant)





Revision History

<i>Revision</i>	<i>Date</i>	<i>Changes from Previous Revision</i>
1.0	2020/ 02/ 10	Initial Release

USER INFORMATION

About This Manual

This document provides information about products from EMBEDIAN, INC. No warranty of suitability, purpose, or fitness is implied. While every attempt has been made to ensure that the information in this document is accurate, the information contained within is supplied “as-is” and is subject to change without notice.

For the circuits, descriptions and tables indicated, EMBEDIAN assumes no responsibility as far as patents or other rights of third parties are concerned.

Copyright Notice

Copyright © 2020 EMBEDIAN, INC..

All rights reserved. No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of EMBEDIAN.

Trademarks

The following lists the trademarks of components used in this board.

- ARM is a registered trademark of ARM Limited.
- Android is a registered trademark of Google
- Linux is a registered trademark of Linus Torvalds.
- WinCE is a registered trademark of Microsoft
- Qualcomm is a registered trademark of Qualcomm
- All other products and trademarks mentioned in this manual are trademarks of their respective owners.

Standards

EMBEDIAN is ISO 9001:2008 and ISO14001-certified manufacturer. SMARC is an SGET standard for ARM computer on module.

Warranty

This EMBEDIAN product is warranted against defects in material and workmanship for the warranty period from the date of shipment. During the warranty period, EMBEDIAN will at its discretion, decide to repair or replace defective products.

Embedian, Inc.

Within the warranty period, the repair of products is free of charge as long as warranty conditions are observed.

The warranty does not apply to defects resulting from improper or inadequate maintenance or handling by the buyer, unauthorized modification or misuse, operation outside of the product's environmental specifications or improper installation or maintenance.

EMBEDIAN will not be responsible for any defects or damages to other products not supplied by EMBEDIAN that are caused by a faulty EMBEDIAN product.

Technical Support

Technicians and engineers from EMBEDIAN and/or its subsidiaries and official distributors are available for technical support. We are committed to making our product easy to use and will help you use our products in your systems.

Before contacting EMBEDIAN technical support, please consult our Web site for the latest product documentation, utilities, and drivers. If the information does not help solve the problem, contact us by e-mail or telephone.

Table of Contents

CHAPTER 1 INTRODUCTION	10
1.1 FEATURES AND FUNCTIONALITY.....	12
1.2 MODULE VARIANT	13
1.3 BLOCK DIAGRAM	14
1.4 SOFTWARE SUPPORT / HARDWARE ABSTRACTION	15
1.5 DOCUMENT AND STANDARD REFERENCES	16
CHAPTER 2 SPECIFICATIONS.....	21
2.1 SMARC-IMX8MM GENERAL FUNCTIONS	21
2.2 SMARC-IMX8MM DEBUG	91
2.3 MECHANICAL SPECIFICATIONS.....	91
2.4 ELECTRICAL SPECIFICATIONS.....	107
2.5 ENVIRONMENTAL SPECIFICATIONS.....	110
CHAPTER 3 CONNECTOR PINOUT	112
3.1 SMARC-IMX8MM CONNECTOR PIN MAPPING.....	112
CHAPTER 4 POWER CONTROL SIGNALS BETWEEN SMARC-IMX8MM MODULE AND CARRIER	146
4.1 SMARC-IMX8MM MODULE POWER.....	146
4.2 POWER SIGNALS.....	151
4.3 POWER FLOW AND CONTROL SIGNALS BLOCK DIAGRAM	156
4.4 POWER STATES	158
4.5 POWER SEQUENCES.....	160
4.6 TERMINATIONS	164
4.7 BOOT DEVICE SELECTION.....	169

Embedian, Inc.

Using this Manual

This guide provides information about the Embedian *SMARC-iMX8MM* for NXP *i.MX8M Mini* embedded *SMARC* core module family.

Conventions used in this guide

This table describes the typographic conventions used in this guide:

<i>This Convention</i>	<i>Is used for</i>
<i>Italic type</i>	Emphasis, new terms, variables, and document titles.
monospaced type	Filenames, pathnames, and code examples.

Embedian Information

Document Updates

Please always check the product specific section on the Embedian support website at www.embedian.com/ for the most current revision of this document.

Contact Information

For more information about your Embedian products, or for customer service and technical support, contact Embedian directly.

<i>To contact Embedian by</i>	<i>Use</i>
Mail	Embedian, Inc. 9F-4. 432 Keelung Rd. Sec. 1, Taipei 11051, Taiwan
World Wide Web	http://www.embedian.com/
Telephone	+ 886 2 2722 3291

Embedian, Inc.

Additional Resources

Please also refer to the most recent *NXP i.MX8M Mini* processor reference manual and related documentation for additional information.

Chapter 1

Introduction

This Chapter gives background information on the *SMARC-iMX8MM* Section include :

- Features and Functionality
- Module Variant
- Differences between Module Variants
- Block diagram
- Software Support / Hardware Abstraction
- Module Variant
- Document and Standard References

Chapter 1 Introduction

The *SMARC-iMX8MM* offers high-performance processing for a low-power System-on-Module. It perfectly fits various embedded products, the growing market of connected and portable devices and segment for connected streaming audio/video devices, scanning/imaging devices and various devices requiring high-performance but low-power processors.

The product is based on the NXP *i.MX 8M Mini* Solo/Solo Lite/Dual/Dual Lite/Quad Lite/Quad family of multi-purpose processors, featuring an ARM® Cortex™-A53 up to 1.8GHz with an additional 400MHz ARM Cortex-M4 core.

This heterogeneous multicore processing architecture enables the device to run an open operating system like Linux on the Cortex-A53 core and an RTOS like FreeRTOS™ on the Cortex-M4 core for time and security critical tasks.

The module connector has 314 edge fingers that mate with a low profile 314 pin 0.5mm pitch right angle connector (this connector is sometimes identified as an 321 pin connector, but 7 pins are lost to the key).

Featuring NXP's *i.MX8M Mini* System-on-Chip, Embedian's *SMARC-iMX8MM* offers single- or dual-channel 18-bit/24-bit LVDS LCD, Gigabit Ethernet, SDHC, USB 2.0, UARTs, CAN bus, PCIe and many peripheral interfaces in a cost effective, low power, miniature package. Embedian's *SMARC-iMX8MM* thin and robust design makes it an ideal building block for reliable system design with a wide range of products in target markets requiring high-performance processing with low power consumption, compact size and a cost-effective solution.

The module is the ideal choice for a broad range of target markets including

- Building Control - Fire and Security panel, Elevator Control, HVAC control
- Industrial Vehicle - Avionics cockpit display, in-flight infotainment, train and heavy equipment HMI
- Healthcare – patient monitor
- Personal UAVs
- Smart Cities
- Smart Home
- Voice control and voice assistants
- General Control System
- And more

Complete and cost-efficient Embedian evaluation kits for Yocto build, Debian

Embedian, Inc.

9 , Ubuntu 18.04 and Android Pie 9.0 allow immediate and professional embedded product development with dramatically reduced design risk and time-to-market.

1.1 Features and Functionality


The *SMARC-iMX8MM* module is based on the *i.MX8M Mini* processor with solo, solo lite, dual, dual lite, quad, and quad lite core from NXP. This processor offers a high number of interfaces. The module has the following features:

- *SMARC* 2.0 compliant in an 82mm x 50mm form factor.
- Processor: *NXP i.MX8M Mini* ARM Cortex-A53 up to 1.8GHz and Cortex-M4 up to 400MHz
- Memory: Onboard 16GB eMMC Flash
- Onboard 2GB or 4GB LPDDR4
- Networking: 1 x 10/100/1000 Mbps Ethernet
- Display:
 - ◆ Single channel LVDS LCD 24-bit or dual channel LVDS
- Expansion: 1 x SDHC/SDIO, 5x USB 2.0 (one OTG), 1 x PCIe x1 Gen 2.0
- USB: 4 x USB 2.0 Host, 1 x USB 2.0 OTG
- A single 4KB EEPROM is provided on I2C1 that holds the board information. This information includes board name, serial number, and revision information.
- Additional Interface:
 - ◆ 4 x UARTs
 - ◆ 2 x SPI (one eSPI)
 - ◆ 5 x I2C
 - ◆ 2 x I2S
 - ◆ 2 x CAN Bus
 - ◆ 2 x PWM
 - ◆ 1 x 4-Lane MIPI CSI (Camera Interface)
 - ◆ 12 x GPIOs
 - ◆ WDT
- SW Support: Linux, Yocto Build, Ubuntu 18.04, Debian 9, Android Pie 9.0
- Power Consumption (Typical)
 - ◆ ~2W
- Thermal:
 - ◆ Commercial Temperature: 0°C ~ 80°C
 - ◆ Industrial Temperature: -40° ~85°C
- Power Supply
- 3V to 5.25V

- 1.8V module IO support (SMARC 2.0 compliant)

1.2 Module Variant

The *SMARC-iMX8MM* module is available with various options based on processors in this family from NXP, LPDDR4 memory configuration, and operating temperature ranges.




1. “6” (quad core, CPU running up to 4 x 1.8GHz)
“5” (quad lite core, CPU running up to 4 x 1.8GHz, No VPU)
“4” (dual core, CPU running up to 2 x 1.8GHz)
“3” (dual lite core, CPU running up to 2 x 1.8GHz, No VPU)
“2” (solo core, CPU running up to 1 x 1.8GHz)
“1” (solo core, CPU running up to 1 x 1.8GHz, No VPU)
2. “2G” (2GB LPDDR4 memory)
“4G” (4GB LPDDR4 memory, only quad/quad lite core supports 4GB LPDDR4)
3. “I” Industrial temperature (-40°C~85°C for 2GB LPDDR4 and -30°C~85°C for 4GB LPDDR4), CPU running up to 1.6GHz
Leave it Blank if commercial temperature
4. “C” (Conformal coating) – Leave it blank if no needs of conformal coating.

For example, *SMARC-iMX8MM-6-2G* stands for quad core *i.MX8MM* processor running up to 1.8GHz with 2GB LPDDR4 memory in normal operating temperature.

1.3 Block Diagram

The following diagram illustrates the system organization of the *SMARC-iMX8MM*. Arrows indicate direction of control and not necessarily signal flow.

Figure 1: *SMARC-iMX8MM* Block Diagram

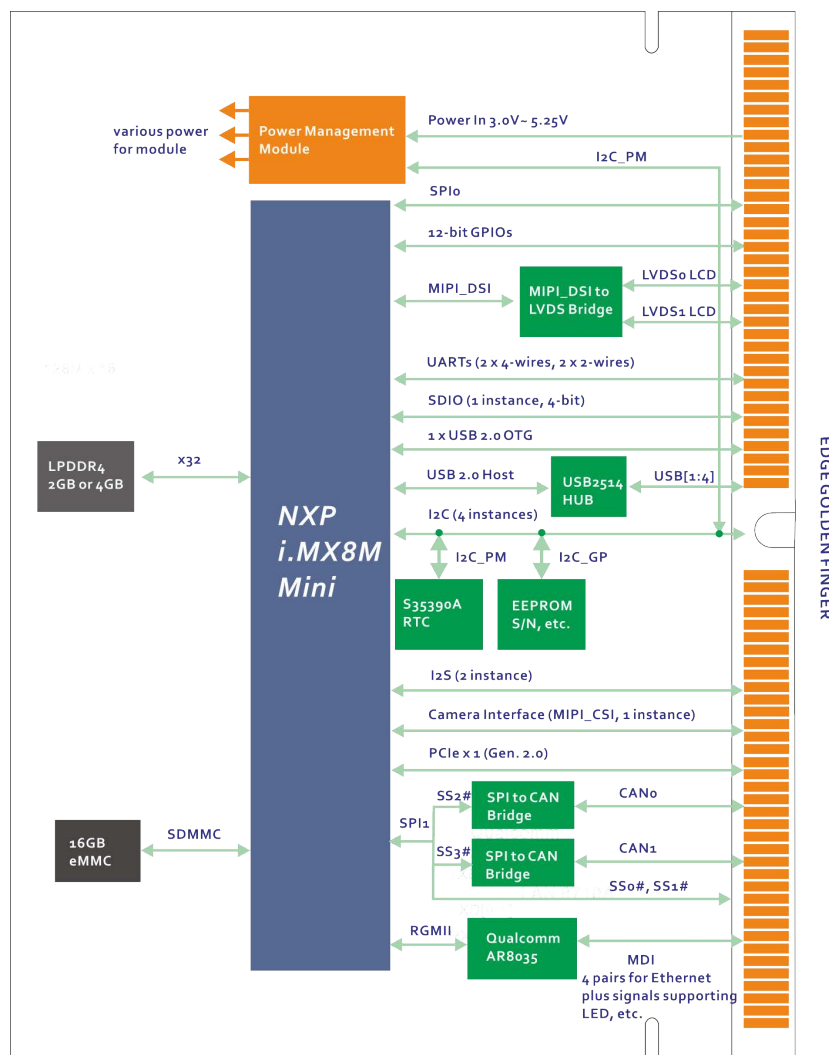

Details for this diagram will be explained in the following chapters.

1.4 Software Support / Hardware Abstraction

The Embedian *SMARC-iMX8MM* Module is supported by Embedian BSPs (Board Support Package). The first *SMARC-iMX8MM* BSP targets Linux (Ubuntu 18.04 LTS, Debian 9, Yocto Build) and Android Pie 9.0 support. BSPs for other operating systems are planned. Check with your Embedian contact for the latest BSPs.

This manual goes into a lot of detail on I/O particulars – information is provided on exactly how the various *SMARC* edge fingers tie into the NXP *i.MX8M Mini* SoC and to other Module hardware. This is provided for reference and context. Almost all of the I/O particulars are covered and abstracted in the BSP and it should generally not be necessary for users to deal with I/O at the register level.

1.5 Document and Standard References

1.5.1. External Industry Standard Documents

- **eMMC (Embedded Multi-Media Card)** the eMMC electrical standard is defined by JEDEC JESD84-B45 and the mechanical standard by JESD84-C44 (www.jedec.org).
- **The I2C Specification**, Version 2.1, January 2000, Philips Semiconductor (now NXP) (www.nxp.com).
- **I2S Bus Specification**, Feb. 1986 and Revised June 5, 1996, Philips Semiconductor (now NXP) (www.nxp.com).
- **JTAG (Joint Test Action Group)** defined by IEEE 1149.1-2001 - IEEE Standard Test Access Port and Boundary Scan Architecture (www.ieee.org).
- **MXM3 Graphics Module Mobile PCI Express Module Electromechanical Specification**, Version 3.0, Revision 1.1, © 2009 NVIDIA Corporation (www.mxm-sig.org).
- **PICMG® EEPROM Embedded EEPROM Specification**, Rev. 1.0, August 2010 (www.picmg.org).
- **SD Specifications Part 1 Physical Layer Simplified Specification**, Version 3.01, May 18, 2010, © 2010 SD Group and SD Card Association (Secure Digital) (www.sdcard.org).
- **SPI Bus** – “Serial Peripheral Interface” - de-facto serial interface standard defined by Motorola. A good description may be found on Wikipedia (http://en.wikipedia.org/wiki/Serial_Peripheral_Interface_Bus).
- **USB Specifications** (www.usb.org).
- **PCI Express Specifications** (www.pci-sig.org)
- **SPDIF (aka S/PDIF) (“Sony Philips Digital Interface”)**- IEC 60958-3
- **eSPI (“Enhanced Serial Peripheral Interface”)** The eSPI Interface Base Specification is defined by Intel (<https://downloadcenter.intel.com/de/download/22112>)
- **GBE MDI (“Gigabit Ethernet Medium Dependent Interface”)** defined by IEEE 802.3. The 1000Base-T operation over copper twisted pair cabling defined by IEEE 802.3ab (www.ieee.org).
- **RS-232 (EIA “Recommended Standard 232”)** this standard for asynchronous serial port data exchange dates from 1962. The original standard is hard to find. Many good descriptions of the standard can be

found on-line, e.g. at Wikipedia, and in text books.

- **CSI-2 (Camera Serial Interface version 2)** The CSI-2 standard is owned and maintained by the MIPI Alliance (“Mobile Industry Processor Interface Alliance”) (www.mipi.org).
- **CSI-3 (Camera Serial Interface version 3)** The CSI-3 standard is owned and maintained by the MIPI Alliance (“Mobile Industry Processor Alliance”) (www.mipi.org)
- **CAN (“Controller Area Network”)** Bus Standard – ISO 11898
- **DisplayPort and Embedded DisplayPort** These standards are owned and maintained by VESA (“Video Electronics Standards Association”) (www.vesa.org)

1.5.2. SGET Documents

- **SMARC_Hardware_Specification_V200**, version 2.0, June 2nd, 2016.
- **SMARC_Hardware_Specification_V1p1**, version 1.1, May 29, 2014.

1.5.3. Embedian Documents

The following documents are listed for reference. The Module schematic is not usually available outside of Embedian, without special permission. The other schematics will be available. Contact your Embedian representative for more information. The SMARC Evaluation Carrier Board Schematic is particularly useful as an example of the implementation of various interfaces on a Carrier board.

- **SMARC Evaluation Carrier Board Schematic**, PDF and OrCAD format
- **SMARC Evaluation Carrier Board User’s Manual**
- **SMARC-iMX8MM User’s Manual**
- **PinMux file for SMARC-iMX8MM**
- **SMARC-iMX8MM Schematic Checklist**

1.5.4. NXP Documents

- ***IMX8MMRM, i.MX 8M Mini Applications Processor Reference Manual, Aug 27th, 2019 (rev. 2)***
- ***IMX8MMIEC, i.MX 8M Mini Applications Processor Datasheet for Industrial Products, April 25, 2019 (rev. 0.2)***
- ***IMX8MMCEC, i.MX 8M Mini Applications Processor Datasheet for Consumer Products, April 24, 2019 (rev. 0.2)***
- ***IMX8MMHDG, i.MX 8M Mini Hardware Developer's Guide, Aug. 13. 2019 (rev. 1)***
- ***AN12410, i.MX 8M Mini Power Consumption Measurement, April 14, 2019 (rev. 0)***

1.5.5. NXP Development Tools

- ***IOMUX_TOOL v5 for ARM® i.MX8M Mini Microprocessors***

1.5.6. NXP Software Documents

- ***Linux 4.14.98_2.0.0_ga***
- ***Android P9.0.0_2.0.0_ga Documentation***

1.5.7. Embedian Software Documents

- ***Embedian Linux BSP for SMARC-iMX8MM Module***
- ***Embedian Android BSP for SMARC-iMX8MM Module***
- ***Embedian Linux BSP User's Guide***
- ***Embedian Android BSP User's Guide***

1.5.8. NXP Design Network

- ***SABRE***
- ***Wandboard***
- ***Nucleus***
- ***QNX***

Chapter 2

Specifications

This Chapter provides *SMARC-iMX8MM* specifications.

Section include :

- *SMARC-iMX8MM* General Functions
- *SMARC-iMX8MM* Debug
- Mechanical Specifications
- Electrical Specification
- Environment Specification

Chapter 2 Specifications

2.1 SMARC-iMX8MM General Functions

2.1.1. SMARC-iMX8MM Feature Set

This section lists the complete feature set supported by the SMARC-iMX8MM module.

SMARC Feature Specification	SMARC 2.0 Specification Maximum Number Possible	SMARC-iMX8MM Feature Support	SMARC-iMX8MM Feature Support Instances
LVDS LCD Display Support	1	Yes	1 (dual channel) ^{Note1}
DP/eDP	1	No	N/A
HDMI Display Support	1	No	N/A
Serial Camera Support	2	Yes	1 (4-lanes)
USB Interface	6	Yes	5 (1 x USB 2.0 OTG, 4 x USB 2.0)
PCIe Interface	4	Yes	1 (x1 Gen 2.0)
SATA Interface	1	No	N/A
GbE Interface	1	Yes	1
2nd GBE Interface	1	No	N/A
SDIO Interface (4bit)	1	Yes	1
SPI Interface	2	Yes	2
I2S Interface	2	Yes	2
I2C Interface	6	Yes	4
Serial	4	Yes	4

<i>SMARC Feature Specification</i>	<i>SMARC 2.0 Specification Maximum Number Possible</i>	<i>SMARC-iMX8MM Feature Support</i>	<i>SMARC-iMX8MM Feature Support Instances</i>
CAN	2	Yes	2
VDDIO	1.8V	1.8V	1.8V

Note:

1. Dual channel LVDS interface: 2 x 18 bpp OR 2 x 24 bpp (up to 1,920 × 1,200 @60 fps at 24 bpp). Default configuration is single channel 24-bit. To change this configuration, users need to send i2c command to *SN65DSI84 MIPI_DSI* to *LVDS* bridge. Please refer to Embedian official BSP release.

2.1.2. Form Factor

The *SMARC-iMX8MM* module complies with the *SMARC* General Specification module size requirements in an 82mm x 50mm form factor.

2.1.3. CPU

The SMARC-iMX8MM implements NXP's i.MX8M Mini ARM processor.

NXP CPU	i.MX8MM Dual Lite	i.MX8MM Dual	i.MX8MM Quad Lite	i.MX8MM Quad
ARM Cores ^{Not 1}	2x 1.8GHz Cortex-A53	2x 1.8GHz Cortex-A53	4x 1.8GHz Cortex-A53	4x 1.8GHz Cortex-A53
ARM Cores	1x Cortex-M4F	1x Cortex-M4F	1x Cortex-M4F	1x Cortex-M4F
Memory Speed	LPDDR4-3200	LPDDR4-3200	LPDDR4-3200	LPDDR4-3200
L2 Cache	512KB L2	512KB L2	512KB L2	512KB L2
GPU	GCNanoUltra 3D, GC320 2D 1 shaders OpenGL ES 2.0, and OpenVG 1.1	GCNanoUltra 3D, GC320 2D 1 shaders OpenGL ES 2.0, and OpenVG 1.1	GCNanoUltra 3D, GC320 2D 1 shaders OpenGL ES 2.0, and OpenVG 1.1	GCNanoUltra 3D, GC320 2D 1 shaders OpenGL ES 2.0, and OpenVG 1.1
VPU	NO VPU	1080p60 HEVC/H.265, AVC/H.264, VP9, VP8 Decoder 1080p60 AVC/H.264, VP8 Encoder	NO VPU	1080p60 HEVC/H.265, AVC/H.264, VP9, VP8 Decoder 1080p60 AVC/H.264, VP8 Encoder

Note:

1. For industrial temp. boards, the clocking speed is only up to 1.6GHz.
2. The only difference for *Quad/Dual Lite* core is that this processor does not have VPU.

2.1.4. Onboard Storage

The *SMARC-iMX8MM* module supports a 16GB eMMC flash memory device, and a 32Kb I2C serial *EEPROM* on the Module *I2C_GP* (I2C3) bus. The device used is an On Semiconductor 24C32 equivalent. The Module serial EEPROM is intended to retain Module parameter information, including a module part number, revision number and serial number. The Module serial EEPROM data structure conforms to the PICMG® EEPROM Embedded *EEPROM* Specification.). The onboard 16GB eMMC flash is used as boot media and operating systems. The module will always boot up from the onboard eMMC flash first. The firmware in eMMC flash will read the *BOOT_SEL* configuration from the boot selection and boot up the devices from that selected.

2.1.5. Clocks

A 24 MHz oscillator is used as the primary clock source for the PLLs to generate the clock for CPU, BUS, and high-speed interfaces. For fractional PLLs, the 24 MHz clock from the oscillator can be directly used as the PLL reference clock.

A 32.768 KHz clock is required for the *i.MX8M Mini* CPU RTC (Real Time Clock) and external (S-35390A) RTC.

A 24Mhz crystal is used on on-module *USB2514* USB hub.

A 27 MHz *HCSL* oscillator is used as the reference clock for *PCIe clock generator*.

The Qualcomm AR8035 PHY, *PCIe HCSL* clock generator and Microchip CAN controllers are provided with a 25 MHz clock using a crystal in normal oscillation mode.

2.1.6 LVDS Interface

The *SMARC-iMX8MM* implements two 18 / 24 bit single channel LVDS output streams that are defined in SMARC 2.0 edge connector for the Primary displays from *i.MX8M Mini MIPI_DSI* interface. They can also be configured as an 18 / 24 bit dual-channel LVDS directly out of the *SMARC Module*.

The *LVDS LCD* signals found on the *SMARC-i.MX8MM* offers two LVDS channels, with resolutions up to 1,920 × 1,200 @60 fps at 24 bpp. They are generated from *MIPI_DSI* signals from the *NXP® i.MX8MM* Cortex A53 processor passing through a TI *SN65DSI84 MIPI® DSI Bridge To FLATLINK™* LVDS. Each channel consists of one clock pair and four data pairs. The *LVDS* signals support the flow of *MIPI DSI* data from the *i.MX8MM* CPU to external display devices through LVDS interface.

The LVDS ports support the following configurations:

- One single channel output
- One dual channel output: single input split to two output channels

Note:

1. The I2C slave address of *SN65DSI84* is 0x2C.
2. The *LVDS* interface can be used either as a single channel or as a dual channel. The default LVDS configuration is 24-bit single channel LVDS. To change this configuration, user need to change 0x18 register bit [2:4]. Please refer to *Embedian* BSP official release for details.

The following figure shows the *LVDS LCD* block diagram.

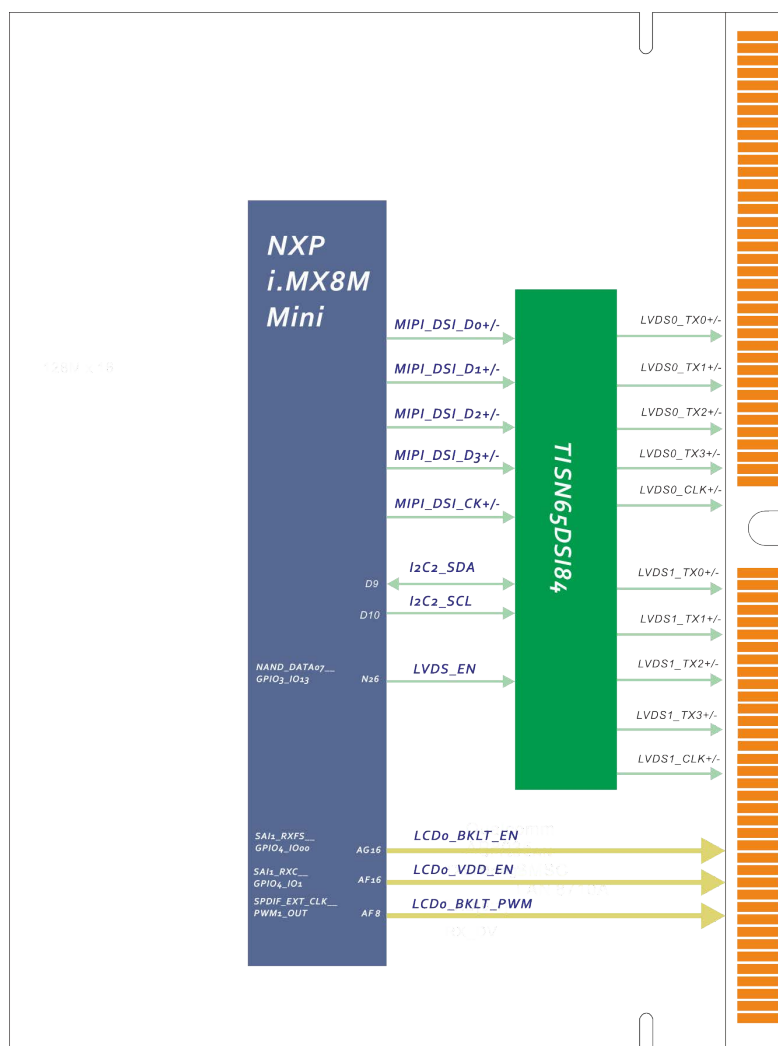


Figure 2: SMARC-iMX8MM LVDS LCD Diagram

2.1.6.1 LVDS channel select

SMARC-iMX8MM LVDS LCD interface can be configured as an 18-bit/24-bit single-channel *LVDS* output or a dual-channel *LVDS* output by accessing TI *SN65DSI84* 0x18 register via *I2C_GP* bus. The default configuration from software is 24-bit single-channel *LVDS*. User can refer to Embedian official u-boot release and *SN65DSI84* datasheet to figure out how to change to different configuration.

2.1.6.2 LVDS Signals Data Flow

i.MX8M Mini processor and TI SN65DSI84 implementation is shown in the following table:

NXP i.MX8M Mini CPU			TI SN65DSI84		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
A11	ALT0	MIPI_DSI_CLK_N__ MIPI_DSI_CLK_N	J5	DACN	MIPI_DSI_CLK-	
B11	ALT0	MIPI_DSI_CLK_P__ MIPI_DSI_CLK_P	H5	DACP	MIPI_DSI_CLK+	
A9	ALT0	MIPI_DSI_D0_N__ MIPI_DSI_D0_N	J3	DA0N	MIPI_DSI_D0-	
B9	ALT0	MIPI_DSI_D0_P__ MIPI_DSI_D0_P	H3	DA0P	MIPI_DSI_D0+	
A10	ALT0	MIPI_DSI_D1_N__ MIPI_DSI_D1_N	J4	DA1N	MIPI_DSI_D1-	
B10	ALT0	MIPI_DSI_D1_P__ MIPI_DSI_D1_P	H4	DA1P	MIPI_DSI_D1+	
A12	ALT0	MIPI_DSI_D2_N__ MIPI_DSI_D2_N	J6	DA2N	MIPI_DSI_D2-	
B12	ALT0	MIPI_DSI_D2_P__ MIPI_DSI_D2_P	H6	DA2P	MIPI_DSI_D2+	
A13	ALT0	MIPI_DSI_D3_N__ MIPI_DSI_D3_N	J7	DA3N	MIPI_DSI_D3-	
B13	ALT0	MIPI_DSI_D3_P__ MIPI_DSI_D3_P	H7	DA3P	MIPI_DSI_D3+	
N26	ALT5	NAND_DATA07__ GPIO3_IO13	B1	EN	LVDS_EN	

The path from *TI SN65DSI84* to the golden finger edge connector is show in the following table.

TI SN65DSI84		Golden Finger Edge Connector		Net Names	Note
Pin	Pin Name	Pin#	Pin Name		
SN65DSI84, ChannelA (Default)					
C8	A_Y0P	S125	LVDS0_0+/ eDP0_TX0+/ DSI0_D0+	LVDS0_0+	LVDS0 LCD data channel differential pairs 1
C9	A_Y0N	S126	LVDS0_0-/ eDP0_TX0-/ DSI0_D0-	LVDS0_0-	
D8	A_Y1P	S128	LVDS0_1+/ eDP0_TX1+/ DSI0_D1+	LVDS0_1+	LVDS0 LCD data channel differential pairs 2
D9	A_Y1N	S129	LVDS0_1-/ eDP0_TX1-/ DSI0_D1-	LVDS0_1-	
E8	A_Y2P	S131	LVDS0_2+/ eDP0_TX2+/ DSI0_D2+	LVDS0_2+	LVDS0 LCD data channel differential pairs 3
E9	A_Y2N	S132	LVDS0_2-/ eDP0_TX2-/ DSI0_D2-	LVDS0_2-	
F8	A_CLKP	S134	LVDS0_CLK+/ eDP0_AUX+/ DSI0_CLK+	LVDS0_CLK+	LVDS0 LCD differential clock pairs
F9	A_CLKN	S135	LVDS0_CLK-/ eDP0_AUX-/ DSI0_CLK-	LVDS0_CLK-	
G8	A_Y3P	S137	LVDS0_3+/ eDP0_TX3+/ DSI0_D3+	LVDS0_3+	LVDS0 LCD data channel differential pairs 4
G9	A_Y3N	S138	LVDS0_3-/ eDP0_TX3-/ DSI0_D3-	LVDS0_3-	

TI SN65DSI84		Golden Finger Edge Connector		Net Names	Note
Pin	Pin Name	Pin#	Pin Name		
SN65DSI84 ChannelB					
B6	B_CLKP	S108	LVDS1_CK+/ eDP1_AUX+/ DSI1_CLK+	LVDS1_CK+	LVDS1 LCD differential clock pairs
A6	B_CLKN	S109	LVDS1_CK-/ eDP1_AUX-/ DSI1_CLK-	LVDS1_CK-	
B3	B_Y0P	S111	LVDS1_0+/ eDP1_TX0+/ DSI1_D0+	LVDS1_0+	LVDS1 LCD data channel differential pairs 1
A3	B_Y0N	S112	LVDS1_0-/ eDP1_TX0-/ DSI1_D0-	LVDS1_0-	
B4	B_Y1P	S114	LVDS1_1+/ eDP1_TX1+/ DSI1_D1+	LVDS1_1+	LVDS1 LCD data channel differential pairs 2
A4	B_Y1N	S115	LVDS1_1-/ eDP1_TX1-/ DSI1_D1-	LVDS1_1-	
B5	B_Y2P	S117	LVDS1_2+/ eDP1_TX2+/ DSI1_D2+	LVDS1_2+	LVDS1 LCD data channel differential pairs 3
A5	B_Y2N	S118	LVDS1_2-/ eDP1_TX2-/ DSI1_D2-	LVDS1_2-	
B7	B_Y3P	S120	LVDS1_3+/ eDP1_TX3+/ DSI1_D3+	LVDS1_3+	LVDS1 LCD data channel differential pairs 4
A7	B_Y3N	S121	LVDS1_3-/ eDP1_TX3-/ DSI1_D3-	LVDS1_3-	

A 24 bit dual channel LVDS implementation comprises 10 differential pairs: 4 pairs for odd pixel and control data; 1 pair for the LVDS clock for the odd data; 4 pairs for the even pixel data and control data, and 1 pair for the even LVDS clock. To use the dual channel LVDS mode, you need a display supporting the dual channel LVDS mode in order to receive odd and even pixel data.

2.1.6.3 Other LCD Control Signals

The signals in the table below support the *LVDS LCD* interfaces (as these are created from the same *i.MX8M Mini* source).

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
<i>LCD0_VDD_EN</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>High enables panel VDD</i>
<i>LCD0_BKLT_EN</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>High enables panel backlight</i>
<i>LCD0_BKLT_PWM</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>Display backlight PWM control</i>
<i>I2C_LCD_DAT</i>	<i>Bi-Dir OD</i>	<i>CMOS 1.8V</i>	<i>I2C data – to read LCD display EDID EEPROMs</i>
<i>I2C_LCD_CK</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>I2C clock – to read LCD display EDID EEPROMs</i>

Below list *LCD* control signals that mapping to *CPU* iomux and *SMARC* edge connector.

<i>NXP i.MX8M Mini CPU</i>			<i>SMARC-iMX8MM Edge Golden Finger</i>		<i>Net Names</i>	<i>Note</i>
<i>Ball</i>	<i>Mode</i>	<i>Pin Name</i>	<i>Pin#</i>	<i>Pin Name</i>		
AG16	ALT5	SAI1_RXFS__ GPIO4_IO0	S127	LCD0_BKLT_EN	LCD_ BKLT_EN	High enables panel backlight
AF16	ALT5	SAI1_RXC__ GPIO4_IO1	S133	LCD0_VDD_EN	LCD_ VDD_EN	High enables panel VDD
AF8	ALT1	SPDIF_EXT_CLK__ PWM1_OUT	S141	LCD0_BKLT_PWM	LCD0_ BKLT_ PWM	Display backlight PWM control
D10	ALT0	I2C2_SCL__ I2C2_SCL	S5/ S139	I2C_LCD_CK	I2C_ LCD_CK	I2C data – to read LCD display EDID EEPROMs
D9	ALT0	I2C2_SDA__ I2C2_SDA	S7/ S140	I2C_LCK_DAT	I2C_ LCD_DAT	I2C data – to read LCD display EDID EEPROMs

2.1.7 USB Interface

The *Embedian SMARC-iMX8MM* module supports five *USB 2.0* ports (*USB 0:4*). A Microchip *USB2514* is used to expand four *USB 2.0* ports from *i.MX8M Mini USB2 2.0* Host Port. Per the *SMARC* specification, the module supports a *USB “On-The-Go” (OTG)* port capable of functioning either as a client or host device, on the *SMARC USB0* port.

The following figure shows the *USB 0:4 (USB2.0)* block diagram.

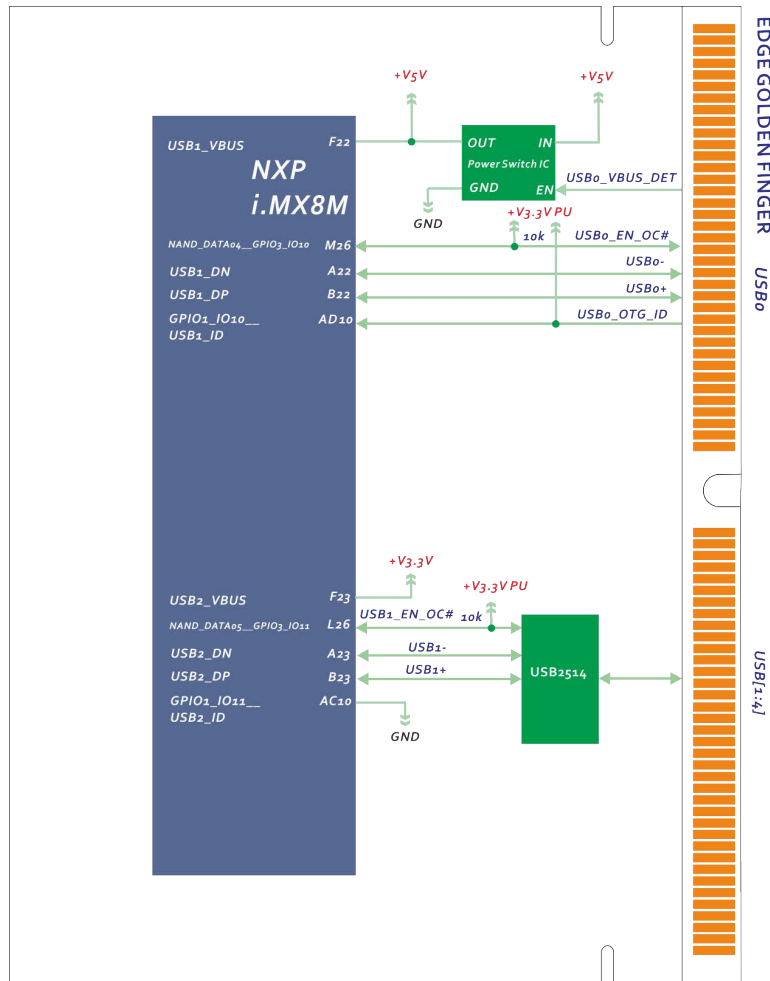


Figure 3. USB0 and USB1 Block Diagram

USB interface signals are exposed on the *SMARC-iMX8MM* edge connector as shown below:

<i>NXP i.MX8M Mini CPU</i>			<i>SMARC-iMX8MM Edge Golden Finger</i>		<i>Net Names</i>	<i>Note</i>
<i>Ball</i>	<i>Mode</i>	<i>Pin Name</i>	<i>Pin#</i>	<i>Pin Name</i>		
<i>USB0 Port (USB 2.0 OTG)</i>						
<i>B22</i>		<i>USB1_DP</i>	<i>P60</i>	<i>USB0+</i>	<i>USB0+</i>	<i>USB0 data pair</i>
<i>A22</i>		<i>USB1_DN</i>	<i>P61</i>	<i>USB0-</i>	<i>USB0-</i>	
<i>M26</i>	<i>ALT5</i>	<i>NAND_DATA04__ GPIO3_IO10</i>	<i>P62</i>	<i>USB0_EN_OC#</i>	<i>USB0_EN_OC#</i>	<i>USB0 power enable/over current indication signal</i>
<i>F22</i>		<i>Turn on USB_OTG_VBUS</i>	<i>P63</i>	<i>USB0_VBUS_ DET</i>	<i>USB0_VBUS_ DET</i>	<i>USB0 host power detection, when this port is used as a device.</i>
<i>AD10</i>		<i>GPIO1_IO10__ USB1_ID</i>	<i>P64</i>	<i>USB0_OTG_ID</i>	<i>USB0_OTG_ID</i>	<i>USB0 OTG ID input, active high</i>

NXP i.MX8M Mini CPU			SMARC-iMX8MM Edge Golden Finger		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
USB[1:4] Port (USB 2.0 Host)						
			P65	USB1+	USB1+	USB_DN3 of USB2514
			P66	USB1-	USB1-	
L26	ALT5	NAND_DATA05__GPIO3_IO11			VBUS_DET#	USB2514 HUB VBUS Detect
From USB2514			P67	USB1_EN_OC#	USB1_EN_OC#	USB1 power enable/over current indication signal
			P69	USB2+	USB2+	USB_DN1 of USB2514
			P70	USB2-	USB2-	
From USB2514			P71	USB2_EN_OC#	USB2_EN_OC#	USB2 power enable/over current indication signal
			S68	USB3+	USB3+	USB_DN2 of USB2514
			S69	USB3-	USB3-	
From USB2514			P74	USB3_EN_OC#	USB3_EN_OC#	USB3 power enable/over current indication signal
			S35	USB4+		USB_DN4 of USB2514
			S36	USB4-		
From USB2514			P76	USB4_EN_OC#	USB4_EN_OC#	USB4 power enable/over current indication signal

Note:

1. If using *USB Type-C* connector, a *PTN5110* cc logic needs to be added in your carrier board. Please refer to *i.MX8M Mini* evaluation board. The *USB Type-C* specification describes how the *USB* device uses pull-down/pull-up resistors on configuration channel pins to signify that it is a device or host.

2.1.7.1 USB Signals

The table below shows the USB related signals.

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
<i>USB[0:4]+</i>	<i>Bi-Dir</i>	<i>USB</i>	<i>Differential US 2.0 Data Pair</i>
<i>USB[0:4]-</i>			
<i>USB[0:4]_EN_OC#</i>	<i>Bi-Dir</i>	<i>CMOS</i>	<i>Pulled low by Module OD driver to disable USB0 power.</i>
	<i>OD</i>	<i>3.3V</i>	<i>Pulled low by Carrier OD driver to indicate over-current situation.</i>
			<i>A 10k pull-up is present on the Module to a 3.3V rail. The pull-up rail may be switched off to conserve power if the USB port is not in use. Further details may be found in Section 2.1.8.2 USBx_EN_OC# Discussion below.</i>
<i>USB0_VBUS_DET</i>	<i>Input</i>	<i>USB VBUS 5V</i>	<i>USB host power detection, when this port is used as a device.</i>
<i>USB1_VBUS_DET</i>			
<i>USB0_OTG_ID</i>	<i>Input</i>	<i>CMOS</i>	<i>USB OTG ID input, active high.</i>
		<i>3.3V</i>	

2.1.7.2 USB[0:3]_EN_OC# Discussion

The Module *USB[0:3]_EN_OC#* pins are multi-function Module pins, with a *10k* pull-up to a 3.3V rail on the Module, an OD driver on the Module, and, if the OC# (over-current) monitoring function is implemented on the Carrier, an OD driver on the Carrier. The use is as follows:

- 1) On the Carrier board, for external plug-in *USB* peripherals (*USB* memory sticks, cameras, keyboards, mice, etc.) *USB* power distribution is typically handled by *USB* power switches such as the Texas Instruments *TPS2052B* or the *Micrel MIC2026-1* or similar devices. The Carrier implementation is more straightforward if the Carrier *USB* power switches have active-high power enables and active low open drain *OC#* outputs (as the *TI* and *Micrel* devices referenced do). The *USB* power switch Enable and *OC#* pins for a given *USB* channel are tied together on the Carrier. The *USB* power switch enable pin must function with a low input current. The *TI* and *Micrel* devices referenced above require 1 microampere or less, at a 3.3V enable voltage level.
- 2) The Module drives *USB[0:3]_EN_OC#* low to disable the power delivery to the *USBx* device.
- 3) The Module floats *USB[0:3]_EN_OC#* to enable power delivery. The line is pulled to 3.3V by the Module pull-up, enabling the Carrier board *USB* power switch.
- 4) If there is a *USB* over-current condition, the Carrier board *USB* power switch drives the *USB[0:3]_EN_OC#* line low. This removes the over-current condition (by disabling the *USB* switch enable input), and allows Module software to detect the over-current condition.
- 5) The Module software should look for a falling edge interrupt on *USB[0:3]_EN_OC#*, while the port is enabled, to detect the *OC#* condition. The *OC#* condition will not last long, as the *USB* power switch is disabled when the switch IC detects the *OC#* condition.
- 6) If the *USB* power to the port is disabled (*USB[0:3]_EN_OC#* is driven low by the Module) then the Module software is aware that the port is disabled, and the low input value on the port does not indicate an over-current condition (because the port power is disabled).

Carrier Board *USB* peripherals that are not removable often do not make use of *USB* power switches with current limiting and over-current detection. It is usually deemed un-necessary for non-removable devices. In these cases, the

USB[0:3]_EN_OC# pins may be left unused, or they may be used as *USB[0:3]* power enables, without making use of the over-current detect Module input feature.

The *SMARC-iMX8MM* Module USB power enable and over current indication logic implementation is shown in the following block diagram. There are 10k pull-up resistors on the Module on the *SMARC USB[0:3]_EN_OC#* lines. Outputs driving the *USBx_EN_OC#* lines are open-drain. The Carrier board USB power switch, if present, is enabled by *USB[0:3]_EN_OC#* after a device connection is detected on the *DP/DM* lines.

The Enable pin on the Carrier board USB power switch must be active high and the Over-Current pin (*OC#*) must be open drain, active low (these are commonly available). No pull-up is required on the USB power switch Enable or *OC#* line on carrier board; they are tied together on the Carrier and fed to the Module *USB[0:3]_EN_OC#* pin.

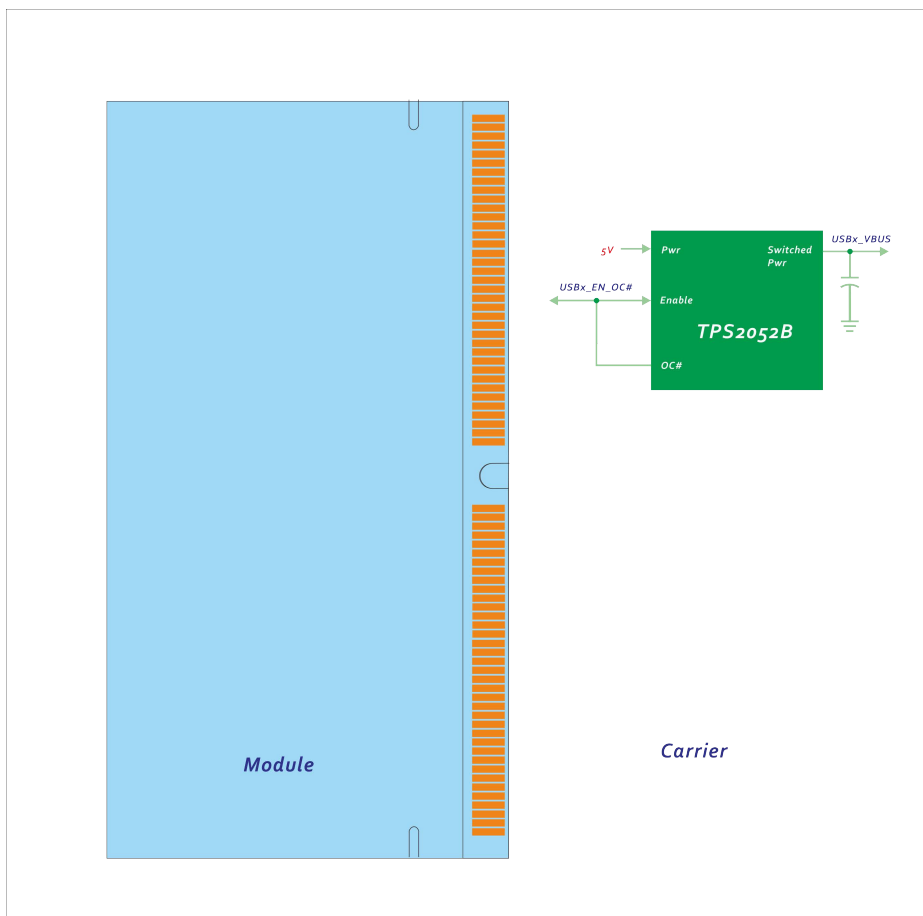


Figure 4. USB Power Distribution Implementation on Carrier

2.1.8. Gigabit Ethernet Controller (10/100/1000Mbps) Interface

The *SMARC-iMX8MM* module supports one Gigabit Ethernet (10/100/1000Mbps) interfaces. The Gigabit Ethernet controller interfaces are accomplished by using the low-power Qualcomm Atheros AR8035 physical layer (PHY) transceiver with variable I/O voltage that is compliant with the *IEEE 802.3-2005* standards. The *AR8035* supports communication with an Ethernet MAC via a standard *RGMII* interface.

The Ethernet interface consists of 4 pairs of low voltage differential pair signals designated from *GBE0_MDIO±* to *GBE0_MDI3±* plus control signals for link activity indicators. These signals can be used to connect to a 10/100/1000 BaseT RJ45 connector with integrated or external isolation magnetics on the carrier board.

This is diagrammed below.

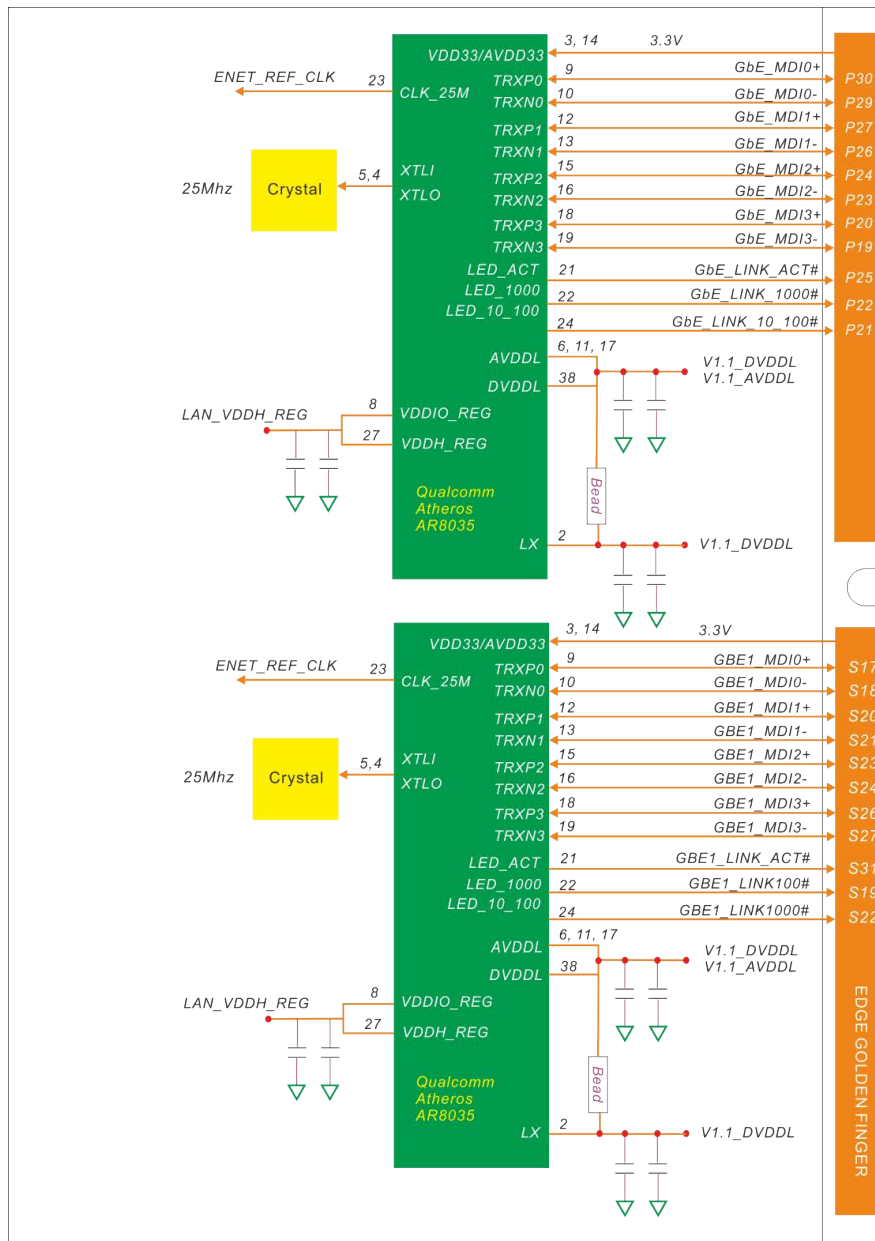


Figure 5: Gigabit Ethernet Connection from i.MX8M Mini to Qualcomm Atheros AR8035

i.MX8M Mini processor and Qualcomm Atheros AR8035 implementation is shown in the following table:

NXP i.MX8M Mini CPU			Qualcomm AR8035		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
Gigabit LAN						
AB27	ALT0	ENET_MDIO__ ENET1_MDIO	39	MDIO	ENET_MDIO	Serial Management Interface data input/output
AC27	ALT0	ENET_MDC__ ENET1_MDC	40	MDC	ENET_MDC	Serial Management Interface clock
AE27	ALT0	ENET_RD0__ ENET1_RGMII_RD0	29	RXD0	RMII_RD0	Bit 0 of the 4 data bits that are sent by the transceiver on the receive path.
AD27	ALT0	ENET_RD1__ ENET1RGMII_RD1	28	RXD1	RMII_RD1	Bit 1 of the 4 data bits that are sent by the transceiver on the receive path.
AD26	ALT0	ENET_RD2__ ENET1_RGMII_RD2	26	RXD2	RMII1_RD2	Bit 2 of the 4 data bits that are sent by the transceiver on the receive path.
AC26	ALT0	ENET_RD3__ ENET1_RGMII_RD3	25	RXD3	RGMII_RD3	Bit 3 of the 4 data bits that are sent by the transceiver on the receive path.
AE26	ALT0	ENET_RXC__ ENET1_RGMII_RXC	31	RX_CLK	RGMII_RXC	Reference clock
AF27	ALT0	ENET_RX_CTL__ ENET1_RGMII_RX_CTL	30	RX_DV	RGMII_RX_CTL	Indicates both the receive data valid (RXDV) and receive error (RXER) functions per the RGMII specification.

NXP i.MX8M Mini CPU			Qualcomm AR8035		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
Gigabit LAN						
AF24	ALT0	ENET_TX_CTL__ ENET1_RGMII_TX_CTL	32	TX_EN	RGMII_TX_CTL	Indicates that valid transmission data is present on TXD[3:0].
AG26	ALT0	ENET_TD0__ ENET1_RGMII_TD0	34	TXD0	RGMII_TD0	The MAC transmits data to the transceiver using this signal.
AF26	ALT0	ENET_TD1__ ENET1_RGMII_TD1	35	TXD1	RGMII_TD1	The MAC transmits data to the transceiver using this signal.
AG25	ALT0	ENET_TD2__ ENET1_RGMII_TD2	36	TXD2	RGMII_TD2	The MAC transmits data to the transceiver using this signal.
AF25	ALT0	ENET_TD3__ ENET1_RGMII_TD3	37	TXD3	RGMII_TD3	The MAC transmits data to the transceiver using this signal.
AG24	ALT0	ENET1_TXC__ ENET1_RGMII_TXC	33	GTX_CLK	RGMII_TXC	Used to latch data from the MAC into the PHY. 1000BASE-T: 125MHz 100BASE-TX: 25MHz 10BASE-T: 2.5MHz

The path from AR8035 to the golden finger edge connector is show in the following table.

Qualcomm AR8035		Golden Finger Edge Connector		Net Names	Note
Pin	Pin Name	Pin#	Pin Name		
AR8035 PHY					
9	TRXP0	P30	GbE_MDI0+	GBE_MDI0+	Differential Transmit/Receive Positive Channel 0
10	TRXN0	P29	GbE_MDI0-	GBE_MDI0-	Differential Transmit/Receive Negative Channel 0
		P28	GbE_CTREF	GBE_CTREF	Center tap reference voltage
12	TRXP1	P27	GbE_MDI1+	GBE_MDI1+	Differential Transmit/Receive Positive Channel 1
13	TRXN1	P26	GbE_MDI1-	GBE_MDI1-	Differential Transmit/Receive Negative Channel 1
15	TRXP2	P24	GbE_MDI2+	GBE_MDI2+	Differential Transmit/Receive Positive Channel 2
16	TRXN2	P23	GbE_MDI2-	GBE_MDI2-	Differential Transmit/Receive Negative Channel 2
18	TRXP3	P20	GbE_MDI3+	GBE_MDI3+	Differential Transmit/Receive Positive Channel 3
19	TRXN3	P19	GbE_MDI3-	GBE_MDI3-	Differential Transmit/Receive Negative Channel 3

Qualcomm AR8035		Golden Finger Edge Connector		Net Names	Note
Pin	Pin Name	Pin#	Pin Name		
AR8035 PHY					
21	LED_ACT	P25	GbE_LINK_ACT#	GBE_LINK_ACT#	Link / Activity Indication LED Driven low on Link (10, 100 or 1000 mbps) Blinks on Activity Could be able to sink 24mA or more Carrier LED current
24	LED_10_100	P21	GbE_LINK100#	GBE_LINK100#	Link Speed Indication LED for 100Mbps Could be able to sink 24mA or more Carrier LED current
22	LED_1000	P22	GbE_LINK1000#	GBE_LINK1000#	Link Speed Indication LED for 1000Mbps Could be able to sink 24mA or more Carrier LED current

2.1.8.1. Gigabit LAN Signals

The table below shows the Gigabit LAN related signals.

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
GBE_MDI0+ GBE_MDI0-	Bi-Dir	GBE_MDI	Bi-directional transmit/receive pair 0 to magnetics (Media Dependent Interface)
GBE_MDI1+ GBE_MDI1-	Bi-Dir	GBE_MDI	Bi-directional transmit/receive pair 1 to magnetics (Media Dependent Interface)
GBE_MDI2+ GBE_MDI2-	Bi-Dir	GBE_MDI	Bi-directional transmit/receive pair 2 to magnetics (Media Dependent Interface)
GBE_MDI3+ GBE_MDI3-	Bi-Dir	GBE_MDI	Bi-directional transmit/receive pair 3 to magnetics (Media Dependent Interface)
GBE_100#	Output OD	CMOS 3.3V	Link Speed Indication LED for 100Mbps Could be able to sink 24mA or more Carrier LED current
GBE_1000#	Output OD	CMOS 3.3V	Link Speed Indication LED for 1000Mbps Could be able to sink 24mA or more Carrier LED current
GBE_LINK_ACK#	Output OD	CMOS 3.3V	Link / Activity Indication LED Driven low on Link (10, 100 or 1000 mbps) Blinks on Activity Could be able to sink 24mA or more Carrier LED current
GBE_CTREF	Output	Reference Voltage	Center-Tap reference voltage for GBE0 Carrier board Ethernet magnetic (not required by the Module GBE PHY)

2.1.8.2. Suggested Magnetics

Listed below are suggested magnetics.

For normal temperature (0°C ~70°C) products.

<i>Vendor</i>	<i>P/N</i>	<i>Package</i>	<i>Cores</i>	<i>Temp</i>	<i>Configuration</i>
<i>Halo</i>	<i>HFJ11-1G02E</i>	<i>Integrated RJ45</i>	<i>8</i>	<i>0°C~70°C</i>	<i>HP Auto-MDIX</i>
<i>UDE</i>	<i>RB1-BA6BT9WA</i>	<i>Integrated RJ45</i>	<i>8</i>	<i>-40°C~85°C</i>	<i>HP Auto-MDIX</i>
<i>Halo</i>	<i>TG1G-S002NZRL</i>	<i>24-pin SOIC-W</i>	<i>8</i>	<i>0°C~70°C</i>	<i>HP Auto-MDIX</i>

For industrial temperature (-40°C ~85°C) products.

<i>Vendor</i>	<i>P/N</i>	<i>Package</i>	<i>Cores</i>	<i>Temp</i>	<i>Configuration</i>
<i>UDE</i>	<i>RB1-BA6BT9WA</i>	<i>Integrated RJ45</i>	<i>8</i>	<i>-40°C~85°C</i>	<i>HP Auto-MDIX</i>
<i>Halo</i>	<i>TG1G-E012NZRL</i>	<i>24-pin SOIC-W</i>	<i>8</i>	<i>-40°C~85°C</i>	<i>HP Auto-MDIX</i>

2.1.9. PCIe_A Interface

The *SMARC-iMX8MM* offers one *PCI Express x1* lanes. The *PCIe* signals are routed from the NXP® *i.MX8M Mini* processor to the *PCI Express* port A of the *SMARC-iMX8MM* edge finger. These signals support *PCI Express* Gen. 2.0 interfaces at 5 Gb/s and are backward compatible to Gen. 1.1 interfaces at 2.5 Gb/s. Diodes *PI6CFGL201B* clock generators are used on *PCIe_A* port to make *PCIe* reference clock *HCSL* signals.

The following figure shows the *PCIe* port A and B block diagram.

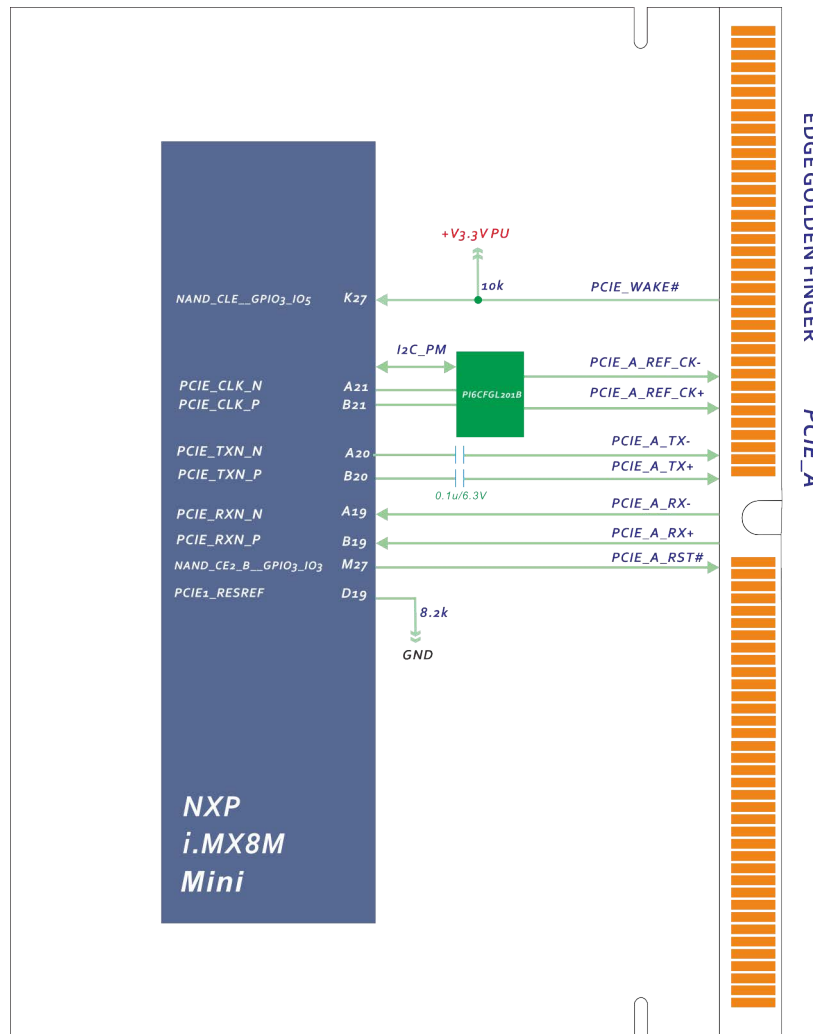


Figure 6. PCI Express Block Diagram

PCI Express interface signals are exposed on the SMARC-iMX8MM edge connector as shown below:

NXP i.MX8M Mini CPU			SMARC-iMX8MM Edge Golden Finger		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
K27	ALT5	NAND_CLE__ GPIO3_IO5	S146	PCIE_WAKE#	PCIE_WAKE#	PCIe wake up interrupt to host
PCI Express Port A						
M27	ALT5	NAND_CE2_B__ GPIO3_IO3	P75	PCIE_A_RST#	PCIE_A_RST#	Reset Signal for external devices.
B21		PCIE_CLK_P	P83	PCIE_A_REFCK+	PCIE_A_REFCK+	Differential PCI Express Reference Clock Signals for Lanes A
A21		PCIE_CLK_N	P84	PCIE_A_REFCK-	PCIE_A_REFCK-	
B19		PCIE_RXN_P	P86	PCIE_A_RX+	PCIE_A_RX+	Differential PCIe Link A receive data pair 0
A19		PCIE_RXN_N	P87	PCIE_A_RX-	PCIE_A_RX-	
B20		PCIE_TXN_P	P89	PCIE_A_TX+	PCIE_A_TX+	Differential PCIe Link A transmit data pair 0
A20		PCIE_TXN_N	P90	PCIE_A_TX-	PCIE_A_TX-	

2.1.9.1. PCIe_Link Signals

The table below shows the *PCIe_Link A* related signals.

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
<i>PCI Express Port A</i>			
<i>PCIE_A_TX+ PCIE_A_TX-</i>	<i>Output</i>	<i>HCSL PCIe</i>	<i>Differential PCIe Link A transmit data pair 0 Series coupling caps is on the Module Caps is 0402 package 0.1uF</i>
<i>PCIE_A_RX+ PCIE_A_RX-</i>	<i>Input</i>	<i>HCSL PCIe</i>	<i>Differential PCIe Link A receive data pair 0 No coupling caps on Module</i>
<i>PCIE_A_REFCK+ PCIE_A_REFCK-</i>	<i>Output</i>	<i>HCSL PCIe</i>	<i>Differential PCIe Link A reference clock output DC coupled</i>
<i>PCIE_A_RST#</i>	<i>Output</i>	<i>CMOS 3.3V</i>	<i>PCIe Port A reset output</i>

2.1.9.2. PCIe Wake Signals

The table below shows the *PCIe Wake* signal.

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
<i>PCIE_WAKE#</i>	<i>Input</i>	<i>CMOS 3.3V</i>	<i>PCIe wake up interrupt to host – common to PCIe links A, B, C – pulled up or terminated on Module</i>

2.1.10. MIPI/CMOS Serial Camera Interface (MIPI_CSI)

The *NXP® i.MX8M Mini* provides connectivity to cameras via the *MIPI/CSI-2* transmitter and maintains image manipulation and processing with adequate synchronization and control. The Camera Serial Interface (CSI) controls the camera port and provides interface to an image sensor or a related device. The role of the camera ports is to receive input from video sources and to provide support for time-sensitive signals to the camera. Non-time-sensitive controls such as configuration, reset are performed by the ARM platform through I2C interface or GPIO signals.

The *SMARC* specification defines serial and parallel camera interface on the same pins. We can either implement it as serial or parallel camera interfaces. The camera interface on *SMARC-iMX8MM* is designed as serial interfaces on *CSI1* pin groups that can support 4 lanes providing an interface between the system and the *MIPI D-PHY*, allowing communication with an *MIPI CSI-2* compliant camera sensor.

The 4-lane *MIPI-CSI2* supports 5M pixel at 15 fps, 1080p30, 720p60, VGA at 60 fps o Maximum bit rate of 1.5 Gbp.

The following figure shows the serial camera interface block diagram.

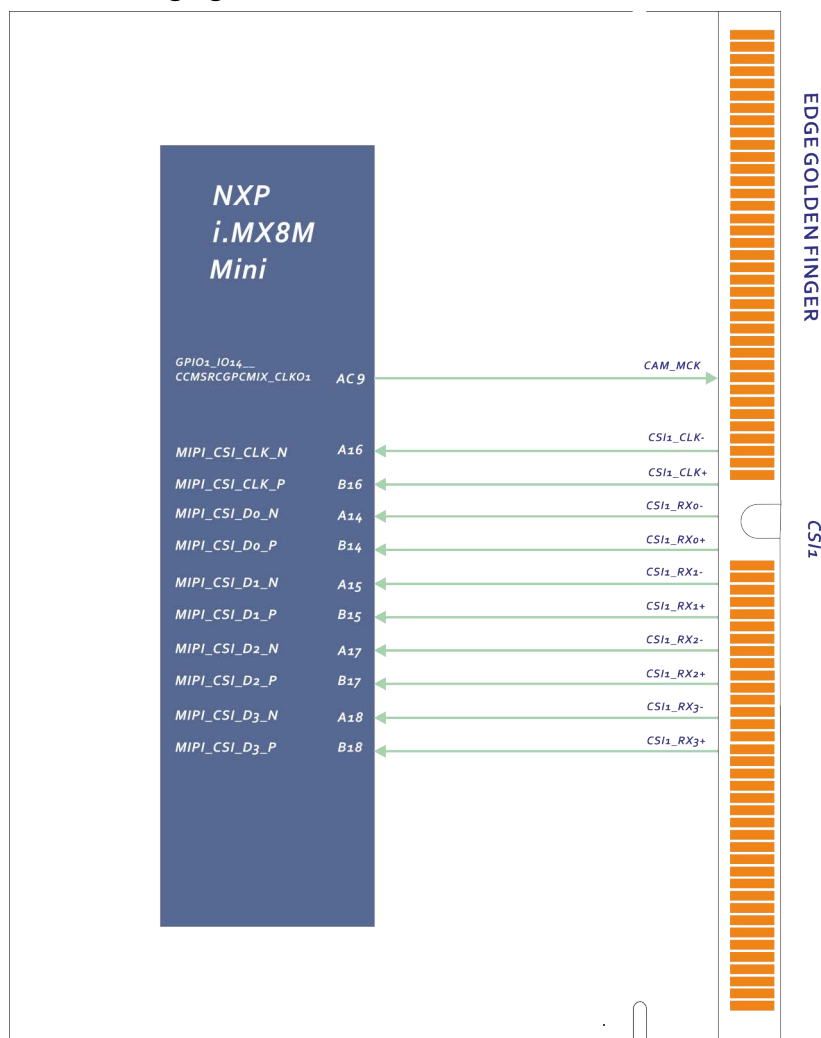


Figure 7. MIPI/Serial Camera Interface Block Diagram

MIPI/Serial Camera interface signals are exposed on the *SMARC-iMX8MM* edge connector as shown below:

<i>NXP i.MX8M Mini CPU</i>			<i>SMARC-iMX8MM Edge Golden Finger</i>		<i>Net Names</i>	<i>Note</i>
<i>Ball</i>	<i>Mode</i>	<i>Pin Name</i>	<i>Pin#</i>	<i>Pin Name</i>		
A16	ALT0	MIPI_CSI_CLK_N	P4	CSI1_CK-	CSI1_CK-	CSI1 differential clock inputs
B16	ALT0	MIPI_CSI_CLK_P	P3	CSI1_CK+	CSI1_CK+	
A14	ALT0	MIPI_CSI_D0_N	P8	CSI1_RX0-	CSI1_D0-	CSI1 differential data inputs
B14	ALT0	MIPI_CSI_D0_P	P7	CSI1_RX0+	CSI1_D0+	
A15	ALT0	MIPI_CSI_D1_N	P11	CSI1_RX1-	CSI1_D1-	
B15	ALT0	MIPI_CSI_D1_P	P10	CSI1_RX1+	CSI1_D1+	
A17	ALT0	MIPI_CSI_D2_N	P14	CSI1_RX2-	CSI1_D2-	
B17	ALT0	MIPI_CSI_D2_P	P13	CSI1_RX2+	CSI1_D2+	
A18	ALT0	MIPI_CSI_D3_N	P17	CSI1_RX3-	CSI1_D3-	
B18	ALT0	MIPI_CSI_D3_P	P16	CSI1_RX3+	CSI1_D3+	

2.1.10.1. Camera I2C Support

The I2C_CAM0/1 port is intended to support serial and parallel cameras. Most contemporary cameras with I2C support allow a choice of two I2C address ranges.

NXP i.MX8M Mini CPU			SMARC-iMX8MM Edge Golden Finger		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
I2C_CAM0						
D10	ALT0	I2C2_SCL__ I2C2_SCL	S5	CSI0_TX+/ I2C_CAM0_CK	I2C_CAM0_CK	
D9	ALT0	I2C2_SDA__ I2C2_SDA	S7	CSI0_TX-/ I2C_CAM0_DAT	I2C_CAM0_DAT	
I2C_CAM1						
D13	ALT0	I2C4_SCL__ I2C4_SCL	S1	I2C_CAM1_CK	I2C_CAM1_CK	
E13	ALT0	I2C4_SDA__ I2C4_SDA	S2	I2C_CAM1_DAT	I2C_CAM1_DAT	
CSI Clock Output						
AC9	ALT6	GPIO1_IO14__ CCMSRCGPCMIX_ CLKO1	S6	CAM_MCK	CAM_MCK	

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
I2C_CAM0			
I2C_CAM0_DAT	Bi-Dir OD	CMOS 1.8V	Serial camera support link - I2C data
I2C_CAM0_CK	Bi-Dir OD	CMOS 1.8V	Serial camera support link - I2C clock
I2C_CAM1			
I2C_CAM1_DAT	Bi-Dir OD	CMOS 1.8V	Serial camera support link - I2C data
I2C_CAM1_CK	Bi-Dir OD	CMOS 1.8V	Serial camera support link - I2C clock

2.1.10.2. MIPI Serial Camera In – MIPI CSI1

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
MIPI_CSI1_D[0:3]+ MIPI_CSI1_D[0:3]-	Input	LVDS D-PHY	CSI1 differential data inputs
MIPI_CSI1_CK+ MIPI_CSI1_CK-	Input	LVDS D-PHY	CSI1 differential clock inputs
CAM_MCK	Output	CMOS 1.8V	Master clock output for CSI1 camera support

2.1.11 SD/SDMMC Interface

SMARC-iMX8MM is configured to support two MMC controllers. One is used for on-module 8-bit *eMMC* support, and the other one is used for external *SDHC/SDIO* interface. The *SMARC-iMX8MM* module supports one 4-bit *SDIO* interface, per the *SMARC* 2.0 specification. The *SDIO* interface uses 3.3V signaling, per the *SMARC* spec and for compatibility with commonly available *SDIO* cards.

The following figure shows the *SDIO* block diagram.

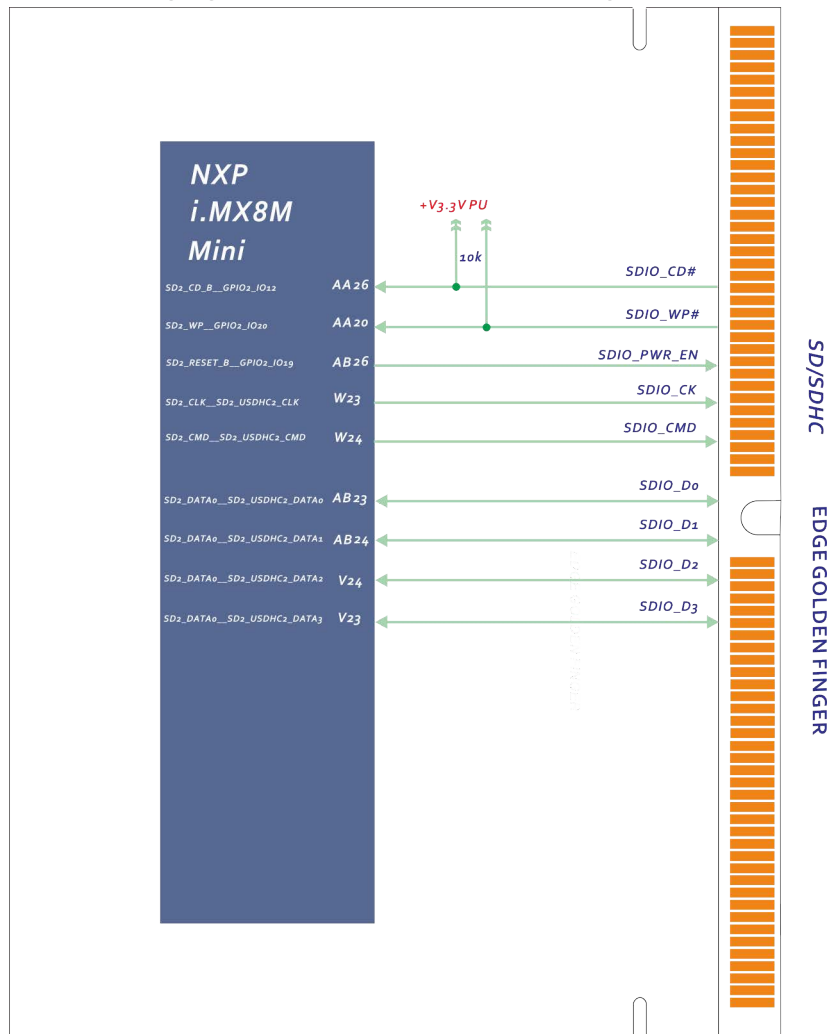


Figure 8. SD/SDIO/eMMC Interface Block Diagram

SDIO interface signals are exposed on the SMARC golden finger edge connector as shown below:

NXP i.MX8M Mini CPU			SMARC-iMX8MM Edge Golden Finger		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
SD/SDIO						
AB23	ALT0	SD2_DATA0__ SD2_USDHC2_ DATA0	P39	SDIO_D0	SDIO_D0	SDIO Data 0
AB24	ALT0	SD2_DATA1__ SD2_USDHC2_ DATA1	P40	SDIO_D1	SDIO_D1	SDIO Data 1
V24	ALT0	SD2_DATA2__ SD2_USDHC2_ DATA2	P41	SDIO_D2	SDIO_D2	SDIO Data 2
V23	ALT0	SD2_DATA3__ SD2_USDHC2_ DATA3	P42	SDIO_D3	SDIO_D3	SDIO Data 3
AA27	ALT5	SD2_WP__ GPIO2_IO20	P33	SDIO_WP	SDIO_WP	SDIO write protect signal
W24	ALT0	SD2_CMD__ SD2_CMD	P34	SDIO_CMD	SDIO_CMD	SDIO Command signal
AA26	ALT5	SD2_CD_B__ GPIO2_IO12	P35	SDIO_CD#	SDIO_CD#	SDIO card detect
W23	ALT0	SD2_CLK__ SD2_USDHC2_ CLK	P36	SDIO_CK	SDIO_CK	SDIO Clock Signal
AB26	ALT5	SD2_RESET_B__ GPIO2_IO19	P37	SDIO_PWR_EN	SDIO_PWRE N	SD card power enable

Note:

1. The *SDIO* card power should be switched on the Carrier board and the *SDIO* lines should be *ESD* protected. The *SMARC* Evaluation Carrier schematic is useful as an implementation reference.
2. If *SD* boot up function is required, the pull-up resistor to 3.3V of *SDIO_PWR_EN* # should be 4.7k or less.
3. *SDIO_WP* and *SDIO_CD#* are 10k pull up to 3.3V on module.

2.1.11.1. *SDIO Card (4 bit) Interface*

The Carrier *SDIO* Card can be selected as the Boot Device (See section 4.3).

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
<i>SDIO_D[0:3]</i>	<i>Bi-Dir</i>	<i>CMOS 3.3V</i>	<i>4 bit data path</i>
<i>SDIO_CMD</i>	<i>Bi-Dir</i>	<i>CMOS 3.3V</i>	<i>Command Line</i>
<i>SDIO_CK</i>	<i>Output</i>	<i>CMOS 3.3V</i>	<i>Clock</i>
<i>SDIO_WP</i>	<i>Input</i>	<i>CMOS 3.3V</i>	<i>Write Protect</i>
<i>SDIO_CD#</i>	<i>Input</i>	<i>CMOS 3.3V</i>	<i>Card Detect</i>
<i>SDIO_PWR_EN</i>	<i>Output</i>	<i>CMOS 3.3V</i>	<i>SD Card Power Enable</i>

Note:

SD Cards are not typically available with a 1.8V *I/O* voltage. The Module *SD* Card *I/O* level is specified as 3.3V and **not** *CMOS 1.8V*.

2.1.12 SPI/eSPI Interface

The *SMARC-iMX8MM* module supports two *NXP i.MX8M Mini SPI* interfaces that are available off-Module for general purpose use. One of them is implemented as *eSPI* interface by *SMARC 2.0* definition. Each *SPI* channel has two chip-selects that can connect two *SPI* slave devices on each channel. *SPI* devices will share the "*SPIO_DIN*", "*SPIO_DO*" and "*SPIO_CK*" pins, but each device will have its own chip select pin. The chip select signal is a low active signal. *eSPI* devices will share the "*ESPI_IO_0*", "*ESPI_IO_1*", "*ESPI_IO_2*", "*ESPI_IO_3*" and "*ESPI_CK*" pins, but each device will have its own chip select pin. The chip select signal is also a low active signal. The *SPI* to *CAN* bus bridge uses the *ESPIO* interface with different chip select signals (*SS2#*, *SS#3*).

The SPI interface is diagramed below.

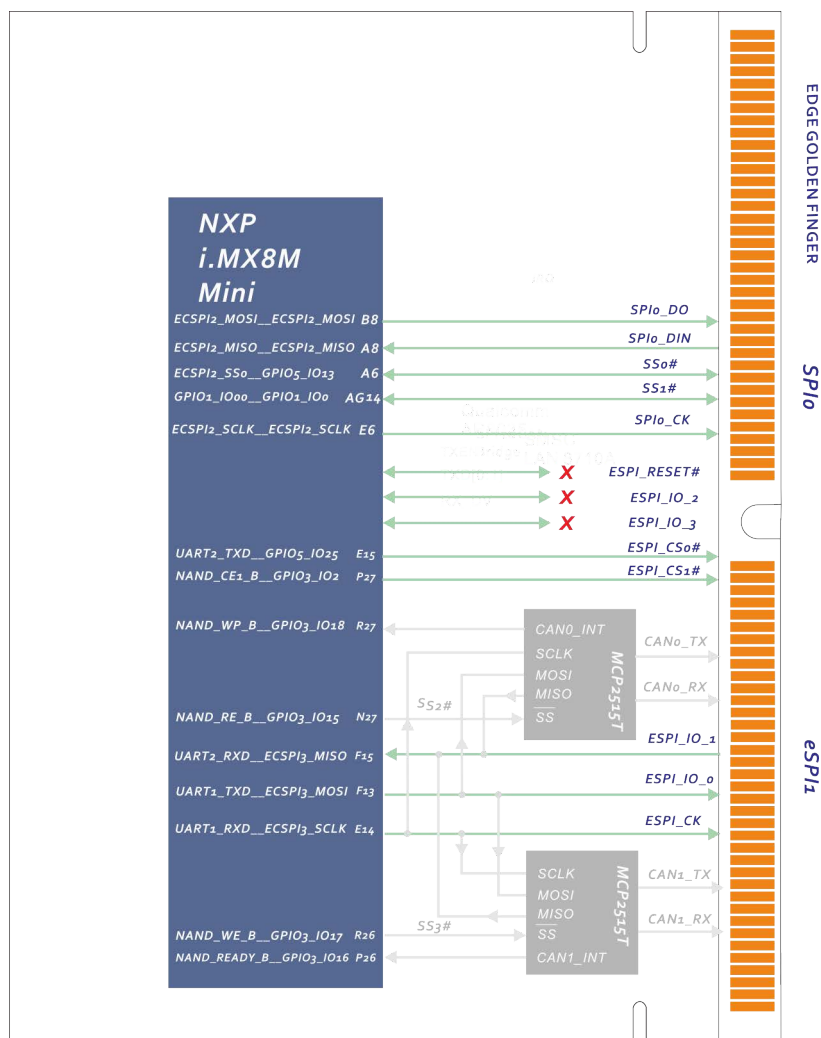


Figure 9: SPI Interface Block Diagram

SPI interface signals are exposed on the SMARC golden finger edge connector as shown below:

<i>NXP i.MX8M Mini CPU</i>			<i>SMARC-iMX8MM Edge Golden Finger</i>		<i>Net Names</i>	<i>Note</i>
<i>Ball</i>	<i>Mode</i>	<i>Pin Name</i>	<i>Pin#</i>	<i>Pin Name</i>		
<i>SPI0 Port</i>						
A6	ALT5	ECSPI2_SS0__ GPIO5_IO13	P43	SPI0_CS0#	SPI0_CS0#	SPI0 Master Chip Select 0 output
AG14	ALT5	GPIO1_IO00__ GPIO1_IO0	P31	SPI0_CS1#	SPI0_CS1#	SPI0 Master Chip Select 1 output
E6	ALT0	ECSPI2_SCLK__ ECSPI2_SCLK	P44	SPI0_CK	SPI0_SCLK	SPI0 Master Clock output
A8	ALT0	ECSPI2_MISO__ ECSPI2_MISO	P45	SPI0_DIN	SPI0_DIN	SPI0 Master Data input (input to CPU, output from SPI device)
B8	ALT0	ECSPI2_MOSI__ ECSPI2_MOSI	P46	SPI0_DO	SPI0_DO	SPI0 Master Data output (output from CPU, input to SPI device)

NXP i.MX8M Mini CPU			SMARC-iMX8MM Edge Golden Finger		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
eSPI Port						
E15	ALT5	UART2_TXD___ GPIO5_IO25	P54	ESPI_CS0#	ESPI_CS0#	ESPI Master Chip Select 0 output
P27	ALT5	NAND_CE1_B___ GPIO3_IO2	P55	ESPI_CS1#	ESPI_CS1#	ESPI Master Chip Select 1 output
E14	ALT1	UART1_RXD___ ECSPI3_SCLK	P56	ESPI_CK	ESPI_SCLK	ESPI Master Clock output
F13	ALT1	UART1_TXD___ ECSPI3_MOSI	P58	ESPI_IO_0	ESPI_IO_0	ESPI Master Data input (input to CPU, output from SPI device)
F15	ALT1	UART2_RXD___ ECSPI3_MISO	P57	ESPI_IO_1	ESPI_IO_1	ESPI Master Data output (output from CPU, input to SPI device)
			S56	ESPI_IO_2	ESPI_IO_2	Not Connected
			S57	ESPI_IO_3	ESPI_IO_3	Not Connected
			S58	ESPI_RESET#	ESPI_RESET#	Not Connected
N27	ALT5	NAND_RE_B___ GPIO3_IO15				Chip select 2 for SPI to CAN0 Bridge
R26	ALT5	NAND_WE_B___ GPIO3_IO17				Chip select 3 for SPI to CAN1 Bridge

2.1.12.1. SPI0 Signals

SMARC-iMX8MM does not support SPI0 device boot up. The Carrier SPI0 device cannot be selected as the Boot Device – see Section 4.3 Boot Select.

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
<i>SPI0_CS0#</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>SPI0 Master Chip Select 0 output</i>
<i>SPI0_CS1#</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>SPI0 Master Chip Select 1 output</i>
<i>SPI0_CK</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>SPI0 Master Clock output</i>
<i>SPI0_DIN</i>	<i>Input</i>	<i>CMOS 1.8V</i>	<i>SPI0 Master Data input (input to CPU, output from SPI device)</i>
<i>SPI0_DO</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>SPI0 Master Data output (output from CPU, input to SPI device)</i>

2.1.12.2. ESPI Signals

SMARC-iMX8MM does not support ESPI device boot up either. The Carrier ESPI device cannot be selected as the Boot Device – see Section 4.3 Boot Select.

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
<i>ESPI_CS0#</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>ESPI Master Chip Select 0 output</i>
<i>ESPI_CS1#</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>ESPI Master Chip Select 1 output</i>
<i>ESPI_CK</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>ESPI Master Clock output</i>
<i>ESPI_IO_[0:1]</i>	<i>Bi-Dir</i>	<i>CMOS 1.8V</i>	<i>ESPI Master Data input/output</i>
<i>ESPI_RESET#</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>Not Supported</i>
<i>ESPI_ALERT[0:1]#</i>	<i>Input</i>	<i>CMOC 1.8V</i>	<i>Not Supported</i>

2.1.13. I2S Interface

The *SMARC-iMX8MM* module uses *I2S* format for Audio signals. These signals are derived from the Synchronous Audio Interface (SAI) of the *NXP® i.MX8M Mini* processor. The Serial Audio Interface (SAI) implements a synchronous serial bus interface for connecting digital audio devices. It is by far the most common mechanism used to transfer two channels of audio data between devices within a system.

SMARC-iMX8MM supports two I2S instances (I2S0 and I2S2). I2S interface signals are exposed on the SMARC-iMX8MM golden finger edge connector as shown below:

<i>NXP i.MX8M Mini CPU</i>			<i>SMARC-iMX8MM Edge Golden Finger</i>		<i>Net Names</i>	<i>Note</i>
<i>Ball</i>	<i>Mode</i>	<i>Pin Name</i>	<i>Pin #</i>	<i>Pin Name</i>		
AD19	ALT0	SAI2_MCLK__ SAI2_MCLK	S38	AUDIO_MCK	AUD_MCLK	Master clock output to Audio codecs
<i>I2S0 interface</i>						
AD23	ALT0	SAI2_TXFS__ SAI2_TX_SYNC	S39	I2S0_LRCK	I2S0_LRCK	Left& Right audio synchronization clock
AC22	ALT0	SAI2_TXD0__ SAI2_TX_DATA0	S40	I2S0_SDOUT	I2S0_SDOUT	Digital audio Output
AC24	ALT0	SAI2_RXD0__ SAI2_RX_DATA0	S41	I2S0_SDIN	I2S0_SDIN	Digital audio Input
AD22	ALT0	SAI2_TXC__ SAI2_TX_BCLK	S42	I2S0_CK	I2S0_CK	Digital audio clock
<i>I2S2 interface</i>						
AG8	ALT0	SAI3_RXFS__ SAI3_RX_SYNC	S50	HDA_SYNC/ I2S2_LRCK	I2S2_LRCK	Left& Right audio synchronization clock
AF6	ALT0	SAI3_TXD__ SAI3_TX_DATA0	S51	HDA_SDO/ I2S2_SDOUT	I2S2_SDOUT	Digital audio Output
AF7	ALT0	SAI3_RXD__ SAI3_RX_DATA0	S52	HDA_SDI/ I2S2_SDIN	I2S2_SDIN	Digital audio Input
AG7	ALT0	SAI3_RXC__ SAI3_RX_BCLK	S53	HAD_CK/ I2S2_CK	I2S2_CK	Digital audio clock

Note:

SGTL5000 I2S audio codec is used in EVK-STD-CARRIER-S20 evaluation carrier board.

2.1.13.1 I2S Signals

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
AUDIO_MCK	Output	CMOS 1.8V	Master clock output to Audio codecs
<i>I2S0 Signals</i>			
I2S0_LRCK	Bi-Dir	CMOS 1.8V	Left& Right audio synchronization clock
I2S0_SDOUT	Output	CMOS 1.8V	Digital audio Output
I2S0_SDIN	Input	CMOS 1.8V	Digital audio Input
I2S0_CK	Bi-Dir	CMOS 1.8V	Digital audio clock
<i>I2S2 Signals</i>			
I2S2_LRCK	Bi-Dir	CMOS 1.8V	Left& Right audio synchronization clock
I2S2_SDOUT	Output	CMOS 1.8V	Digital audio Output
I2S2_SDIN	Input	CMOS 1.8V	Digital audio Input
I2S2_CK	Bi-Dir	CMOS 1.8V	Digital audio clock

2.1.14. Asynchronous Serial Port (UARTs)

The *SMARC-iMX8MM* module supports four UARTs (*SER0:3*). UART *SER0* and *SER2* support flow control signals (*RTS#*, *CTS#*). UART *SER1* and *SER3* do not support flow control (*TX*, *RX* only). When working with software, *SER3* is used for *SMARC-iMX8MM* debugging console port.

The module asynchronous serial port signals have a *VDDIO* (1.8V) level signal swing. If the asynchronous ports are to interface with RS232 level devices, then a Carrier RS-232 transceiver is required. The logic side of the transceiver must be able to run at 1.8V levels. The selection of 1.8V compatible transceivers is a bit limited, although more are appearing with time. Two such devices are the Texas Instruments TRS3253E, and the Maxim MAX13235E, illustrated in the figures below. The TI part is more cost effective, but has a top speed of 1 Mbps. The MAX 13235E can operate at maximum speeds over 3 Mbps. The transceivers invert the polarity of the incoming and outgoing data and handshake lines.

The other alternative is to use a level-shift IC from 1.8V to 3.3V when designing carrier board and almost all transceivers available accept a 3.3V signal level: example includes the Texas Instruments MAX3243. Note that RS232 transceivers invert the signal; a logic '1' is a negative voltage (-3.0V to -15V) and a logic '0' a positive voltage (3.0V to 15V) on the RS232 line.

Asynchronous serial ports interface signals are exposed on the *SMARC* golden finger edge connector as shown below:

<i>NXP i.MX8M Mini CPU</i>			<i>SMARC-iMX8MM Edge Golden Finger</i>		<i>Net Names</i>	<i>Note</i>
<i>Ball</i>	<i>Mode</i>	<i>Pin Name</i>	<i>Pin#</i>	<i>Pin Name</i>		
<i>SER0 Port</i>						
<i>AC19</i>	<i>ALT4</i>	<i>SAI2_RXFS__ UART1_DCE_TX</i>	<i>P129</i>	<i>SER0_TX</i>	<i>SER0_TX</i>	<i>Asynchronous serial port data out</i>
<i>AB22</i>	<i>ALT4</i>	<i>SAI2_RXC__ UART1_DCE_RX</i>	<i>P130</i>	<i>SER0_RX</i>	<i>SER0_RX</i>	<i>Asynchronous serial port data in</i>
<i>E18</i>	<i>ALT1</i>	<i>UART3_RXD__ UART1_DCE_ CTS_B</i>	<i>P131</i>	<i>SER0_RTS#</i>	<i>SER0_RTS#</i>	<i>Request to Send handshake line for SER0</i>
<i>D18</i>	<i>ALT1</i>	<i>UART3_TXD__ UART1_DCE_ RTS_B</i>	<i>P132</i>	<i>SER0_CTS#</i>	<i>SER0_CTS#</i>	<i>Clear to Send handshake line for SER0</i>
<i>SER1 Port</i>						
<i>F18</i>	<i>ALT0</i>	<i>UART4_TXD__ UART4_DCE_TX</i>	<i>P134</i>	<i>SER1_TX</i>	<i>SER1_TX</i>	<i>Asynchronous serial port data out</i>
<i>F19</i>	<i>ALT0</i>	<i>UART4_RXD__ UART4_DCE_RX</i>	<i>P135</i>	<i>SER1_RX</i>	<i>SER1_RX</i>	<i>Asynchronous serial port data in</i>

NXP i.MX8M Mini CPU			SMARC-iMX8MM Edge Golden Finger		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
SER2 Port						
B7	ALT1	ECSPI1_TXD__ UART3_DCE_TX	P136	SER2_TX	SER2_TX	Asynchronous serial port data out
D6	ALT1	ECSPI1_SCLK__ UART3_DCE_RX	P137	SER2_RX	SER2_RX	Asynchronous serial port data in
A7	ALT1	ECSPI2_MOSI__ UART3_DCE_CTS_ B	P138	SER2_RTS#	SER2_RTS#	Request to Send handshake line for SER2
B6	ALT1	ECSPI2_SCLK__ UART3_DCE_RTS_ B	P139	SER2_CTS#	SER2_CTS#	Clear to Send handshake line for SER2
SER3 Port (Debugging Port)						
AG6	ALT4	SAI3_TXC__ UART2_DCE_TX	P140	SER3_TX	SER3_TX	Asynchronous serial port data out
AC6	ALT4	SAI3_TXFS__ UART2_DCE_RX	P141	SER3_RX	SER3_RX	Asynchronous serial port data in

2.1.14.1. UART Signals

Module pins for up to four asynchronous serial ports are defined. The ports are designated *SER0* – *SER3*. Ports *SER0* and *SER2* are 4 wire ports (2 data lines and 2 handshake lines). Ports *SER1* and *SER3* are 2 wire ports (data only).

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
<i>SER[0:3]_TX</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>Asynchronous serial port data out</i>
<i>SER[0:3]_RX</i>	<i>Input</i>	<i>CMOS 1.8V</i>	<i>Asynchronous serial port data in</i>
<i>SER[0]_RTS#</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>Request to Send handshake line for SER0</i>
<i>SER[0]_CTS#</i>	<i>Input</i>	<i>CMOS 1.8V</i>	<i>Clear to Send handshake line for SER0</i>
<i>SER[2]_RTS#</i>	<i>Output</i>	<i>CMOS 1.8V</i>	<i>Request to Send handshake line for SER2</i>
<i>SER[2]_CTS#</i>	<i>Input</i>	<i>CMOS 1.8V</i>	<i>Clear to Send handshake line for SER2</i>

2.1.15. I2C Interface

There is a minimum configuration of I2C ports up to a maximum of 5 ports defined in the *SMARC* specification: *PM* (Power Management), *LCD* (Liquid Crystal Display), *GP* (General Purpose), *CAM0* (Camera 0), and *CAM1* (Camera 1) and *HDMI*. *SMARC-iMX8MM* does not have *HDMI* interface, it defines five out of the six I2C buses and supports multiple masters and slaves in fast mode (400 KHz operation).

All I2C interfaces are implemented directly from *NXP i.MX8MM* processor interfaces.

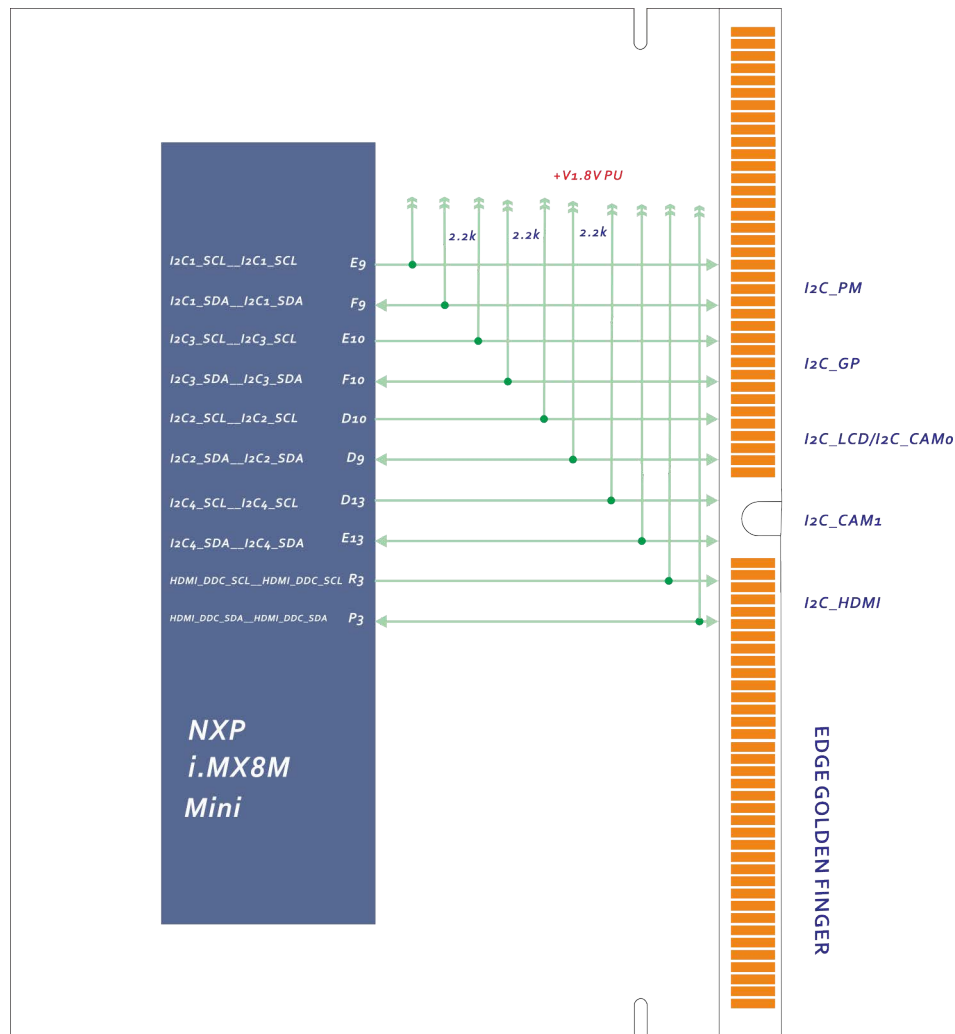


Figure 10. I2C Interface Block Diagram

This will be summarized below.

<i>I2C Port</i>		<i>Primary Purpose</i>	<i>Alternative Use</i>	<i>I/O Voltage Level</i>
<i>Golden Finger Connector</i>	<i>i.MX8M Mini CPU</i>			
<i>I2C_PM</i>	<i>I2C1</i>	<i>Power Management support</i>	<i>System configuration management</i>	<i>CMOS</i> <i>1.8V</i>
<i>I2C_GP</i>	<i>I2C3</i>	<i>General purpose use</i>		<i>CMOS</i> <i>1.8V</i>
<i>I2C_LCD</i>	<i>I2C2</i>	<i>LCD display support, to read LCD display EDID EEPROMs</i> <i>(for parallel and LVDS LCD,)</i>	<i>General Purpose</i>	<i>CMOS</i> <i>1.8V</i>
<i>I2C_CAM0</i>	<i>I2C2</i>	<i>Serial camera 0</i>	<i>General Purpose</i>	<i>CMOS</i> <i>1.8V</i>
<i>I2C_CAM1</i>	<i>I2C4</i>	<i>Serial camera 1</i>	<i>General Purpose</i>	<i>CMOS</i> <i>1.8V</i>

Note:

1. The 2.2k pull-up resistors for *I2C_SCL* and *I2C_SDA* signals are on module.
2. *I2C_LCD* and *I2C_CAM0* are using the same *I2C2* bus to avoid from adding an additional *I2C* switch IC on module.

The I2C interface signals are exposed on the SMARC golden finger edge connector as shown below:

NXP i.MX8M Mini CPU			SMARC-iMX8MM Edge Golden Finger		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
I2C_PM						
E9	ALT0	I2C1_SCL__ I2C1_SCL	P121	I2C_PM_CK	I2C_PM_CK	Power management I2C bus clock
F9	ALT0	I2C1_SDA__ I2C1_SDA	P122	I2C_PM_DAT	I2C_PM_SDA	Power management I2C bus data
I2C_GP						
E10	ALT0	I2C3_SCL__ I2C3_SCL	S48	I2C_GP_CK	I2C_GP_CK	General purpose I2C bus clock
F10	ALT0	I2C3_SDA__ I2C3_SDA	S49	I2C_GP_DAT	I2C_GP_DAT	General purpose I2C bus data
I2C_LCD						
D10	ALT0	I2C2_SCL__ I2C2_SCL	S5/ S139	I2C_LCD_CK	I2C_LCD_CK	LCD display I2C bus clock
D9	ALT0	I2C2_SDA__ I2C2_SDA	S7/ S140	I2C_LCD_DAT	I2C_LCD_DAT	LCD display I2C bus data
I2C_CAM0						
D10	ALT0	I2C2_SCL__ I2C2_SCL	S5	I2C_CAM0_CK	I2C_CAM0_CK	Camera 0 I2C bus clock
D9	ALT0	I2C2_SDA__ I2C2_SDA	S7	I2C_CAM0_DAT	I2C_CAM0_DAT	Camera 0 I2C bus data
I2C_CAM1						
D13	ALT0	I2C4_SCL__ I2C4_SCL	S1	I2C_CAM1_CK	I2C_CAM1_CK	Camera 1 I2C bus clock
E13	ALT0	I2C4_SDA__ I2C4_SDA	S2	I2C_CAM1_DAT	I2C_CAM1_DAT	Camera 1 I2C bus data

Note:

All I2C bus and are operated at 1.8V. The slave devices and their address details are listed in the following table:

#	Device	Description	Address (7-bit)	Address (8-bit)		Notes
				Read	Write	
I2C_PM (I2C1) Bus						
1	Pericom PI6CFG201BZDIE	PCIe Gen 1-2-3 Clock Generator	0x68	0xD1	0xD0	Clock Generator for PCIe Lane A
2	ROHM BD71847MWV-E2	PMIC	0x4B	0x01	0x00	PMIC
3	Seiko S-35390A	Real-time clock IC	0x30	0x61	0x60	Real-Time Clock
I2C_GP						
1	On Semiconductor CAT24C32	EEPROM	0x50	0xA1	0xA0	General purpose parameter EEPROM, Serial number, etc in PICMG EEEP format
I2C_LCD						
1	TI SN65DSI84	MIPI_DSI to LVDS Bridge	0x2C	0x59	0x58	MIPI_DSI to LVDS Bridge IC

Note:

On-module EEPROM has been moved from I2C_PM to I2C_GP at SMARC 2.0 specification.

2.1.16. CAN Bus Interface

The Controller Area Network (*CAN*) is a serial communications protocol which efficiently supports distributed real-time control with a high level of security. The *SMARC-iMX8MM* module implements two *CAN* bus interfaces from Microchip *MCP2515 SPI* to *CAN* interface IC.

The SPI bus used to interface with *MCP2515 CAN* controller is *SPI0*. The chip select *SS2#* is reserved for *CAN0* and *SS3#* is reserved for *CAN1*. Chip selects *SS0#* and *SS1#* are connected to *MXM* golden finger connector for users to use. The logic level for *CAN0/1 TX/RX* is 1.8V as defined in *SMARC 2.0*.

The following figure shows the *CAN bus* block diagram.

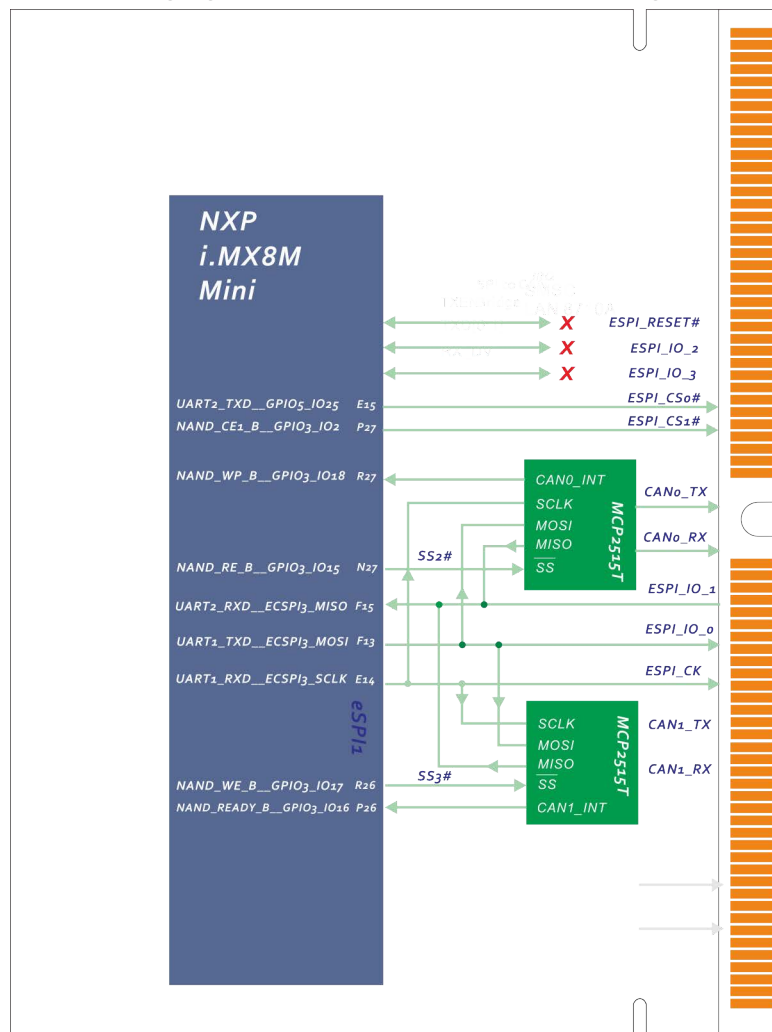


Figure 11: SMARC-iMX8MM CAN Bus Diagram

2.1.16.1 CAN0 Bus Signals Data Flow

i.MX8M Mini processor and Microchip MCP2515T implementation for CAN0 is shown in the following table:

NXP i.MX8M Mini CPU			Microchip MCP2515T		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
F15	ALT1	UART2_RXD__ ECSPI3_MISO	15	SO	ESPI_CAN_SO	
F13	ALT1	UART1_TXD__ ECSPI3_MOSI	14	SI	ESPI_CAN_SI	
E14	ALT1	UART1_RXD__ ECSPI3_SCLK	12	SCK	ESPI_CAN_SCLK	
N27	ALT5	NAND_RE_B__ GPIO3_IO15	16	CS#	ECSPI3_SS2#	
R27	ALT5	NAND_WP_B__ GPIO3_IO18	11	INT#	CAN0_INT#	

2.1.16.2 CAN1 Bus Signals Data Flow

i.MX8M Mini processor and Microchip MCP2515T implementation for CAN1 is shown in the following table:

NXP i.MX8M Mini CPU			Microchip MCP2515T		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
F15	ALT1	UART2_RXD__ ECSPI3_MISO	15	SO	ESPI_CAN_SO	
F13	ALT1	UART1_TXD__ ECSPI3_MOSI	14	SI	ESPI_CAN_SI	
E14	ALT1	UART1_RXD__ ECSPI3_SCLK	12	SCK	ESPI_CAN_SCLK	
R26	ALT5	NAND_WE_B__ GPIO3_IO17	16	CS#	ECSPI3_SS3#	
P26	ALT5	NAND_READY_B__ GPIO3_IO16	11	INT#	CAN1_INT#	

2.1.16.3 SPI to CAN Bridge Signals Data Flow

The path from Microchip MCP2515T to the golden finger edge connector is shown in the following table.

Microchip MCP2515T		Golden Finger Edge Connector		Net Names	Note
Pin	Pin Name	Pin#	Pin Name		
CAN0 Bus					
19	TXCAN	P143	CAN0_TX	CAN0_TX	CAN0 Transmit output
20	RXCAN	P144	CAN0_RX	CAN0_RX	CAN0 Receive input
CAN1 Bus					
19	TXCAN	P145	CAN1_TX	CAN1_TX	CAN1 Transmit output
20	RXCAN	P146	CAN1_RX	CAN1_RX	CAN1 Receive input

By SMARC hardware specification, CAN0 bus error condition signaling should be supported on the Module GPIO8 (P116) pin. This is an active low input to the Module from the CAN bus transceiver. CAN1 bus error condition signaling should be supported on the Module GPIO9 (P117) pin. This is an active low input to the Module from the CAN bus transceiver.

A CAN transceiver on carrier is necessary to adapt the signals from SMARC golden finger edge connector, which is TTL levels, to the physical layer used. Because the CAN bus system is typically used to connect multiple systems and is often run over very long distances, both power supply and signal path must be electrically isolated to meet a certain isolation level. Users can refer the “**SMARC Carrier Board Hardware Design Guide**” or CAN transceiver application note such as TI ISO1050 for more details.

2.1.16.4. CAN0 BUS Signals

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
CAN0_TX	Output	CMOS 1.8V	CAN0 Transmit output
CAN0_RX	Input	CMOS 1.8V	CAN0 Receive input

2.1.16.5. CAN1 BUS Signals

<i>Edge Golden Finder Signal Name</i>	<i>Direction</i>	<i>Type Tolerance</i>	<i>Description</i>
CAN1_TX	Output	CMOS 1.8V	CAN1 Transmit output
CAN1_RX	Input	CMOS 1.8V	CAN1 Receive input

2.1.17. GPIOs

The *SMARC-iMX8MM* module supports 12 GPIOs, as defined by the *SMARC* specification. Specific alternate functions are assigned to some *GPIOs* such as *PWM / Tachometer* capability, Camera support, CAN Error Signaling and HD Audio reset. All pins are capable of bi-directional operation. A default direction of operation is assigned, with half of them (*GPIO0 – GPIO5*) for use as outputs and the remainder (*GPIO6 – GPIO11*) as inputs by *SMARC* hardware specification.

GPIO signals are exposed on the SMARC golden finger edge connector as shown below:

NXP i.MX8M Mini CPU			SMARC-iMX8MM Edge Golden Finger		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
GPIOs						
AD15	ALT5	SAI5_MCLK__ GPIO3_IO25	P108	GPIO0/CAM0_PWR#	GPIO0	Camera 0 Power Enable, active low output
AB15	ALT5	SAI5_RXFS__ GPIO3_IO19	P109	GPIO1/CAM1_PWR#	GPIO1	Camera 1 Power Enable, active low output
AC15	ALT5	SAI5_RXC__ GPIO3_IO20	P110	GPIO2/CAM0_RST#	GPIO2	Camera 0 Reset, active low output
AD18	ALT5	SAI5_RXD0__ GPIO3_IO21	P111	GPIO3/CAM1_RST#	GPIO3	Camera 1 Reset, active low output
AC14	ALT5	SAI5_RXD1__ GPIO3_IO22	P112	GPIO4/HDA_RST#	GPIO4	HD Audio Reset, active low output
AF6	ALT5	SPDIF_TX__ GPIO5_IO3	P113	GPIO5/PWM_OUT	GPIO5	PWM output
AG6	ALT5	SPDIF_RX__ GPIO5_IO4	P114	GPIO6/TACHIN	GPIO6	Tachometer input (used with the GPIO5 PWM)
AD13	ALT5	SAI5_RXD2__ GPIO3_IO23	P115	GPIO7/PCAM_FLD	GPIO7	PCAM_FLD (Field) signal input
AC13	ALT5	SAI5_RXD3__ GPIO3_IO24	P116	GPIO8/CAN0_ERR#	GPIO8	CAN0 Error signal, active low input
AC18	ALT5	SAI1_TXC__ GPIO4_IO11	P117	GPIO9/CAN1_ERR#	GPIO9	CAN1 Error signal, active low input
AB19	ALT5	SAI1_TXFS__ GPIO4_IO10	P118	GPIO10	GPIO10	
AB18	ALT5	SAI1_MCLK__ GPIO4_IO20	P119	GPIO11	GPIO11	

2.1.17.1. GPIO Signals

Twelve Module pins are allocated for *GPIO* (general purpose input / output) use. All pins are capable of bi-directional operation. By *SMARC* specification, *GPIO0* – *GPIO5* are recommended for use as outputs and the remainder (*GPIO6* – *GPIO11*) as inputs.

At Module power-up, the state of the GPIO pins may not be defined, and may briefly be configured in the “wrong” state, before boot loader code corrects them. Carrier designers should be aware of this and plan accordingly. All GPIO pins are capable of generating interrupts. The interrupt characteristics (edge or level sensitivity, polarity) are generally configurable in the *i.MX8M Mini* register set.

Edge Golden FINDER Signal Name	Preferred Direction	Type Tolerance	Description
<i>GPIO0/CAM0_PWR#</i>	Output	CMOS 1.8V	Camera 0 Power Enable, active low output
<i>GPIO1/CAM1_PWR#</i>	Output	CMOS 1.8V	Camera 1 Power Enable, active low output
<i>GPIO2/CAM0_RST#</i>	Output	CMOS 1.8V	Camera 0 Reset, active low output
<i>GPIO3/CAM1_RST#</i>	Output	CMOS 1.8V	Camera 1 Reset, active low output
<i>GPIO4/HDA_RST#</i>	Output	CMOS 1.8V	HD Audio Reset, active low output
<i>GPIO5/PWM_OUT</i>	Output	CMOS 1.8V	PWM output
<i>GPIO6/TACHIN</i>	Input	CMOS 1.8V	Tachometer input (used with the <i>GPIO5</i> PWM)
<i>GPIO7/PCAM_FLD</i>	Input	CMOS 1.8V	<i>PCAM_FLD</i> (Field) signal input
<i>GPIO8/CAN0_ERR#</i>	Input	CMOS 1.8V	<i>CAN0</i> Error signal, active low input
<i>GPIO9/CAN1_ERR#</i>	Input	CMOS 1.8V	<i>CAN1</i> Error signal, active low input
<i>GPIO10</i>	Input	CMOS 1.8V	
<i>GPIO11</i>	Input	CMOS 1.8V	

2.1.18 Watchdog Timer Interface

i.MX8M Mini features an internal WDT. Embedian's Linux kernel enables the internal *i.MX8M Mini* WDT and makes this functionality available to users through the standard Linux Watchdog API.

A description of the API is available following the link below:

<http://www.kernel.org/doc/Documentation/watchdog/watchdog-api.txt>

WDT signals are exposed on the *SMARC* golden finger edge connector as shown below:

NXP i.MX8M Mini CPU			SMARC-iMX8MM Edge Golden Finger		Net Names	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
Watchdog Timer						
AB9	ALT6	GPIO1_IO15__ CCMSRCGPCM IX_CLKO2	S145	WDT_TIME_ OUT#	WDT_TIME_OUT#	Watchdog- Timer Output

2.1.19 JTAG

Figure 12 shows the *SMARC-iMX8MM* JTAG connectors location and pin out.

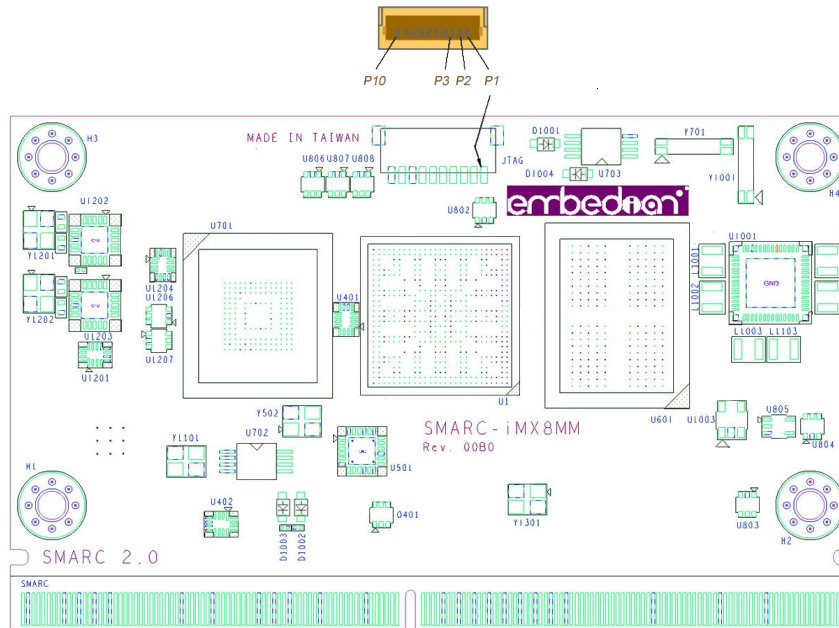


Figure 12: JTAG Connector Location and Pinout

JTAG functions for CPU debug and test are implemented on separate small form factor connector (CN3: *JST SM10B-SRSS-TB*, 1mm pitch R/A SMD Header). The JTAG pins are used to allow test equipment and circuit emulators to have access to the Module CPU. The pin-outs shown below are used:

NXP i.MX8M Mini CPU			JTAG(Connector: JST SM10B-SRSS-TB, 1mm pitch R/A SMD Header)		Type	Note
Ball	Mode	Pin Name	Pin#	Pin Name		
JTAG						
			1	VDD_33A	Power	JTAG I/O Voltage (sourced by Module)
C27	ATL0	JTAG_TRST_B	2	nTRST	I	JTAG Reset, active low
F27	ALT0	JTAG_TMS	3	TMS	I	JTAG mode select
E26	ALT0	JTAG_TDO	4	TDO	O	JTAG data out
E27	ALT0	JTAG_TDI	5	TDI	I	JTAG data in
F26	ALT0	JTAG_TCK	6	TCK	I	JTAG clock
			7	RTCK	I	JTAG return clock
			8	GND	Ground	Ground
			9	MFG_Mode#	I	Pulled low to allow in-circuit SPI ROM update
			10	GND	Ground	Ground

2.1.20 Boot ID EEPROM

The *SMARC-iMX8MM* module includes an I2C serial *EEPROM* available on the *I2C_GP* bus. An On Semiconductor 24C32 or equivalent EEPROM is used in the module. The device operates at 1.8V. The Module serial EEPROM is placed at I2C slave addresses A2 A1 A0 set to 0 (I2C slave address 50 hex, 7 bit address format or A0 / A1 hex, 8 bit format) (for I2C EEPROMs, address bits A6 A5 A4 A3 are set to binary 0101 convention).

The module serial EEPROM is intended to retain module parameter information, including serial number. The module serial EEPROM data structure conforms to the PICMG® EEPROM Embedded EEPROM Specification.

Note:

The *EEPROM ID* memory layout is now follow the mainline and as follows.

Name	Size (Bytes)	Contents
Header	4	MSB 0xEE3355AA LSB
Board Name	8	Name for Board in ASCII “SM8MM62G” = Embedian SMARC-iMX8MM Computer on Module with Quad Core and 2GB LPDDR4 Configuration “SM8MM64G” = Embedian SMARC-iMX8MM Computer on Module with Quad Core and 4GB LPDDR4 Configuration “SM8MM52G” = Embedian SMARC-iMX8MM Computer on Module with Quad Lite Core and 2GB LPDDR4 Configuration “SM8MM54G” = Embedian SMARC-iMX8MM Computer on Module with Quad Lite Core and 4GB LPDDR4 Configuration “SM8MM42G” = Embedian SMARC-iMX8MM Computer on Module with Dual Core and 2GB LPDDR4 Configuration “SM8MM32G” = Embedian SMARC-iMX8MM Computer on Module with Dual Lite Core and 2GB LPDDR4 Configuration “SM8MM22G” = Embedian SMARC-iMX8MM Computer on Module with Solo Core and 2GB LPDDR4 Configuration “SM8MM12G” = Embedian SMARC-iMX8MM Computer on Module with Solo Lite Core and 2GB LPDDR4 Configuration
Version	4	Hardware version code for version in ASCII “00A0” = rev. A0

Name	Size (Bytes)	Contents
Serial Number	12	Serial number of the board. This is a 12 character string which is: WWYYMSD1nnnn Where: WW = 2 digit week of the year of production YY = 2 digit year of production MS = Module Serial Number D1/Q1/D2/Q2/UC/SC = CPU Core and DDR Configuration Variants nnnn = incrementing board number
Configuration Option	32	Codes to show the configuration setup on this board. These 32 bytes are reserved by default.
MAC Address	6	Ethernet MAC Address (10:0D:32:XX:XX:XX)
MAC Address	6	Ethernet MAC Address for 2 nd LAN (if any)
Available	32720	Available space for other non-volatile codes/data

2.2 SMARC-iMX8MM Debug

2.2.1. Serial Port Debug

SMARC module has 4 serial output ports, *SER0*, *SER1*, *SER2* and *SER3*. Out of these 4 serial ports, *SER3* is set as the serial debug port use for *i.MX8M Mini* from Embedian. Users can change to any port they want to from *u-boot* defconfig file. *SER3* is exposed (along with all other serial ports available on the module) in the *SMARC-iMX8MM* Evaluation Carrier. The default baud rate setting is 115,200 8N1.

SER3 pin out of the *SMARC-iMX8MM* is shown below:

NXP i.MX8M Mini CPU		SMARC-iMX8MM Edge Golden Finger		Net Names	Notes
mode	Pin Name	Pin#	Pin Name		
<i>SER3 (Debugging Port)</i>					
ALT4	SAI3_TXC__ UART2_DCE_TX	P140	SER3_TX	SER3_TX	Asynchronous serial port data out
ALT4	SAI3_TXFS__ UART2_DCE_RX	P141	SER3_RX	SER3_RX	Asynchronous serial port data in

2.3 Mechanical Specifications

2.3.1. Module Dimensions

The *SMARC-iMX8MM* complies with *SMARC* Hardware Specification in an 82mm x 50 mm form factor.

2.3.2. Height on Top

2.9mm maximum (without PCB) complied with *SMARC* specification defines as 3mm as the maximum.

2.3.3. Height on Bottom

0.9mm maximum (without PCB) complied with *SMARC* specification defines as 1.3mm as the maximum.

2.3.4. Mechanical Drawings

The mechanical information is shown in Figure 13: *SMARC-iMX8MM* Mechanical Drawings (Top View) and Figure 14: *SMARC-iMX8MM* Mechanical Drawings (Bottom View)

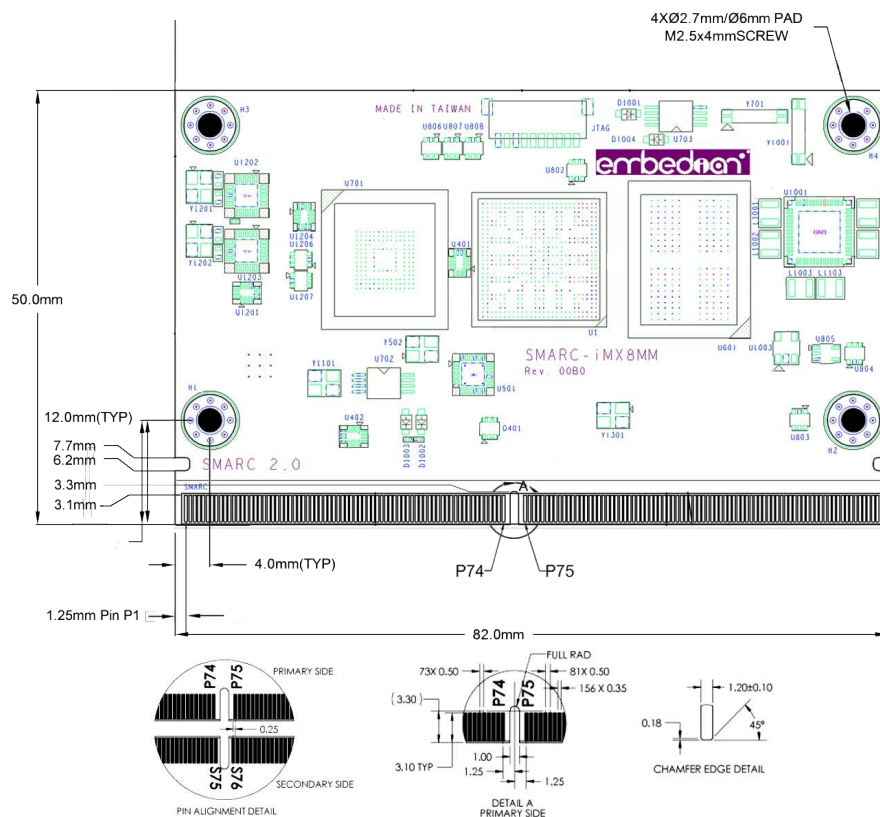


Figure 13. *SMARC-iMX8MM* Mechanical Drawings (Top View)

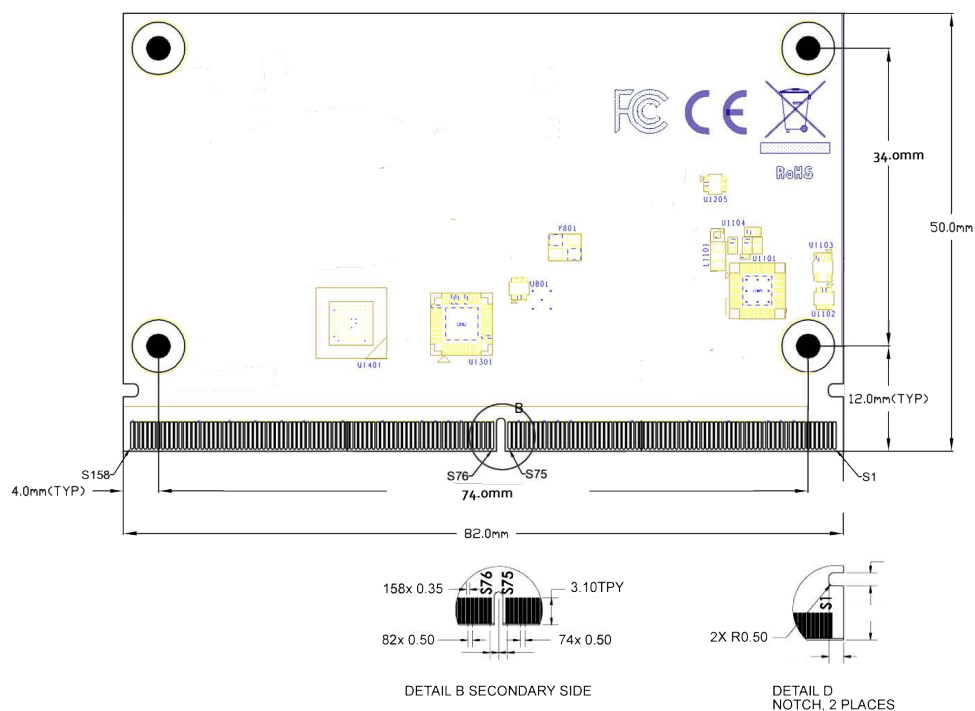


Figure 14. SMARC-iMX8MM Mechanical Drawings (Bottom View)

The figure on the following page details the 82mm x 50mm Module mechanical attributes, including the pin numbering and edge finger pattern.

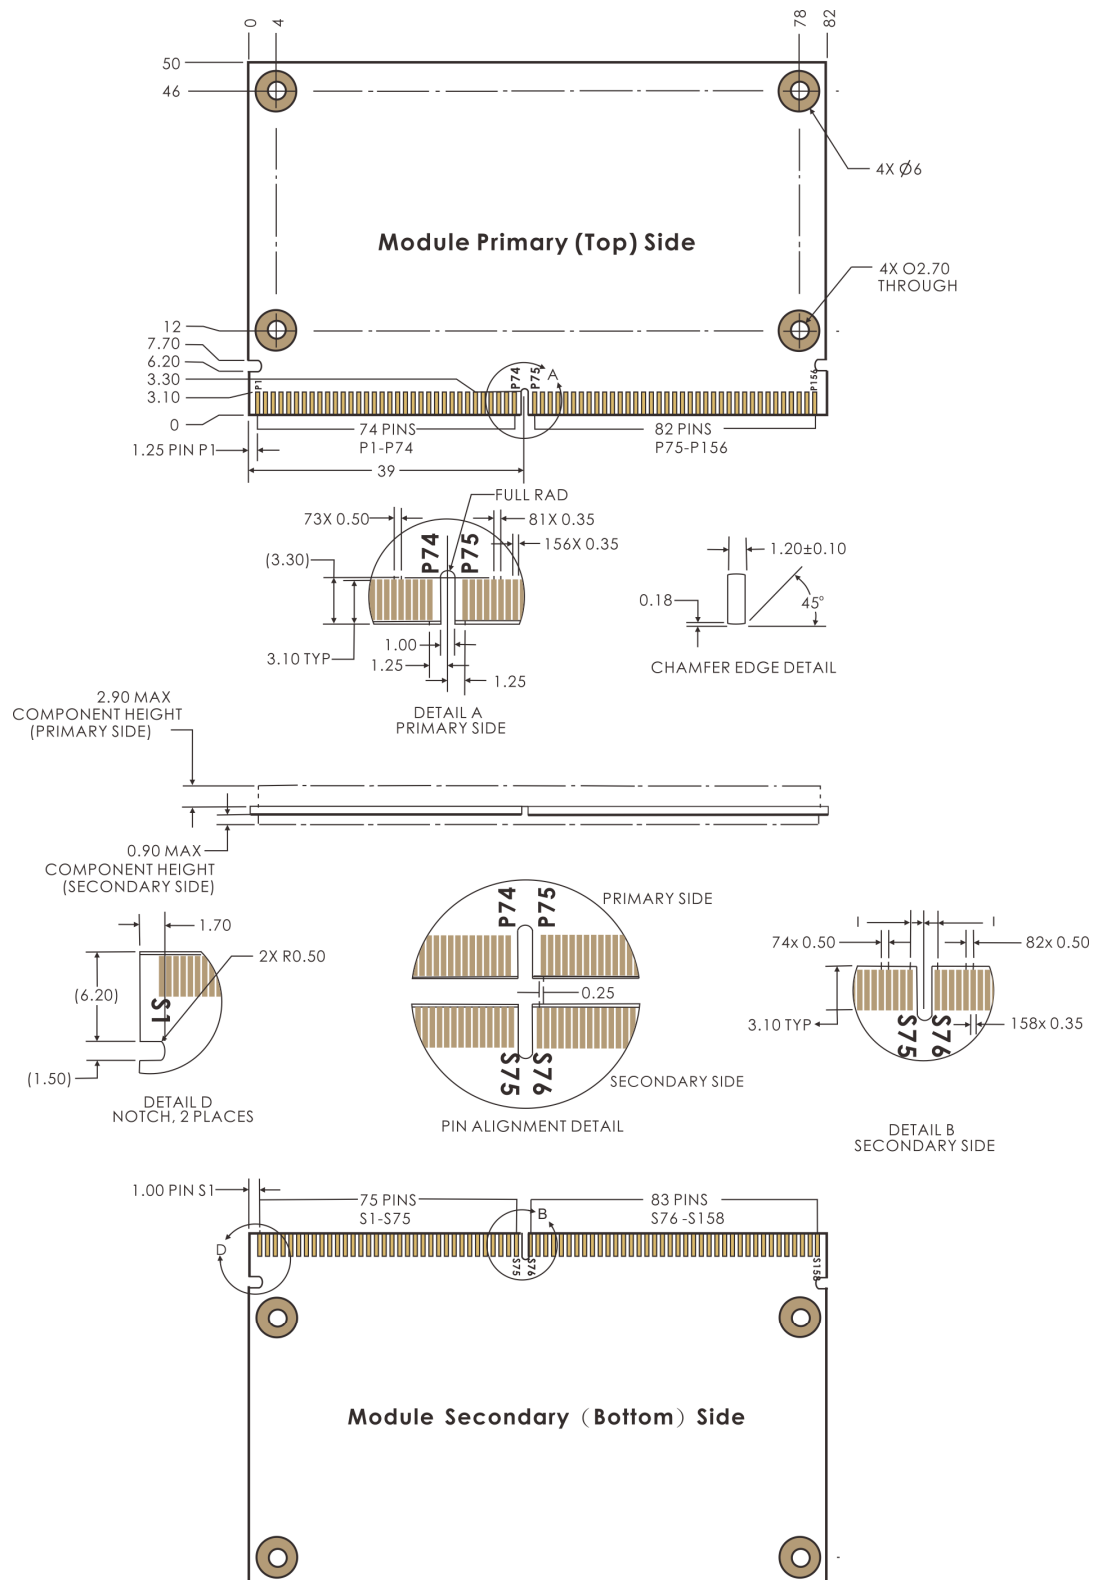


Figure 15: SMARC-iMX8MM Module Mechanical Outline

Top side major component (IC and Connector) information is shown in Figure 16: *SMARC-iMX8MM* Top side components.

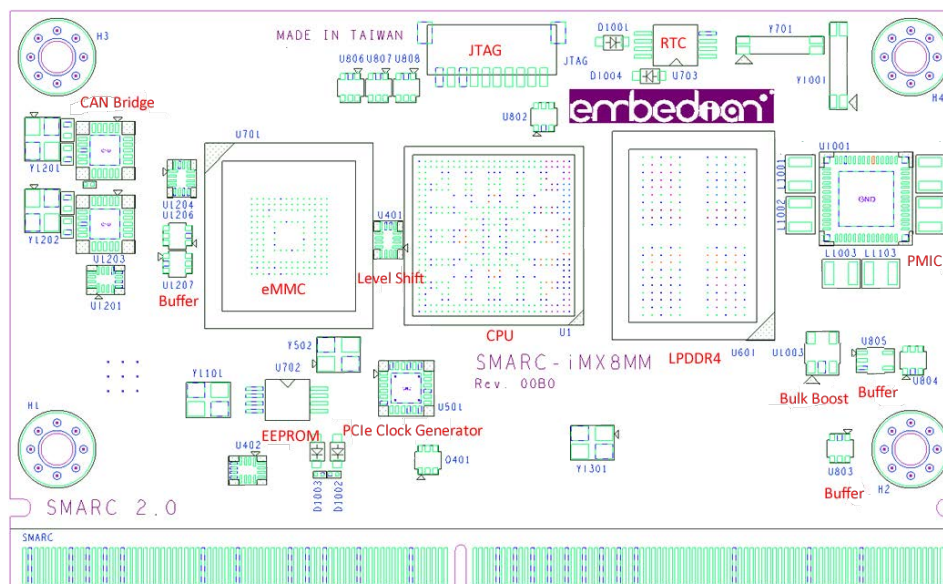


Figure 16. SMARC-iMX8MM Top Side Components

Bottom side major component (IC and Connector) information is shown in Figure 17: *SMARC-iMX8MM* Bottom side components.

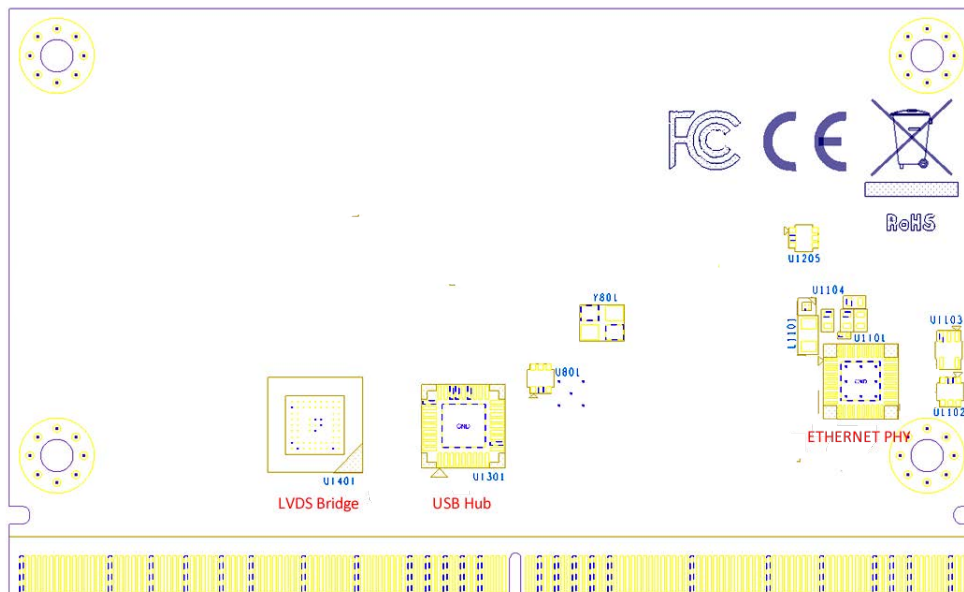


Figure 17. *SMARC-iMX8MM* Bottom Side Components

SMARC-iMX8MM height information from Carrier board Top side to tallest Module component is shown in Figure 18: SMARC-iMX8MM Minimum “Z” Height:

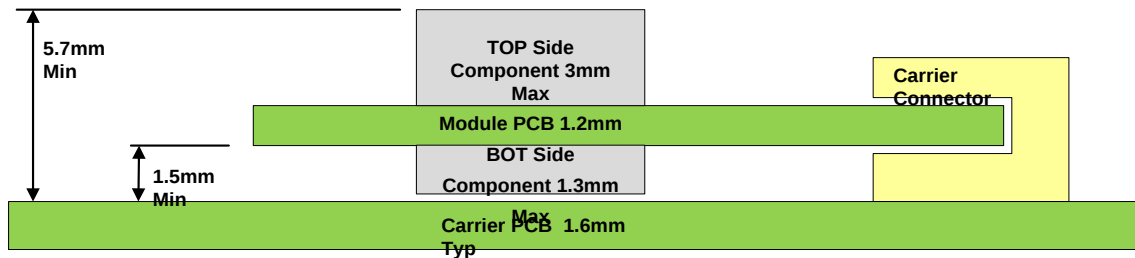


Figure 18. SMARC-iMX8MM Minimum “Z” Height

The SMARC connector board-to-board stack heights that are available may result in the use of non-standard spacer lengths. The board-to-board stack heights available include 1.5mm, 2.7mm and 5mm. Of these three, only the spacer for the 5mm stack would likely be a standard length.

When a 1.5mm stack height Carrier board connector is used, there shall not be components on the Carrier board Top side in the Module region. Additionally, when 1.5mm stack height connectors are used, there should not be PCB traces on the Carrier top side in the Module shadow. This is to prevent possible problems with metallic Module heat sink attachment hardware that may protrude through the Module.

If Carrier board components are required in this region, then the Carrier components must be on the Carrier Bottom side, or a taller Module-to-Carrier connector may be used. Stack heights of 2.7mm, 3mm, 5mm and up are available.

2.3.5. Carrier Board Connector PCB Footprint

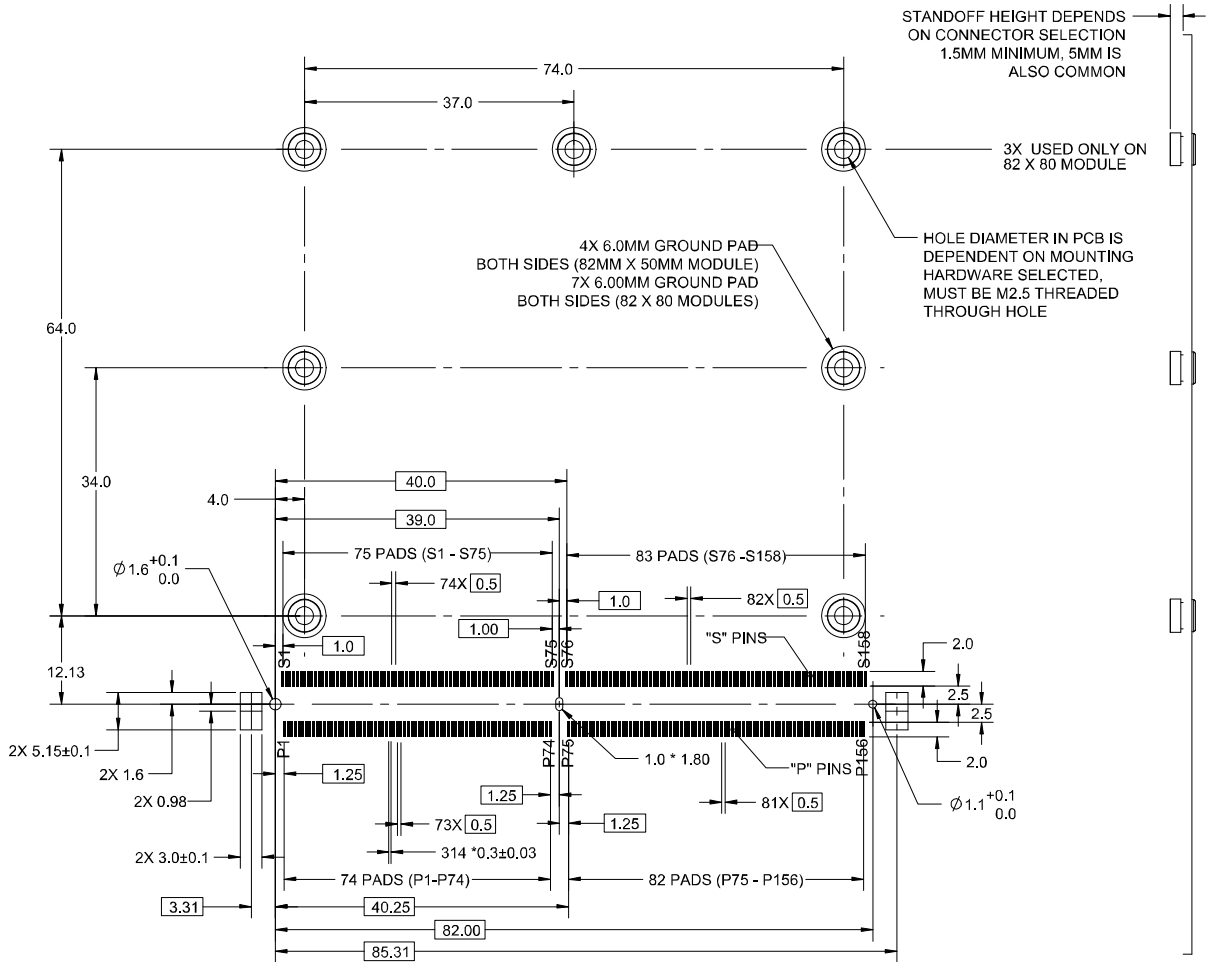


Figure 19: Carrier Board Connector PCB Footprint

Note:

The hole diameter for the 4 holes (82mm x 50mm Module) or 7 holes (82mm x 80mm Module) depends on the spacer hardware selection. See the section below for more information on this.

2.3.6. Module Assembly Hardware

The *SMARC-iMX8MM* module is attached to the carrier with four M2.5 screws. A 4mm length screw is usually used. The attachment holes are located on the corners of the module. Attachment holes have a 6mm diameter pad, 2.7 mm dia drill hole as shown Figure 13: *SMARC-iMX8MM* Mechanical Drawings (Top View)

2.3.7. Carrier Board Standoffs

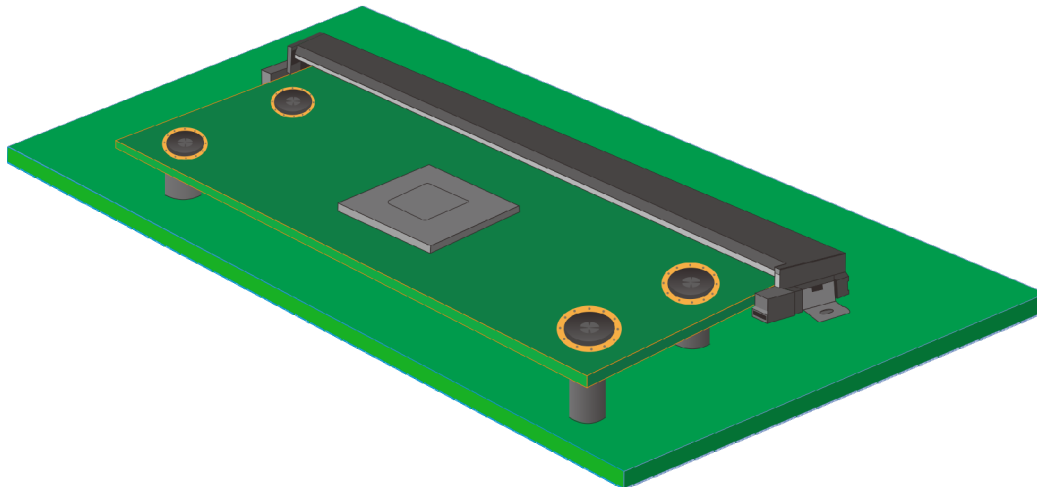


Figure 20: Screw Fixation

Standoffs secured to the Carrier board are expected. The standoffs are to be used with M2.5 hardware. Most implementations will use Carrier board standoffs that have M2.5 threads (as opposed to clearance holes). A short M2.5 screw and washer, inserted from the Module top side, secures the Module to the Carrier board threaded standoff.

The *SMARC* connector board-to-board stack heights that are available may result in the use of non-standard spacer lengths. The board-to-board stack heights available include 1.5mm, 2.7mm and 5mm. Of these three, only the

spacer for the 5mm stack would likely be a standard length.

Penn Engineering and Manufacturing (PEM) (www.pemnet.com) makes surface mount spacers with M2.5 internal threads. The product line is called SMTSO (“surface mount technology stand offs”). The shortest standard length offered is 2mm. A custom part with 1.5mm standoff length, M2.5 internal thread, and 5.56mm standoff OD is available from PEM. The Carrier PCB requires a 4.22mm hole and 6.2mm pad to accept these parts.

Other vendors such as RAF Electronic Hardware (www.rafhdwe.com) offer M2.5 compatible swaged standoffs. Swaged standoffs require the use of a press and anvil at the CM. Their use is common in the industry. The standoff OD and Carrier PCB hole size requirements are different from the PEM SMTSO standoffs described above.

2.3.8. Carrier Connector

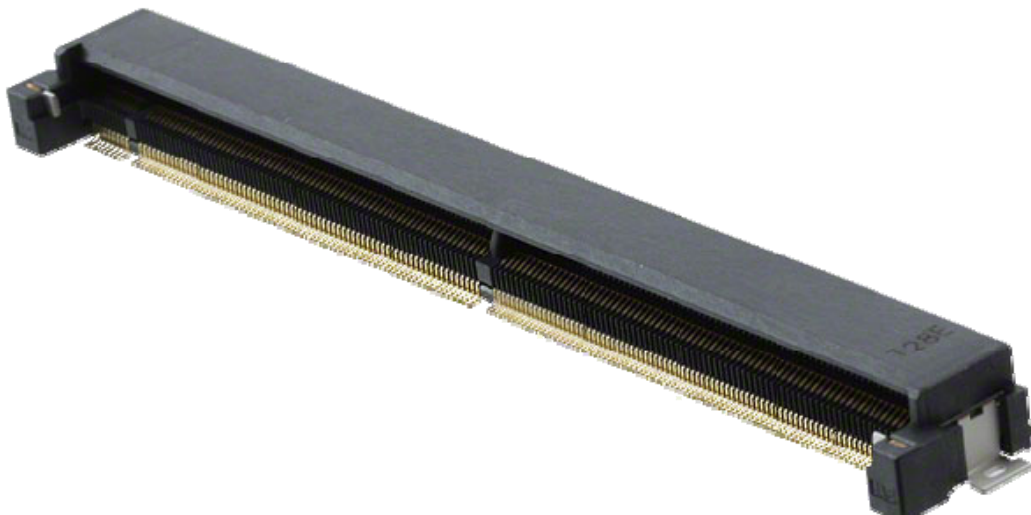


Figure 21: MXM3 Carrier Connector

The Carrier board connector is a 314 pin 0.5mm pitch right angle part designed for use with 1.2mm thick mating PCBs with the appropriate edge finger pattern. The connector is commonly used for MXM3 graphics cards. The *SMARC Module* uses the connector in a way quite different from the *MXM3* usage.

<i>Vender</i>	<i>Vendor P/N</i>	<i>Stack Height</i>	<i>Body Height</i>	<i>Contact Plating</i>	<i>Pin Style</i>	<i>Body Color</i>
<i>Foxconn</i>	<i>AS0B821-S43B - *H</i>	<i>1.5mm</i>	<i>4.3mm</i>	<i>Flash</i>	<i>Std</i>	<i>Black</i>
<i>Foxconn</i>	<i>AS0B821-S43N - *H</i>	<i>1.5mm</i>	<i>4.3mm</i>	<i>Flash</i>	<i>Std</i>	<i>Ivory</i>
<i>Foxconn</i>	<i>AS0B826-S43B - *H</i>	<i>1.5mm</i>	<i>4.3mm</i>	<i>10 u-in</i>	<i>Std</i>	<i>Black</i>
<i>Foxconn</i>	<i>AS0B826-S43N - *H</i>	<i>1.5mm</i>	<i>4.3mm</i>	<i>10 u-in</i>	<i>Std</i>	<i>Ivory</i>
<i>Lotes</i>	<i>AAA-MXM-008-P04_A</i>	<i>1.5mm</i>	<i>4.3mm</i>	<i>Flash</i>	<i>Std</i>	<i>Tan</i>
<i>Lotes</i>	<i>AAA-MXM-008-P03</i>	<i>1.5mm</i>	<i>4.3mm</i>	<i>15 u-in</i>	<i>Std</i>	<i>Tan</i>
<i>Speedtech</i>	<i>B35P101-02111-H</i>	<i>1.56mm</i>	<i>4.0mm</i>	<i>Flash</i>	<i>Std</i>	<i>Black</i>
<i>Speedtech</i>	<i>B35P101-02011-H</i>	<i>1.56mm</i>	<i>4.0mm</i>	<i>Flash</i>	<i>Std</i>	<i>Tan</i>
<i>Speedtech</i>	<i>B35P101-02112-H</i>	<i>1.56mm</i>	<i>4.0mm</i>	<i>10 u-in</i>	<i>Std</i>	<i>Black</i>
<i>Speedtech</i>	<i>B35P101-02012-H</i>	<i>1.56mm</i>	<i>4.0mm</i>	<i>10 u-in</i>	<i>Std</i>	<i>Tan</i>
<i>Speedtech</i>	<i>B35P101-02113-H</i>	<i>1.56mm</i>	<i>4.0mm</i>	<i>15 u-in</i>	<i>Std</i>	<i>Black</i>
<i>Speedtech</i>	<i>B35P101-02013-H</i>	<i>1.56mm</i>	<i>4.0mm</i>	<i>15 u-in</i>	<i>Std</i>	<i>Tan</i>
<i>Aces</i>	<i>91781-314 2 8-001</i>	<i>2.7mm</i>	<i>5.2mm</i>	<i>3 u-in</i>	<i>Std</i>	<i>Black</i>

<i>Vender</i>	<i>Vendor P/N</i>	<i>Stack Height</i>	<i>Body Height</i>	<i>Contact Plating</i>	<i>Pin Style</i>	<i>Body Color</i>
<i>Foxconn</i>	<i>AS0B821-S55B - *H</i>	<i>2.7mm</i>	<i>5.5mm</i>	<i>Flash</i>	<i>Std</i>	<i>Black</i>
<i>Foxconn</i>	<i>AS0B821-S55N - *H</i>	<i>2.7mm</i>	<i>5.5mm</i>	<i>Flash</i>	<i>Std</i>	<i>Ivory</i>
<i>Foxconn</i>	<i>AS0B826-S55B - *H</i>	<i>2.7mm</i>	<i>5.5mm</i>	<i>10 u-in</i>	<i>Std</i>	<i>Black</i>
<i>Foxconn</i>	<i>AS0B826-S55N - *H</i>	<i>2.7mm</i>	<i>5.5mm</i>	<i>10 u-in</i>	<i>Std</i>	<i>Ivory</i>
<i>Speedtech</i>	<i>B35P101-02121-H</i>	<i>2.76mm</i>	<i>5.2mm</i>	<i>Flash</i>	<i>Std</i>	<i>Black</i>
<i>Speedtech</i>	<i>B35P101-02021-H</i>	<i>2.76mm</i>	<i>5.2mm</i>	<i>Flash</i>	<i>Std</i>	<i>Tan</i>
<i>Speedtech</i>	<i>B35P101-02122-H</i>	<i>2.76mm</i>	<i>5.2mm</i>	<i>10 u-in</i>	<i>Std</i>	<i>Black</i>
<i>Speedtech</i>	<i>B35P101-02022-H</i>	<i>2.76mm</i>	<i>5.2mm</i>	<i>10 u-in</i>	<i>Std</i>	<i>Tan</i>
<i>Speedtech</i>	<i>B35P101-02123-H</i>	<i>2.76mm</i>	<i>5.2mm</i>	<i>15 u-in</i>	<i>Std</i>	<i>Black</i>
<i>Speedtech</i>	<i>B35P101-02023-H</i>	<i>2.76mm</i>	<i>5.2mm</i>	<i>15 u-in</i>	<i>Std</i>	<i>Tan</i>
<i>Foxconn</i>	<i>AS0B821-S78B - *H</i>	<i>5.0mm</i>	<i>7.8mm</i>	<i>Flash</i>	<i>Std</i>	<i>Black</i>
<i>Foxconn</i>	<i>AS0B821-S78N - *H</i>	<i>5.0mm</i>	<i>7.8mm</i>	<i>Flash</i>	<i>Std</i>	<i>Ivory</i>
<i>Foxconn</i>	<i>AS0B826-S78B - *H</i>	<i>5.0mm</i>	<i>7.8mm</i>	<i>10 u-in</i>	<i>Std</i>	<i>Black</i>
<i>Foxconn</i>	<i>AS0B826-S78N - *H</i>	<i>5.0mm</i>	<i>7.8mm</i>	<i>10 u-in</i>	<i>Std</i>	<i>Ivory</i>
<i>Yamaichi</i> ⁽¹⁾	<i>CN113-314-2001</i>	<i>5.0mm</i>	<i>7.8mm</i>	<i>0.3 u-meter</i>	<i>Std</i>	<i>Black</i>

Other, taller stack heights may be available from these and other vendors. Stack heights as tall as 11mm are shown on the Aces web site.

Note:

1. *Yamaichi CN113-314-2001* is automotive grade.
2. The vendor drawings for the connectors listed above show a PCB footprint pattern for use with an MXM3 graphics card. This footprint, and the associated pin numbering, is not suitable for *SMARC* use. The MXM3 standard gangs large groups of pins together to provide ~80W capable power paths needed for X86 graphics cards. The *SMARC* module “ungangs” these pins to allow more signal pins. Footprint and pin numbering information for application of this 314 pin connector to *SMARC* is given in the sections below.

2.3.9. Module Cooling Solution—Heat Spreader

A standard heat-spreader plate for use with the *SMARC* 82mm x 50mm form factor is described below. A standard heat spreader plate definition allows the customer to use a Module from multiple vendors.

The heat spreader plate is sized at 82mm x 42mm x 3mm, and sits 3mm above the *SMARC* Module. The heat spreader plate ‘Y’ dimension is deliberately set at 42mm and not 50mm, to allow the plate to clear the *SMARC MXM3* connector. The plate is shown in the figures below.

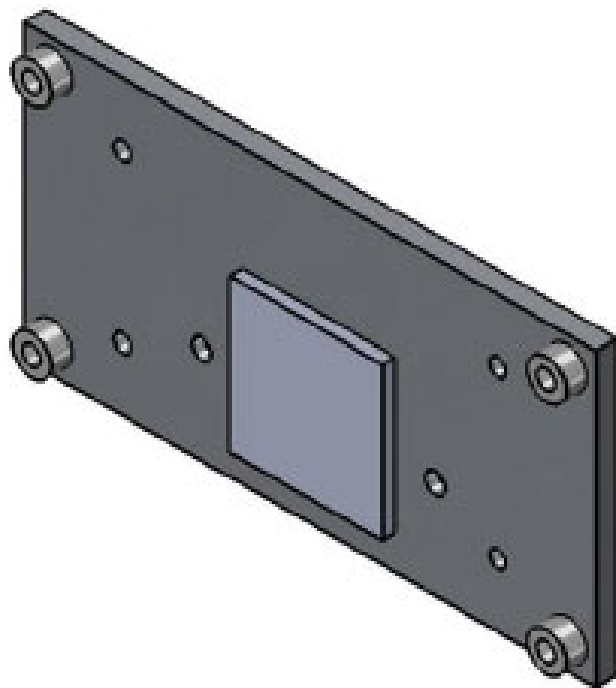



Figure 22: Heat Spreader

The internal square in the figure above is a thermally conductive and mechanically compliant Thermal Interface Material (or “TIM”). The exact X-Y position and Z thickness details of the TIM vary from design to design.

The two holes immediately adjacent to the TIM serve to secure the PCB in the SOC area and compress the TIM.

The four interior holes that are further from the center allow a heat sink to be attached to the heat spreader plate, or they can be used to secure the heat spreader plate to a chassis wall that serves as a heat sink.

Dimensions and further details may be found in the following figure.

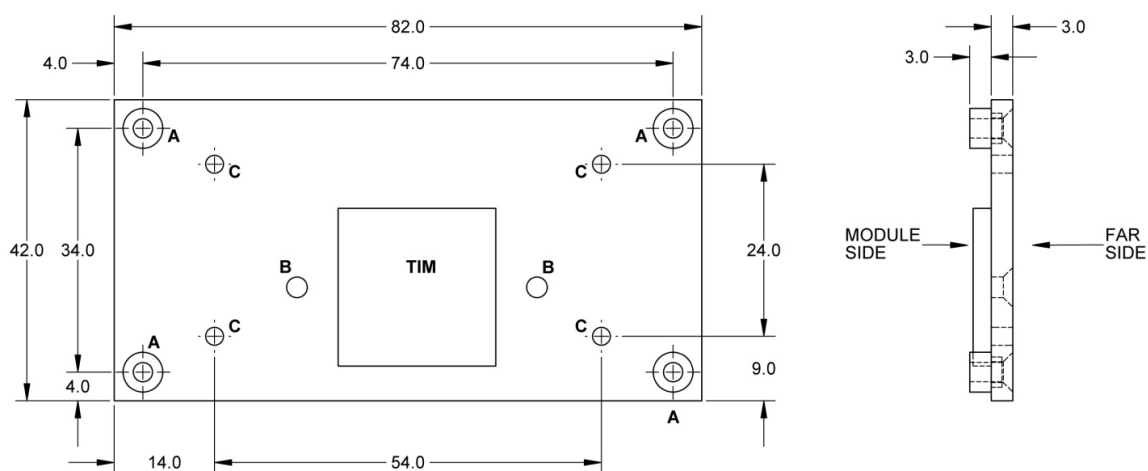

Dimensions in the figure above are in millimeters. “TIM” stands for “Thermal Interface Material”. The TIM takes up the small gap between the SOC top and the Module - facing side of the heat spreader.

Hole Reference	Description	Size
A	SMARC Module corner mounting holes Spacing determined by SMARC specification for 82mm x 50mm Modules. Typically these holes have 3mm length press fit or swaged clearance standoffs on the Module side. These holes are typically countersunk on the far side of the plate, to allow the heat spreader plate to be flush with a secondary heat sink.	Hole size depends on standoffs used. Standoff diameter must be compatible with SMARC Module mounting hole pad and hole size (6.0mm pads, 2.7mm holes on the Module). The holes and standoffs are for use with M2.5 screw hardware. The far side of these holes are counter-sunk to allow the attachment screw to be flush with the far side heat spreader surface.
B	Not Defined	
C	Fixed location holes to allow the attachment of a heat sink to the heat spreader, or to allow the heat spreader to be secured to a chassis wall that can serve as a heat sink.	M3 threaded holes

2.4 Electrical Specifications

2.4.1. Supply Voltage

The *SMARC-iMX8MM* module operates over an input voltage range of 3.0V to 5.25V. Power is provided from the carrier through 10 power pins as defined by the *SMARC* specification.

Caution! A single 5V or 3.3V DC input is recommended.

2.4.2. RTC/Backup Voltage

3.0V RTC backup power is provided through the VDD_RTC pin from the carrier board. This connection provides back up power to the module PMIC. The RTC is powered via the primary system 3.3V supply during normal operation and via the VBAT power input, if it is present, during power-off.

2.4.3. No Separate Standby Voltage

The *SMARC-iMX8MM* does not have a standby power rail. Standby operation is powered through the main supply voltage rail, as defined in the *SMARC* specification.

2.4.4. Module I/O Voltage

The *SMARC-iMX8MM* module supports 1.8V (*SMARC* v2.0 compliant) level I/O voltage depending on the part number that users selected.

2.4.5. MTBF

The *SMARC-iMX8MM* System MTBF (hours) : >100,000 hours

The above MTBF (Mean Time Between Failure) values were calculated using a combination of manufacturer's test data, if the data was available, and a Bellcore calculation for the remaining parts. The Bellcore calculation used is "Method 1 Case 1". In that particular method the components are assumed to be operating at a 50 % stress level in a 40° C ambient environment and the system is assumed to have not been burned in. Manufacturer's data has been used wherever possible. The manufacturer's data, when used, is specified at 50°C, so in that sense the following results are slightly conservative. The MTBF values shown below are for a 40°C in an office or telecommunications environment. Higher temperatures and other environmental stresses (extreme altitude, vibration, salt water exposure, etc.) lower MTBF values.

2.4.6. Power Consumption

The power consumption values listed in this document were measured under a controlled environment. The hardware used for testing includes an *SMARC-iMX8MM* module, carrier board is *EVK-STD-CARRIER-S20* with 7-inch LVDS display, SD card and USB keyboard. The carrier board was powered externally by a power supply unit so that it does not influence the power consumption value that is measured for the module. The USB keyboard was detached once the module was configured within the OS. All recorded values were averaged over a 30 second time period. The modules were cooled by the heatspreader specific to the module variants.

Each module was measured while running Yocto Sumo. To measure the worst case power consumption, the cooling solution was removed and the CPU core temperature was allowed to run between 95° and 100°C at 100% workload. The peak current value was then recorded. This value should be taken into consideration when designing the system's power supply to ensure that the power supply is sufficient during worst case scenarios.

Power consumption values were recorded during the following stages:

Yocto Sumo

- Desktop Idle
- 100% CPU workload
- 100% CPU workload at approximately 100°C peak power consumption

Note: With the linux stress tool, we stressed the CPU to maximum frequency.

The table below provides additional information about the different variants offered by the *SMARC-iMX8MM*.

<i>SMARC Part Number</i>	<i>Desktop Idle</i>	<i>100% workload</i>	<i>Max. power consumption (Amp/Watts)</i>
<i>SMARC-iMX8MM-6-2G</i>	<i>TBD</i>	<i>TBD</i>	<i>TBD</i>
<i>SMARC-iMX8MM-6-4G</i>	<i>TBD</i>	<i>TBD</i>	<i>TBD</i>
<i>SMARC-iMX8MM-4-2G</i>	<i>TBD</i>	<i>TBD</i>	<i>TBD</i>
<i>SMARC-iMX8MM-4-4G</i>	<i>TBD</i>	<i>TBD</i>	<i>TBD</i>

2.5 Environmental Specifications

2.5.1. Operating Temperature

The *SMARC-iMX8MM* module operates from 0°C to 80°C air temperature, without a passive heat sink arrangement. Industrial temperature (-40°C ~85°C is also available with different part number *SMARC-iMX8MM-X-XX-I*).

2.5.2. Humidity

Operating: 10% to 90% RH (non-condensing).

Non-operating: 5% to 95% RH (non-condensing).

2.5.3. ROHS/REACH Compliance

The *SMARC-iMX8MM* module is compliant to the *2002/95/EC RoHS* directive and *REACH* directive.

Chapter 3

Connector PinOut

This Chapter gives detail pinout of *SMARC-iMX8MM* golden finger edge connector.

Section include :

- *SMARC-iMX8MM* Connector Pin Mapping

Chapter 3 Connector Pinout

The Module pins are designated as P1 – P156 on the Module Primary (Top) side, and S1 – S158 on the Module Secondary (Bottom) side. There are total of 314 pins on the Module. The connector is sometimes identified as a 321 pin connector, but 7 pins are lost to the key (4 on the primary side and 3 on secondary side).

The Secondary (Bottom) side faces the Carrier board when a normal or standard Carrier connector is used.

The *SMARC-iMX8MM* module pins are deliberately numbered as P1 – P156 and S1 – S158 for clarity and to differentiate the *SMARC* Module from MXM3 graphics modules, which use the same connector but use the pins for very different functions. MXM3 cards and MXM3 baseboard connectors use different pin numbering scheme.

3.1 SMARC-iMX8MM Connector Pin Mapping

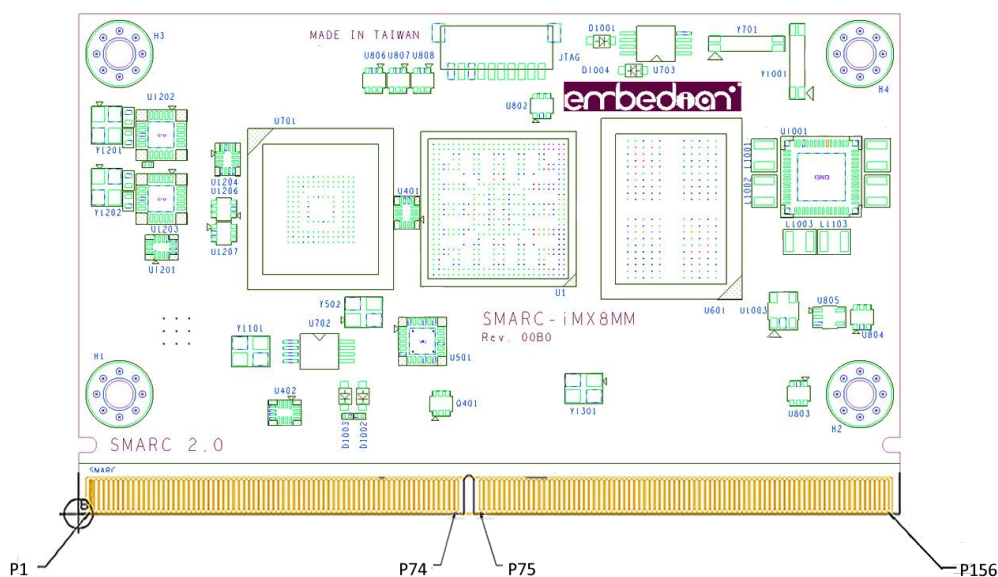


Figure 23: SMARC-iMX8MM edge finger primary pins

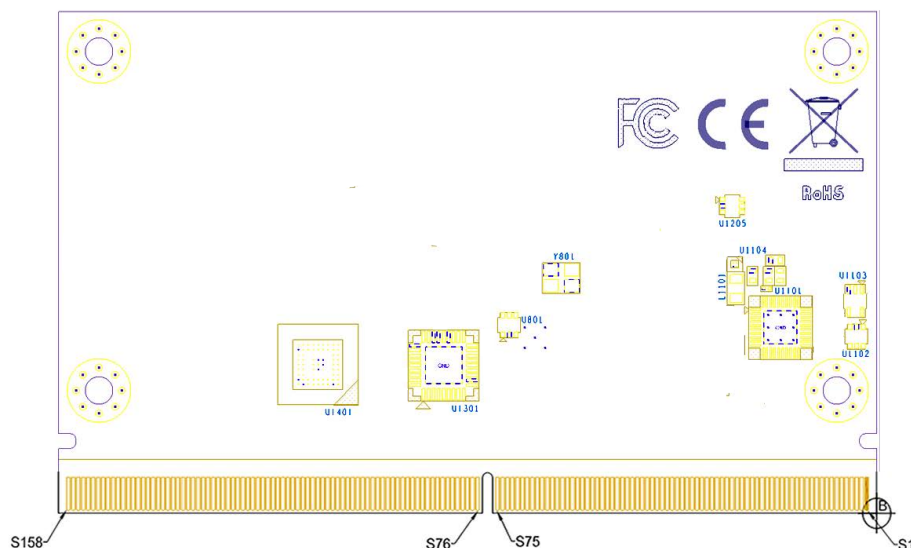


Figure 24: SMARC-iMX8MM edge finger secondary pins

The next tables describe each pin, its properties, and its use on the module and development board.

The “*SMARC Edge Finger*” column shows the connection of the signals defined in the *SMARC* specification. The “*NXP i.MX8M Mini CPU*” column shows the connection of the CPU signals on the module. The format of this column is “*Ball/Mode/Signal Name*” where “*Signal Name*” is the chip where the signals are connected, and “*Ball*” is the name of the pad where the signals are connected as they are defined in the *i.MX8M Mini* processor datasheet.

Pinout Legend

I	<i>Input</i>
O	<i>Output</i>
I/O	<i>Input or output</i>
P	<i>Power</i>
AI	<i>Analogue input</i>
AO	<i>Analogue output</i>
AIO	<i>Analogue Input or analogue output</i>
OD	<i>Open Drain Signal</i>
#	<i>Low level active signal</i>

SMARC Edge Finger		NXP i.MX8M Mini CPU		Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name	
P1	SMB_ALERT_1V8#				Not used
P2	GND			P	Ground
P3	CSI1_CK+	B16		MIPI_CSI_CLK_P	CSI1 differential clock inputs
P4	CSI1_CK-	A16		MIPI_CSI_CLK_N	CSI1 differential clock inputs
P5	GBE1_SDP				Not used
P6	GBE0_SDP				Not used
P7	CSI1_RX0+	B14		MIPI_CSI_D0_P	CSI1 differential data inputs 0 (positive)
P8	CSI1_RX0-	A14		MIPI_CSI_D0_N	CSI1 differential data input 0 (negative)
P9	GND			P	Ground
P10	CSI1_RX1+	B15		MIPI_CSI_D1_P	CSI1 differential data input 1 (positive)
P11	CSI1_RX1-	A15		MIPI_CSI_D1_N	CSI1 differential data inputs 1 (negative)
P12	GND			P	Ground
P13	CSI1_RX2+	B17		MIPI_CSI_D2_P	CSI1 differential data inputs 2 (positive)
P14	CSI1_RX2-	A17		MIPI_CSI_D2_N	CSI1 differential data inputs 2 (negative)
P15	GND			P	Ground
P16	CSI1_RX3+	B18		MIPI_CSI_D3_P	CSI1 differential data inputs 3 (positive)
P17	CSI1_RX3-	A18		MIPI_CSI_D3_N	CSI1 differential data inputs 3 (negative)
P18	GND			P	Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P18	GND				P	Ground
P19	GbE0_MDI3-				AIO	Qualcomm AR8035 Differential Transmit/Receive Negative Channel 3
P20	GbE0_MDI3+				AIO	Qualcomm AR8035 Differential Transmit/Receive Positive Channel 3
P21	GbE0_LINK100#				O OD	Link Speed Indication LED for 100Mbps Could be able to sink 24mA or more Carrier LED current
P22	GbE0_LINK1000#				O OD	Link Speed Indication LED for 1000Mbps Could be able to sink 24mA or more Carrier LED current
P23	GbE0_MDI2-				AIO	Qualcomm AR8035 Differential Transmit/Receive Negative Channel 2
P24	GbE0_MDI2+				AIO	Qualcomm AR8035 Differential Transmit/Receive Positive Channel 2
P25	GbE0_LINK_ACT#				O OD	Link / Activity Indication LED Driven low on Link (10, 100 or 1000 mbps) Blinks on Activity Could be able to sink 24mA or more Carrier LED current

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P26	GbE0_MDI1-				AIO	Qualcomm AR8035 Differential Transmit/Receive Negative Channel 1
P27	GbE0_MDI1+				AIO	Qualcomm AR8035 Differential Transmit/Receive Positive Channel 1
P28	GbE0_CTREF				O	Qualcomm AR8035 Center tap reference voltage for GBE Carrier board Ethernet magnetic
P29	GbE0_MDIO-				AIO	Qualcomm AR8035 Differential Transmit/Receive Negative Channel 0
P30	GbE0_MDIO+				AIO	Qualcomm AR8035: Differential Transmit/Receive Positive Channel 0

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P31	SPI0_CS1#	AG14	ALT5	GPIO1_IO00__ GPIO1_IO0	O	SPI0 Master Chip Select 1 output.
P32	GND				P	Ground
P33	SDIO_WP	AA27	ALT5	SD2_WP__ GPIO2_IO20	I	Write Protect
P34	SDIO_CMD	W24	ALT0	SD2_CMD__ SD2_CMD	IO	Command Line
P35	SDIO_CD#	AA26	ALT5	SD2_CD__ GPIO2_IO12	I	Card Detect
P36	SDIO_CLK	W23	ALT0	SD2_CLK__ SD2_USDHC2_ CLK	O	Clock
P37	SDIO_PWR_EN	AB26	ALT5	SD2_RESET_B__ GPIO2_IO19	O	SD card power enable
P38	GND				P	Ground
P39	SDIO_D0	AB23	ALT0	SD2_DATA0__ SD2_USDHC2_ DATA0	IO	Data path
P40	SDIO_D1	AB24	ALT0	SD2_DATA1__ SD2_USDHC2_ DATA1	IO	Data path
P41	SDIO_D2	V24	ALT0	SD2_DATA2__ SD2_USDHC2_ DATA2	IO	Data path
P42	SDIO_D3	V23	ALT0	SD2_DATA3__ SD2_USDHC2_ DATA3	IO	Data path

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P43	SPI0_CS0#	A6	ALT5	ECSPI2_SS0__ GPIO5_IO13	O	SPI0 Master Chip Select 0 output,
P44	SPI0_CK	E6	ALT0	ECSPI2_SCLK__ ECSPI2_SCLK	O	SPI0 Master Clock output
P45	SPI0_DIN	A8	ALT0	ECSPI2_MISO__ ECSPI2_MISO	I	SPI0 Master Data input (input to CPU, output from SPI device)
P46	SPI0_DO	B8	ALT0	ECSPI2_MOSI__ ECSPI2_MOSI	O	SPI0 Master Data output (output from CPU, input to SPI device)
P47	GND				P	Ground
P48	SATA_TX+					Not used
P49	SATA_TX-					Not used
P50	GND				P	Ground
P51	SATA_RX+					Not used
P52	SATA_RX-					Not used
P53	GND				P	Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P54	ESPI1_CS0#	E15	ALT5	UART2_TXD__ GPIO5_IO25	O	SPI1 Master Chip Select 0 output
P55	ESPI1_CS1#	P27	ALT5	NAND_CE1_B__ GPIO3_IO2	O	SPI1 Master Chip Select 1 output
P56	ESPI1_CK	E14	ALT1	UART1_RXD__ ECSPi3_SCLK	O	SPI1 Master Clock output
P57	ESPI1_IO_1	F15	ALT1	UART2_RXD__ ECSPi3_MISO	I	SPI1 Master Data input (input to CPU, output from SPI device)
P58	ESPI1_IO_0	F13	ALT1	UART1_TXD__ ECSPi3_MOSI	O	SPI1 Master Data output (output from CPU, input to SPI device)
P59	GND				P	Ground
P60	USB0+	B22		USB1_DP	AIO	Differential USB0 data
P61	USB0-	A22		USB1_DN	AIO	Differential USB0 data
P62	USB0_EN_OC#	M26	ALT5	NAND_DATA04__ GPIO3_IO10	IO OD	Pulled low by Module OD driver to disable USB0 power. Pulled low by Carrier OD driver to indicate over-current situation If this signal is used, a pull-up is required on the Carrier

SMARC Edge Finger		NXP i.MX8M Mini CPU		Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name	
P63	USB0_VBUS_DET	F22		Turn on USB_OTG_VBUS	I USB host power detection, when this port is used as a device
P64	USB0_OTG_ID	AD10		GPIO1_IO10__ USB1_ID	I USB OTG ID input, active high
P65	USB1+				IO Differential USB1 data pair (from USB2514)
P66	USB1-				IO Differential USB1 data pair (from USB2514)
P67	USB1_EN_OC#	From USB2514			IO OD Pulled low by Module OD driver to disable USB0 power Pulled low by Carrier OD driver to indicate over-current situation If this signal is used, a pull-up is required on the Carrier
P68	GND				P Ground
P69	USB2+				IO Differential USB2 data pair (from USB2514)
P70	USB2-				IO Differential USB2 data pair (from USB2514)

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P71	USB2_EN_OC#	From USB2514			IO OD	Pulled low by Module OD driver to disable USB0 power Pulled low by Carrier OD driver to indicate over-current situation If this signal is used, a pull-up is required on the Carrier
P72	RSVD					Not used
P73	RSVD					Not used
P74	USB3_EN_OC#	From USB2514			IO OD	Pulled low by Module OD driver to disable USB0 power Pulled low by Carrier OD driver to indicate over-current situation If this signal is used, a pull-up is required on the Carrier

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P75	PCIE_A_RST#	M27	ALT5	NAND_CE2_B__ GPIO3_IO3	O	Reset Signal for external devices.
P76	USB4_EN_OC#	From USB2514				Pulled low by Module OD driver to disable USB0 power Pulled low by Carrier OD driver to indicate over-current situation If this signal is used, a pull-up is required on the Carrier
P77	RSVD					Not used
P78	RSVD					Not used
P79	GND				P	Ground
P80	PCIE_C_REFCK+					Not used
P81	PCIE_C_REFCK-					Not used
P82	GND				P	Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P83	PCIE_A_REFCK+	from PI6CFGL201BZDIE			O	Differential PCI Express Reference Clock Signals for Lanes A
P84	PCIE_A_REFCK-	from PI6CFGL201BZDIE			O	Differential PCI Express Reference Clock Signals for Lanes A
P85	GND				P	
P86	PCIE_A_RX+	B19		PCIE_RXN_P	I	Differential PCIe Link A receive data pair 0
P87	PCIE_A_RX-	A19		PCIE_RXN_N	I	Differential PCIe Link A receive data pair 0
P88	GND				P	Ground
P89	PCIE_A_TX+	B20		PCIE_TXN_P	O	Differential PCIe Link A transmit data pair 0
P90	PCIE_A_TX-	A20		PCIE_TXN_N	O	Differential PCIe Link A transmit data pair 0
P91	GND				P	Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P92	HDMI_D2+ / DP1_LANE0+					Not used
P93	HDMI_D2- / DP1_LANE0-					Not used
P94	GND				P	Ground
P95	HDMI_D1+ / DP1_LANE1+					Not used
P96	HDMI_D1- / DP1_LANE1-					Not used
P97	GND				P	Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU		Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name	
P98	HDMI_D0+/ DP1_LANE2+				Not used
P99	HDMI_D0-/ DP1_LANE2-				Not used
P100	GND				P Ground
P101	HDMI_CK+/ DP1_LANE3+				Not used
P102	HDMI_CK-/ DP1_LANE3-				Not used
P103	GND				P Ground
P104	HDMI_HPD/ DP1_HDP				Not used
P105	HDMI_CTRL_CK/ DP1_AUX+				Not used
P106	HDMI_CTRL_DAT/ DP1_AUX-				Not used
P107	DP1_AUX_SEL				Not used

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P108	GPIO0 / CAM0_PWR#	AD15	ALT5	SAI5_MCLK__ GPIO3_IO25	IO	Camera 0 Power Enable, active low output
P109	GPIO1 / CAM1_PWR#	AB15	ALT5	SAI5_RXFS__ GPIO3_IO19	IO	Camera 1 Power Enable, active low output
P110	GPIO2 / CAM0_RST#	AC15	ALT5	SAI5_RXC__ GPIO3_IO20	IO	Camera 0 Reset, active low output
P111	GPIO3 / CAM1_RST#	AD18	ALT5	SAI5_RXD0__ GPIO3_IO21	IO	Camera 1 Reset, active low output
P112	GPIO4 / HDA_RST#	AC14	ALT5	SAI5_RXD1__ GPIO3_IO22	IO	HD Audio Reset, active low output
P113	GPIO5 / PWM_OUT	AF6	ALT5	SPDIF_TX__ GPIO5_IO3	IO	PWM output
P114	GPIO6 / TACHIN	AG6	ALT5	SPDIF_RX__ GPIO5_IO4	IO	Tachometer input (used with the GPIO5 PWM)
P115	GPIO7 / PCAM_FLD	AD13	ALT5	SAI5_RXD2__ GPIO3_IO23	IO	PCAM_FLD (Field) signal input
P116	GPIO8 / CAN0_ERR#	AC13	ALT5	SAI5_RXD3__ GPIO3_IO24	IO	CAN0 Error signal, active low input
P117	GPIO9 / CAN1_ERR#	AC18	ALT5	SAI1_TXC__ GPIO4_IO11	IO	CAN1 Error signal, active low input
P118	GPIO10	AB19	ALT5	SAI1_TXFS__ GPIO4_IO10	IO	
P119	GPIO11	AB18	ALT5	SAI1_MCLK__ GPIO4_IO20	IO	
P120	GND				P	Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P121	I2C_PM_CK	E9	ALT0	I2C1_SCL__ I2C1_SCL	IO OD	Power management I2C bus clock
P122	I2C_PM_DAT	F9	ALT0	I2C1_SDA__ I2C1_SDA	IO OD	Power management I2C bus data
P123	BOOT_SEL0#	AF12	ALT0	GPIO1_IO05__ GPIO1_IO5	I	SYSBOOT and Line De-multiplexer Logic Pulled up on Module. Driven by OD part on Carrier.
P124	BOOT_SEL1#	AG11	ALT0	GPIO1_IO06__ GPIO1_IO6	I	SYSBOOT and Line De-multiplexer Logic Pulled up on Module. Driven by OD part on Carrier.
P125	BOOT_SEL2#	AF11	ALT0	GPIO1_IO07__ GPIO1_IO7	I	SYSBOOT and Line De-multiplexer Logic Pulled up on Module. Driven by OD part on Carrier.
P126	RESET_OUT#				O	General purpose reset output to Carrier board.

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P127	RESET_IN#				I	Reset input from Carrier board. Carrier drives low to force a Module reset, floats the line otherwise Pulled up on Module. Driven by OD part on Carrier.
P128	POWER_BTN#				I	Power-button input from carrier board. Carrier to float the line in in-active state. Active low, level sensitive. It is de-bounced on the Module Pulled up on Module. Driven by OD part on Carrier.
P129	SER0_TX	AC19	ALT4	SAI2_RXFS__ UART1_DCE_TX	O	Asynchronous serial port data out
P130	SER0_RX	AB22	ALT4	SAI2_RXC__ UART1_DCE_RX	I	Asynchronous serial port data in
P131	SER0_RTS#	E18	ALT1	UART3_RXD__ UART1_DCE_CTS_B	O	Request to Send handshake line for SER0
P132	SER0_CTS#	D18	ALT1	UART3_TXD__ UART1_DCE_RTS_B	I	Clear to Send handshake line for SER0
P133	GND				P	Ground
P134	SER1_TX	F18	ALT0	UART4_TXD__ UART4_DCE_TX	O	Asynchronous serial port data out
P135	SER1_RX	F19	ALT0	UART4_RXD__ UART4_DCE_RX	I	Asynchronous serial port data in

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P136	SER2_TX	B7	ALT1	ECSPI1_TXD__ UART3_DCE_TX		Asynchronous serial port data out
P137	SER2_RX	D6	ALT1	ECSPI1_SCLK__ UART3_DCE_RX		Asynchronous serial port data in
P138	SER2_RTS#	A7	ALT1	ECSPI2_MOSI__ UART3_DCE_CTS_B		Request to Send handshake line for SER2
P139	SER2_CTS#	B6	ALT1	ECSPI2_SCLK__ UART3_DCE_RTS_B		Clear to Send handshake line for SER2
P140	SER3_TX	AG6	ALT4	SAI3_TXC__ UART2_DCE_TX	O	Asynchronous serial port data out
P141	SER3_RX	AC6	ALT4	SAI3_TXFS__ UART2_DCE_RX	I	Asynchronous serial port data in
P142	GND				P	Ground
P143	CAN0_TX				O	CAN0 Transmit output from MCP2515T
P144	CAN0_RX				I	CAN0 Receive input from MCP2515T
P145	CAN1_TX				O	CAN1 Transmit output from MCP2515T
P146	CAN1_RX				I	CAN1 Receive input from MCP2515T

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
P147	VDD_IN				P	Power in
P148	VDD_IN				P	Power in
P149	VDD_IN				P	Power in
P150	VDD_IN				P	Power in
P151	VDD_IN				P	Power in
P152	VDD_IN				P	Power in
P153	VDD_IN				P	Power in
P154	VDD_IN				P	Power in
P155	VDD_IN				P	Power in
P156	VDD_IN				P	Power in

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
S1	CS1_TX+/ I2C_CAM1_CK	D13	ALT0	I2C4_SCL__ I2C4_SCL	IO OD	Camera1 I2C bus clock
S2	CS1_TX-/ I2C_CAM1_DAT	E13	ALT0	I2C4_SDA__ I2C4_SDA	IO OD	Camera1 I2C bus data
S3	GND				P	Ground
S4	RSVD					Not used
S5	CSIO_TX+ / I2C_CAM0_CK	D10	ALT0	I2C2_SCL__ I2C2_SCL	IO OD	Camera0 I2C bus clock
S6	CAM_MCK	AC9	ALT6	GPIO1_IO14__ CCMSRCGPCMIX _CLKO1	O	Master clock output for CSI camera support
S7	CSIO_TX- / I2C_CAM0_DAT	D9	ALT0	I2C2_SDA__ I2C2_SDA	IO OD	Camera0 I2C bus data
S8	CSIO_CK+					Not used
S9	CSIO_CK-					Not used
S10	GND				P	Ground
S11	CSIO_RX0+					Not used
S12	CSIO_RX0-					Not used
S13	GND				P	Ground
S14	CSIO_RX1+					Not used
S15	CSIO_RX1-					Not used
S16	GND				P	Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU		Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name	
S17	GbE1_MDI0+				Not used
S18	GbE1_MDI0-				Not used
S19	GbE1_LINK100#				Not used
S20	GbE1_MDI1+				Not used
S21	GbE1_MDI1-				Not used
S22	GbE1_LINK1000#				Not used
S23	GbE1_MDI2+				Not used
S24	GbE1_MDI2-				Not used
S25	GND				P Ground
S26	GbE1_MDI3+				Not used
S27	GbE1_MDI3-				Not used
S28	GbE1_CTREF				Not used
S29	PCIE_D_TX+				Not used
S30	PCIE_D_TX-				Not used
S31	GBE1_LINK_ACK#				Not used
S32	PCIE_D_RX+				Not used
S33	PCIE_D_RX-				Not used
S34	GND				Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
S35	USB4+					Differential USB4 data pair (from USB2514)
S36	USB4-					Differential USB4 data pair (from USB2514)
S37	USB3_VBUS_DET					Not used
S38	AUDIO_MCK	AD19	ALT0	SAI2_MCLK__ SAI2_MCLK	O	Master clock output to Audio codecs
S39	I2S0_LRCK	AD23	ALT0	SAI2_TXFS__ SAI2_TX_SYNC	IO	Left& Right audio synchronization clock
S40	I2S0_SDOOUT	AC22	ALT0	SAI2_TXD0__ SAI2_TX_DATA0	O	Digital audio Output
S41	I2S0_SDIN	AC24	ALT0	SAI2_RXD0__ SAI2_RX_DATA0	I	Digital audio Input
S42	I2S0_CK	AD22	ALT0	SAI2_TXC__ SAI2_TX_BCLK	IO	Digital audio clock
S43	ESPI_ALERT0#					Not used
S44	ESPI_ALERT1#					Not used
S45	RSVD					Not used
S46	RSVD					Not used
S47	GND				G	Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
S48	I2C_GP_CK	E10	ALT0	I2C3_SCL__ I2C3_SCL	IO OD	Port1 of TCA9546 General purpose I2C bus clock
S49	I2C_GP_DAT	F10	ALT0	I2C3_SDA__ I2C3_SDA	IO OD	Port1 of TCA9546 General purpose I2C bus clock
S50	HDA_SYNC/ I2S2_LRCK	AG8	ALT0	SAI3_RXFS__ SAI3_RX_SYNC	IO	Left& Right audio synchronization clock
S51	HDA_SDO/ I2S2_SDOOUT	AF6	ALT0	SAI3_TXD__ SAI3_TX_DATA0	O	Digital audio Output
S52	HDA_SDI/ I2S2_SDIN	AF7	ALT0	SAI3_RXD__ SAI3_RX_DATA0	I	Digital audio Input
S53	HAD_CK/ I2S2_CK	AG7	ALT0	SAI3_RXC__ SAI3_RX_BCLK	IO	Digital audio clock
S54	SATA_ACT#					Not used
S55	USB5_EN_OC#					Not used
S56	ESPI_IO_2					Not used
S57	ESPI_IO_3					Not used
S58	ESPI_RESET#					Not used
S59	USB5+					Not used
S60	USB5-					Not used
S61	GND				P	Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
S62	USB3_SSTX+					Not used
S63	USB3_SSTX-					Not used
S64	GND				P	Ground
S65	USB3_SSRX+					Not used
S66	USB3_SSRX-					Not used
S67	GND				P	Ground
S68	USB3+					Differential USB3 data pair (from USB2514)
S69	USB3-					Differential USB3 data pair (from USB2514)
S70	GND				P	Ground
S71	USB2_SSTX+					Not used
S72	USB2_SSTX--					Not used
S73	GND				P	Ground
S74	USB2_SSRX+					Not used
S75	USB2_SSRX-					Not used

SMARC Edge Finger		NXP i.MX8M Mini CPU		Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name	
S76	PCIE_B_RST#				Not used
S77	PCIE_C_RST#				Not used
S78	PCIE_C_RX+				Not used
S79	PCIE_C_RX-				Not used
S80	GND				P Ground
S81	PCIE_C_TX+				Not used
S82	PCIE_C_TX-				Not used
S83	GND				P Ground
S84	PCIE_B_REFCK+				Not used
S85	PCIE_B_REFCK-				Not used
S86	GND				P Ground
S87	PCIE_B_RX+				Not used
S88	PCIE_B_RX-				Not used
S89	GND				P Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU		Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name	
S90	PCIE_B_TX+				Not used
S91	PCIE_B_TX-				Not used
S92	GND				P Ground
S93	DPO_LANE0+				Not used
S94	DPO_LANE0-				Not used
S95	DPO_AUX_SEL				Not used
S96	DPO_LANE1+				Not used
S97	DPO_LANE1-				Not used
S98	DPO_HPD				Not used
S99	DPO_LANE2+				Not used
S100	DPO_LANE2-				Not used
S101	GND				P Ground
S102	DPO_LANE3+				Not used
S103	DPO_LANE3-				Not used
S104	USB3_OTG_ID				Not used
S105	DPO_AUX+				Not used
S106	DPO_AUX-				Not used
S107	LCD1_BKLT_EN				Not used

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
S108	LVDS1_CK+ / eDP1_AUX+ / DSI1_CLK+				O	LVDS1 LCD differential clock pairs
S109	LVDS1_CK- / eDP1_AUX- / DSI1_CLK-				O	LVDS1 LCD differential clock pairs
S110	GND				P	Ground
S111	LVDS1_0+ / eDP1_TX0+ / DSI1_D0+				AIO	LVDS1 LCD data channel differential pairs 1
S112	LVDS1_0- / eDP1_TX0- / DSI1_D0-				AIO	LVDS1 LCD data channel differential pairs 1
S113	eDP1_HPD					Not used
S114	LVDS1_1+ / eDP1_TX1+ / DSI1_D1+				AIO	LVDS1 LCD data channel differential pairs 2
S115	LVDS1_1- / eDP1_TX1- / DSI1_D1-				AIO	LVDS1 LCD data channel differential pairs 2
S116	LCD1_VDD_ EN					Not used
S117	LVDS1_2+ / eDP1_TX2+ / DSI1_D2+				AIO	LVDS1 LCD data channel differential pairs 3
S118	LVDS1_2- / eDP1_TX2- / DSI1_D2-				AIO	LVDS1 LCD data channel differential pairs 3
S119	GND				P	Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
S120	LVDS1_3+ / eDP1_TX3+ / DSI1_D3+				AIO	LVDS1 LCD data channel differential pairs 4
S121	LVDS1_3- / eDP1_TX3- / DSI1_D3-				AIO	LVDS1 LCD data channel differential pairs 4
S122	LCD1_BKLT_ PWM					Not used
S123	RSVD					Not used
S124	GND				P	Ground
S125	LVDS0_0+ / eDP0_TX0+ / DSI0_D0+				AIO	LVDS0 LCD data channel differential pairs 1
S126	LVDS0_0- / eDP0_TX0- / DSI0_D0-				AIO	LVDS0 LCD data channel differential pairs 1
S127	LCD_BKLT_EN	AG16	ALT5	SAI1_RXFS_ GPIO4_IO0	O	High enables panel backlight
S128	LVDS0_1+ / eDP0_TX1+ / DSI0_D1+				AIO	LVDS0 LCD data channel differential pairs 2
S129	LVDS0_1- / eDP0_TX1- / DSI0_D1-				AIO	LVDS0 LCD data channel differential pairs 2
S130	GND				P	Ground

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
S131	LVDS0_2+ / eDP0_TX2+ / DSIO_D2+				AIO	LVDS0 LCD data channel differential pairs 3
S132	LVDS0_2- / eDP0_TX2- / DSIO_D2-				AIO	LVDS0 LCD data channel differential pairs 3
S133	LCD_VDD_EN	AF16	ALT5	SAI1_RXC_ GOIO4_IO1	O	High enables panel VDD
S134	LVDS0_CK+ / eDP0_AUX+ / DSIO_CLK+				O	LVDS0 LCD differential clock pairs
S135	LVDS0_CK- / eDP0_AUX- / DSIO_CLK-				O	LVDS0 LCD differential clock pairs
S136	GND				P	Ground
S137	LVDS0_3+ / eDP0_TX3+ / DSIO_D3+				AIO	LVDS0 LCD data channel differential pairs 4
S138	LVDS0_3- / eDP0_TX3- / DSIO_D3-				AIO	LVDS0 LCD data channel differential pairs 4

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
S139	I2C_LCD_CK	D10	ALT0	I2C2_SCL__ I2C2_SCL	IO OD	LCD display I2C bus clock
S140	I2C_LCD_DAT	D9	ALT0	I2C2_SDA__ I2C2_SDA	IO OD	LCD display I2C bus clock
S141	LCD_BKLT_PWM	AF8	ALT1	SPDIF_EXT_CLK__ PWM1_OUT	O	Display backlight PWM control
S142	RSVD					Not used
S143	GND				P	Ground
S144	eDP0_HPD					Not used
S145	WDT_TIME_OUT#	AB9	ALT6	GPIO1_IO15__ CCMSRCGPCMIX_ CLKO2	O	Watchdog-Timer Output
S146	PCIE_WAKE#	K27	ALT5	NAND_CLE__ GPIO3_IO5	I	PCI Express Wake Event: Sideband wake signal asserted by components requesting wakeup.

SMARC Edge Finger		NXP i.MX8M Mini CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
S147	VDD_RTC				P	Low current RTC circuit backup power - 3.0V nominal It is sourced from a Carrier based Lithium cell or Super Cap
S148	LID#	AF10	ALT0	GPIO1_IO09__ GPIO1_IO9	I	Lid open/close indication to Module. Low indicates lid closure (which system may use to initiate a sleep state). Carrier to float the line in in-active state. Active low, level sensitive. Should be de-bounced on the Module Pulled up on Module. Driven by OD part on Carrier.
S149	SLEEP#	AD9	ALT0	GPIO1_IO13__ GPIO1_IO13	I	Sleep indicator from Carrier board. May be sourced from user Sleep button or Carrier logic. Carrier to float the line in in-active state. Active low, level sensitive. Should be de-bounced on the Module. Pulled up on Module. Driven by OD part on Carrier.

SMARC Edge Finger		NXP i.MX8M CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
S150	VIN_PWR_BAD#				I	Power bad indication from Carrier board. Module and Carrier power supplies (other than Module and Carrier power supervisory circuits) shall not be enabled while this signal is held low by the Carrier. Pulled up on Module. Driven by OD part on Carrier.
S151	CHARGING#	AF14	ALT0	GPIO1_IO01__ GPIO1_IO1	I	Held low by Carrier if DC input for battery charger is present. Pulled up on Module. Driven by OD part on Carrier.
S152	CHARGER_PRSENT#	AB10	ALT0	GPIO1_IO12__ GPIO1_IO12	I	Held low by Carrier if DC input for battery charger is present.
S153	CARRIER_STBY#	AD6	ALT5	SAI3_MCLK__ GPIO5_IO2	O	The Module shall drive this signal low when the system is in a standby power state

SMARC Edge Finger		NXP i.MX8M CPU			Type	Description
Pin#	Pin Name	Ball	Mode	Signal Name		
S154	CARRIER_PWR_ON				O	Carrier board circuits (apart from power management and power path circuits) should not be powered up until the Module asserts the CARRIER_PWR_ON signal.
S155	FORCE_RECOV#				I	Pulled up on Module. Driven by OD part on Carrier.
S156	BATLOW#	AG10	ALT0	GPIO1_IO08__ GPIO1_IO8	I	Battery low indication to Module. Carrier to float the line in in-active state. Pulled up on Module. Driven by OD part on Carrier.
S157	TEST#				I	Held low by Carrier to invoke Module SD Boot UP. Pulled up on Module. Driven by OD part on Carrier.
S158	GND				P	Ground

Chapter

4

Power Control Signals between SMARC Module and Carrier

This Chapter points out the handshaking rule between *SMARC* module and carrier.

Section include :

- *SMARC-iMX8MM* Module Power
- Power Signals
- Power Flow and Control Signals Block Diagram
- Power States
- Power Sequences
- Terminations
- Boot Select

Chapter 4 Power Control Signals between SMARC-iMX8MM Module and Carrier

SMARC modules are designed to be driven with a single +3V to +5.25V input power rail. Unlike Q7 module, there is no separate voltage rail for standby power, other than the very low current RTC voltage rail. All module operating and standby power comes from the single set of *VDD_IN* pins. This suits battery power sources well, and is also easy to use with non-battery sources.

SMARC module has specific handshaking rules to the carrier by SMARC hardware specification. To design the carrier board, users need to follow these rules or it might not boot up. Some pull-up and pull-down also need to be cared to make all functions work.

4.1 SMARC-iMX8MM Module Power

4.1.1. Input Voltage / Main Power Rail

The allowable Module DC input voltage range for *SMARC-iMX8MM* is from 3.0V to 5.25V. This voltage is brought in on the *VDD_IN* pins and returned through the numerous *GND* pins on the connector.

Ten pins are allocated to *VDD_IN*. The connector pin current rating is 0.5A per pin. This works out to 5A total for the 10 pins. At the lowest allowed Module input voltage, this would allow up to 16.75W of electrical power to be brought in (with no de-rating on the connector current capability). With a 40% connector current de-rating, up to 10W may be brought in at 3V. *SMARC-iMX8MM* typically consumes 1.5~2W depending on dual or quad cores and is pretty safe in using the connector.

4.1.2. No Separate Standby Voltage

There is no separate voltage rail for standby power, other than the very low current RTC voltage rail. *SMARC-iMX8MM* operating and standby power comes from the single set of *VDD_IN* pins. This suits battery power sources well, and is also easy to use with non-battery sources.

4.1.3. RTC/Backup Voltage

RTC backup power is brought in on the *VDD_RTC* rail. The RTC consumption is typically 15 microA or less. The allowable *VDD_RTC* voltage range shall be 2.0V to 3.25V. The *VDD_RTC* rail is sourced from a Carrier based Lithium cell, or it may be left open if the RTC backup functions are not required. *SMARC-iMX8MM* module is able to boot without a *VDD_RTC* voltage source.

Lithium cells, if used on Carrier, shall be protected against charging by a Carrier Schottky diode. The diode is placed in series with the positive battery terminal. The diode anode is on the battery side, and the cathode on the Module *VDD_RTC* side.

Note that if a Super cap is used, current may flow out of the Module *VDD_RTC* rail to charge the Super Cap.

4.1.4. Power Sequencing

The Module signal *CARRIER_PWR_ON* exists to ensure that the Module is powered before the main body of Carrier circuits (those outside the power and power control path on the Carrier). The main body of Carrier board circuits should not be powered until the Module asserts the *CARRIER_PWR_ON* signal as a high. Module hardware will assert *CARRIER_PWR_ON* when all Module supplies necessary for Module booting are up.

The IO power of carrier board will be turn on at the stage of power on sequence. If the IO power of carrier board been turn on earlier than the *SMARC* module, the power on carrier board might feedback to *SMARC*

module through IO lines and disturbs the *SMARC* module power on sequence. More seriously, it might cause the CPU won't boot up. It is always recommended that the power on module has to be earlier than that on carrier board.

The boot up of module depends on when you release the reset signal of your carrier board. The module will boot up when the reset signal on your carrier board is released. Before that, the module will not boot up. That's why designer needs to put the *RESET_IN#* in the last stage of power to serve as the "power good" signal of the carrier board.

The module will not boot up till the module power is ready because the carrier board hasn't released the reset signal yet.

The sequence is as follows:

Module Power Ready --> *CARRIER_POWER_ON* --> *RESET_IN#* --> Boot Up

4.1.5. *RESET_IN#*

The *SMARC* module does not know the IO power status from the carrier board, and put *RESET_IN#* in the last stage of power can serve as the "power good" signal of carrier board. This also assures that the power of carrier board is good when *SMARC* module booting up.

4.1.6. *VDD_IO*

SMARC 1.0 specification defines the I/O voltage to be 1.8V or 3.3V or both. The 3.3V *VDD_IO* is depreciated from *SMARC* 1.1 specification.

SMARC-iMX8MM supports 1.8V *VDD_IO* only.

4.1.7. *Power Bad Indication (VIN_PWR_BAD#)*

Power bad indication is from carrier board and is an input signal for Module.

Module and Carrier power supplies (other than Module and Carrier power supervisory circuits) will not be enabled while this signal is held low by the Carrier.

This signal has a 100K pull-up on module and is driven by *OD* part on Carrier.

4.1.8. System Power Domains

It is useful to describe an *SMARC* system as being divided into a hierarchy of three power domains:

- 1) Battery Charger power domain (can be neglected if the system is not battery powered only)
- 2) *SMARC* Module power domain
- 3) Carrier Circuits power domain

The Battery Charger domain includes circuits that are active whenever either charger input power and / or battery power are available. These circuits may include power supply supervisor(s), battery chargers, fuel gauges and, depending on the battery configuration, switching power section(s) to step down a high incoming battery voltage.

The *SMARC* Module domain includes the *SMARC* module.

The Carrier Circuits domain includes “everything else” (and does not include items from the Battery Charger and Module domain, even though they may be mounted on the Carrier).

This is illustrated in the figure below.

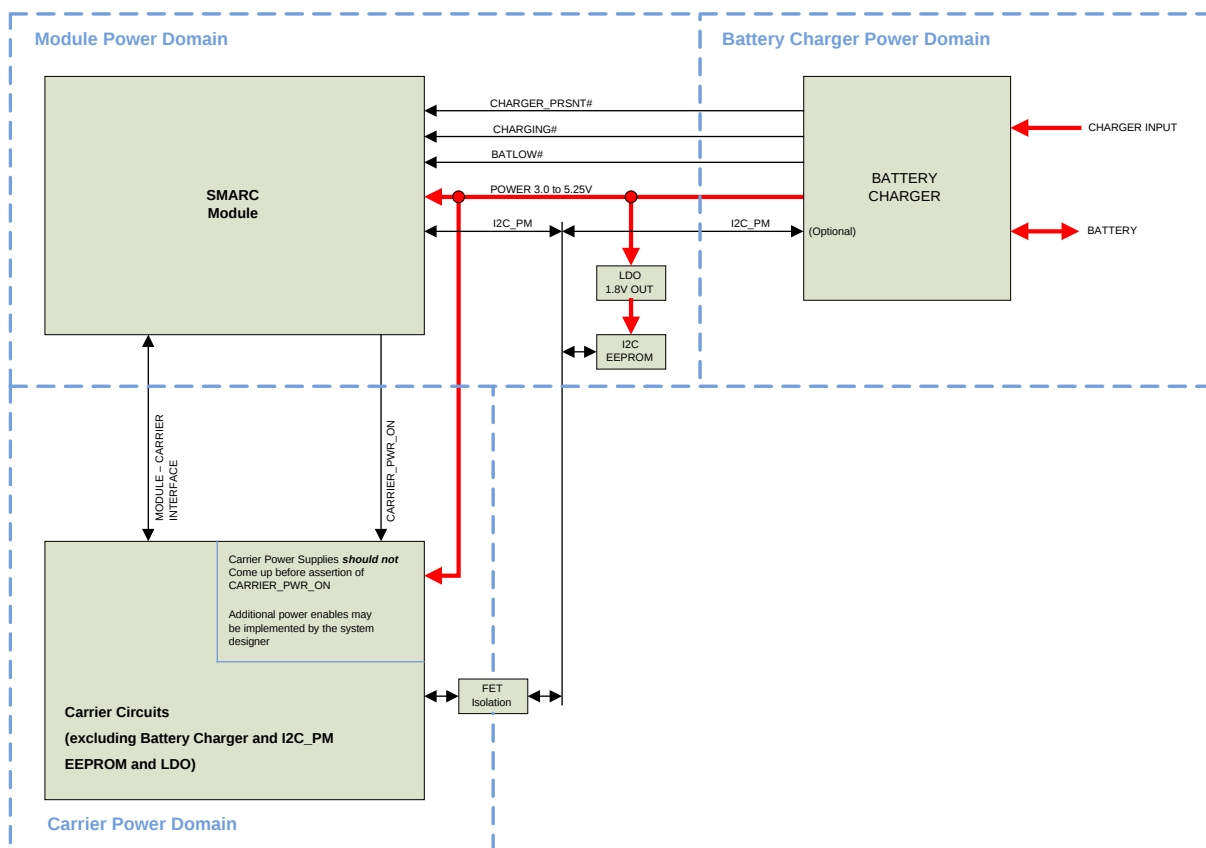


Figure 25 System Power Domains

4.2 Power Signals

4.2.1. Power Supply Signals

SMARC Edge Finger		I/O	Type	Power Rail	Description
Pin#	Pin Name				
P147, P148, P149, P150, P151, P152, P153, P154, P155, P156	VDD_IN	I	PWR	3.0V~5.25V ¹	Main power supply input for the module
P2, S3, P9, S10, P12, S13, P15, S16, P18, S25, P32, S34, P38, S47, P47, P50, P53, P59, S61, S64, S67, P68, S70, S73, P79, S80, P82, S83, P85, S86, P88, S89, P91, S92, P94, P97, P100, S101, P103, S110, S119, P120, S124, S130, P133, S136, P142, S143, S158	GND	I	PWR		Common signal and power ground
S147	VDD_RTC	I	PWR	3.3V	RTC supply, can be left unconnected if internal RTC is not used

4.2.2. Power Control Signals

The input pins listed in the following table are all active low and are meant to be driven by *OD* (open drain) devices on the Carrier. The Carrier either floats the line or drives it to *GND*. No Carrier pull-ups are needed. The pull-up functions are performed on the Module. The voltage rail that these lines are pulled to on the Module varies, depending on the design, and may be 3.3V or *VDD_IN*.

SMARC Edge Finger		I/O	Type	Power Rail	Description
Pin#	Pin Name				
S150	VIN_PWR_BAD#	I	CMOS	VDD_IN	Power bad indication from Carrier board
S154	CARRIER_PWR_ON	O	CMOS	VDD_IO	Signal to inform Carrier board circuits being powered up
P126	RESET_OUT#	O	CMOS	VDD_IO	General purpose reset output to Carrier board.
P127	RESET_IN#	I	CMOS	VDD_IO	Reset input from Carrier board. Carrier drives low to force a Module reset, floats the line otherwise. Pulled up on Module. Driven by OD part on Carrier.
P128	POWER_BTN#	I	CMOS	VDD_IO	Power-button input from Carrier board. Carrier to float the line in in-active state. Active low, level sensitive. It is de-bounced on the Module Pulled up on Module. Driven by OD part on Carrier.

4.2.3. Power Management Signals

The pins listed in the following table are related to power management. They will be used in a battery-operated system.

SMARC Edge Finger		I/O	Type	Power Rail	Description
Pin#	Pin Name				
S156	BATLOW#	I	CMOS	VDD_IO	Battery low indication to Module. Carrier to float the line in in-active state. Pulled up on Module. Driven by OD part on Carrier.
S154	CARRIER_PWR_ON	O	CMOS	VDD_IO	Signal to inform Carrier board circuits being powered up
S153	CARRIER_STBY#	O	CMOS	VDD_IO	Module will drive this signal low when the system is in a standby power state
S152	CHARGER_PRSENT#	I	CMOS	VDD_IO	Held low by Carrier if DC input for battery charger is present. Pulled up on Module. Driven by OD part on Carrier.

SMARC Edge Finger		I/O	Type	Power Rail	Description
Pin#	Pin Name				
S151	CHARGING#	I	Strap	VDD_IO	Held low by Carrier during battery charging. Carrier to float the line when charge is complete. Pulled up on Module. Driven by OD part on Carrier.
S149	SLEEP#	I	CMOS	VDD_IO	Sleep indicator from Carrier board. May be sourced from user Sleep button or Carrier logic. Carrier to float the line in in-active state. Active low, level sensitive. Should be de-bounced on the Module. Pulled up on Module. Driven by OD part on Carrier.
S148	LID#	I	CMOS	VDD_IO	Lid open/close indication to Module. Low indicates lid closure (which system may use to initiate a sleep state). Carrier to float the line in in-active state. Active low, level sensitive. Should be de-bounced on the Module. Pulled up on Module. Driven by OD part on Carrier.

4.2.4. Special Control Signals (TEST#)

SMARC-iMX8MM does not support to boot up from SPI NOR flash. *SMARC-iMX8MM* module boots up from the onboard eMMC Flash first. The firmware in the eMMC flash will read the *BOOT_SEL* configuration and decides where to load the u-boot.

In some situations like the firmware in eMMC flash needed to be upgrade/restore or at factory default where the firmware in eMMC flash is empty or at development stage that the firmware in eMMC needs to be modified, users will need an alternative way to boot up from SD card first. The *TEST#* pin serves as this purpose. The *TEST#* pin is pulled high on module. If carrier board leaves this pin floating or pulls high, the module will boot up from on-module eMMC. If carrier board pulls this pin to *GND*, the module will boot up from SD card first. The first stage bootloader in *i.MX8M Mini* CPU ROM codes will load the 2nd stage bootloader based on the setting of this *#TEST* pin (S157).

4.3 Power Flow and Control Signals Block Diagram

Following figures shows the power flow and control signals block diagram.

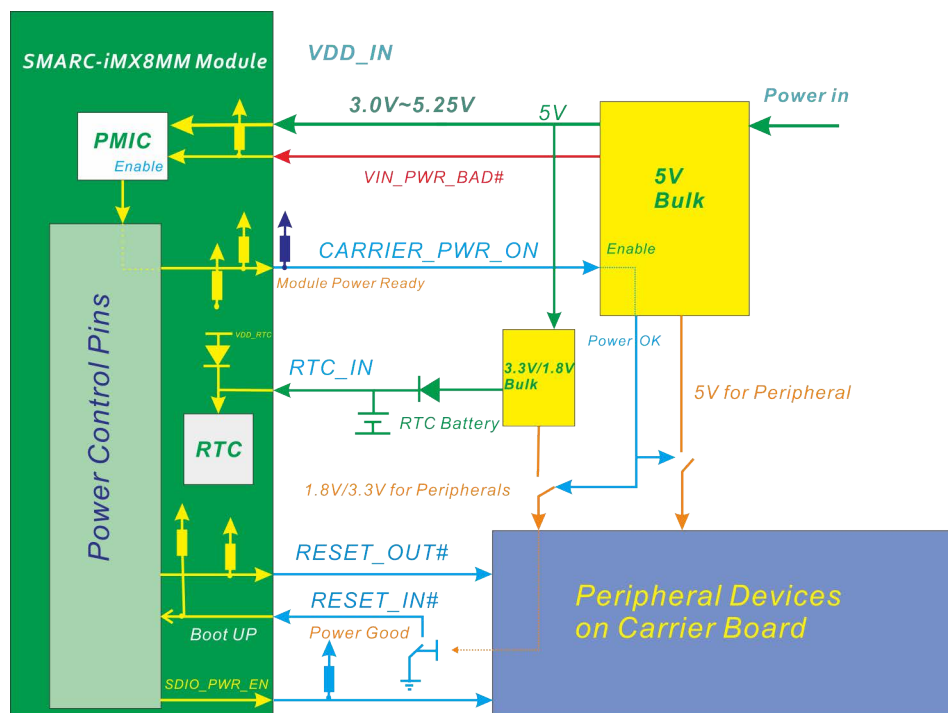


Figure 26: Power Block Diagram

When main power is supplied from the carrier, a voltage detector will assert *VIN_PWR_BAD#* signal to tell the module and carrier that the power is good. This signal will turn on the *PMIC* on module to power on the module.

Carrier power circuits in the carrier Power domain should not power up unless the module asserts *CARRIER_PWR_ON*. The module signal *CARRIER_PWR_ON* exists to ensure that the module is powered before the main body of carrier circuits (those outside the power and power control path on the carrier).

The main body of carrier board circuits will not be powered until the module asserts the *CARRIER_PWR_ON* signal being correct. Module hardware will assert *CARRIER_PWR_ON* when all power supplies necessary for module booting are ready. The module will continue to assert signal *RESET_OUT#* after the release of *CARRIER_PWR_ON*, for a period sufficient to allow carrier power circuits to come up. When Carrier power is ready, it will assert *RESET_IN#* to inform module booting up.

If users would like to have SD boot up, *SDIO_PWR_EN* signal have to be pull up to 3.3V on carrier.

Module and carrier power supplies will not be enabled if the *VIN_PWR_BAD#* is held low by carrier. It is a power bad indication signal from carrier and is 200k pull up to *VDD_IN* on module.

4.4 Power States

The *SMARC-iMX8MM* module supports different power states. The table below describes the behavior in the different states and which power rails and peripherals are active. Additional power states can be implemented if required using available GPIOs to control additional power domains and peripherals.

<i>Abbr.</i>	<i>Name</i>	<i>Description</i>	<i>Module</i>	<i>Carrier Board</i>
<i>UPG</i>	<i>Unplugged</i>	<i>No power is applied to the system, except the RTC battery might be available</i>	<i>No main VDD_IN applied from fixed DC supply, VDD_IN available if backup battery is implemented</i>	<i>No power supply input, RTC battery maybe inserted</i>
<i>OFF</i>	<i>off</i>	<i>System is off, but the carrier board input supply is available</i>	<i>The main VDD_IN is available, but the CPU and peripherals are not running. Only the PMIC is running</i>	<i>Carrier board provides power for module, the peripheral supplies are not available</i>
<i>SUS</i>	<i>Suspend</i>	<i>System is suspended and waits for wakeup sources to trigger</i>	<i>CPU is suspended, wakeup capable peripherals are running while others might be switched off</i>	<i>Power rails are available on carrier board, peripherals might be stopped by software</i>
<i>RUN</i>	<i>Running</i>	<i>System is running</i>	<i>All power rails are available, CPU and peripherals are running</i>	<i>All power rails are available, peripherals are running</i>
<i>RST</i>	<i>Reset</i>	<i>System is put in reset state by holding RESET_IN# is low</i>	<i>All power rails are available, CPU and peripherals are in reset state</i>	<i>All power rails are available, peripherals are in reset state</i>

The figure below shows a sequence diagram for the different power states. The module automatically enters into the running mode when the main power rail is applied to the module. In the running mode, the system can be set to

suspend by software. There might be different wake up sources available. Consult the datasheet for *SMARC-iMX8MM* module for more information about the available wakeup events.

In the running state, a shutdown request can be triggered by software. This turns off all power rails on the module and requests the carrier board to switch of the power rails for the peripherals. The module can be brought back to the running mode in two ways. The module main voltage rail (*VDD_IN*) can be removed and applied again. If needed, this could also be done with a button and a small circuit. *SMARC-iMX8MM* module supports being power cycled by asserting the *RESET_IN#* signal (e.g. by pressing the reset button or shunt and relief the reset jumper), please consult the associated module datasheet for more information about the support power cycle methods.

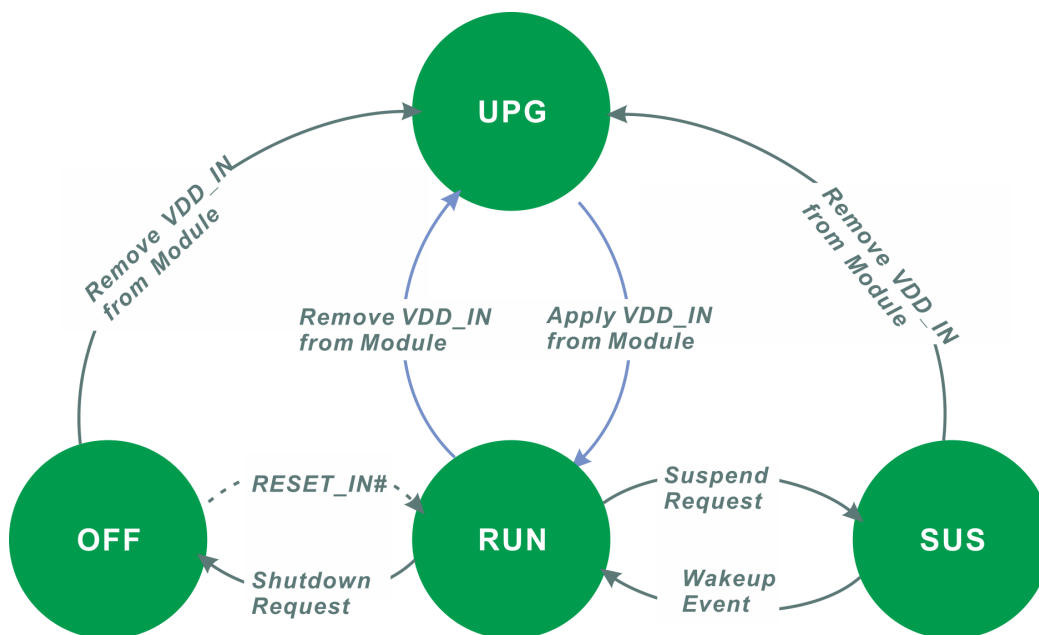


Figure 27: Power States and Transitions

4.5 Power Sequences

When main power is supplied from the carrier, a voltage detector will assert *VIN_PWR_BAD#* signal to tell the module and carrier that the power is good. This signal will enable the *PMIC* on module to power on the module. The module will not power up if the module receives a low-active *VIN_PWR_BAD#* signal.

The *SMARC-iMX8MM* module starts asserting *CARRIER_PWR_ON* as soon as the main voltage supply being applied to the module and all power supplies necessary for module booting are up. This is to ensure that the module is powered before the main body of carrier circuits (those outside the power and power control path on the carrier). The module will continue to assert signal *RESET_OUT#* after the release of *CARRIER_PWR_ON*, for a period sufficient time (at least 10ms) to allow carrier power circuits that the peripheral supplies need to ramp up.

The peripheral power rails on the carrier board need to ramp up in a correct sequence. The sequence starts normally with the highest voltage (e.g. 5V) followed by the lower voltages (e.g. 3.3V then 1.8V and so on). Peripherals normally require that a lower voltage rails is never present if a higher rail is missing. Check the datasheet of all peripheral components on the carrier board for a proper sequencing. The *SMARC-iMX8MM* modules guarantees to apply the reset output *RESET_OUT#* not earlier than 100ms after the *CARRIER_PWR_ON* goes high. This gives the carrier board a sufficient time for ramping up all power rails. *SDIO_PWR_EN* signal have to be pull up to 3.3V on carrier if users would like to have SD boot up functionality.

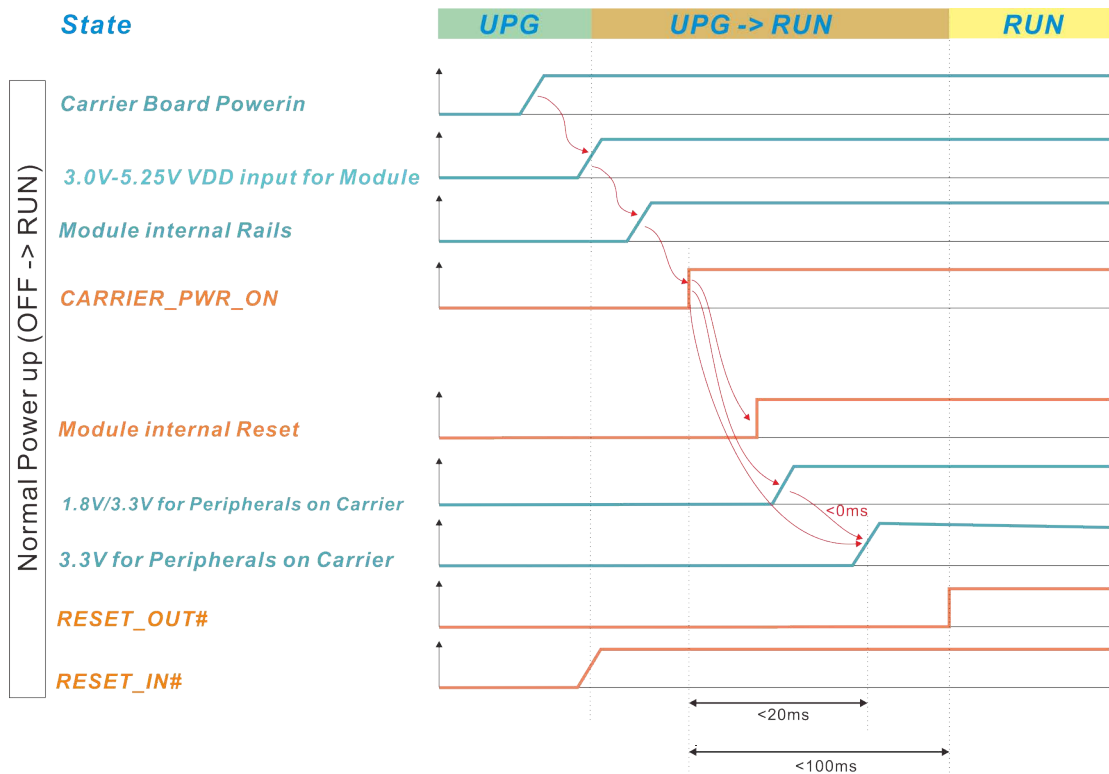


Figure 28: Power-Up Sequence

If the operating system supports it, a shutdown sequence can be initiated. Some systems may benefit from shutting down instead of just removing the main power supply as this allows the operating system to take care of any housekeeping (e.g. bringing mass storage devices to a controlled halt). Some operating system may not provide the shutdown function.

As it is not permitted that a lower voltage rail is present when a higher voltage rail has been switched off, the sequence of shutting down the peripheral voltages needs to be considered. The lower voltages (e.g. peripheral 3.3V) need to ramp down before the higher ones do (e.g. peripheral 5V).

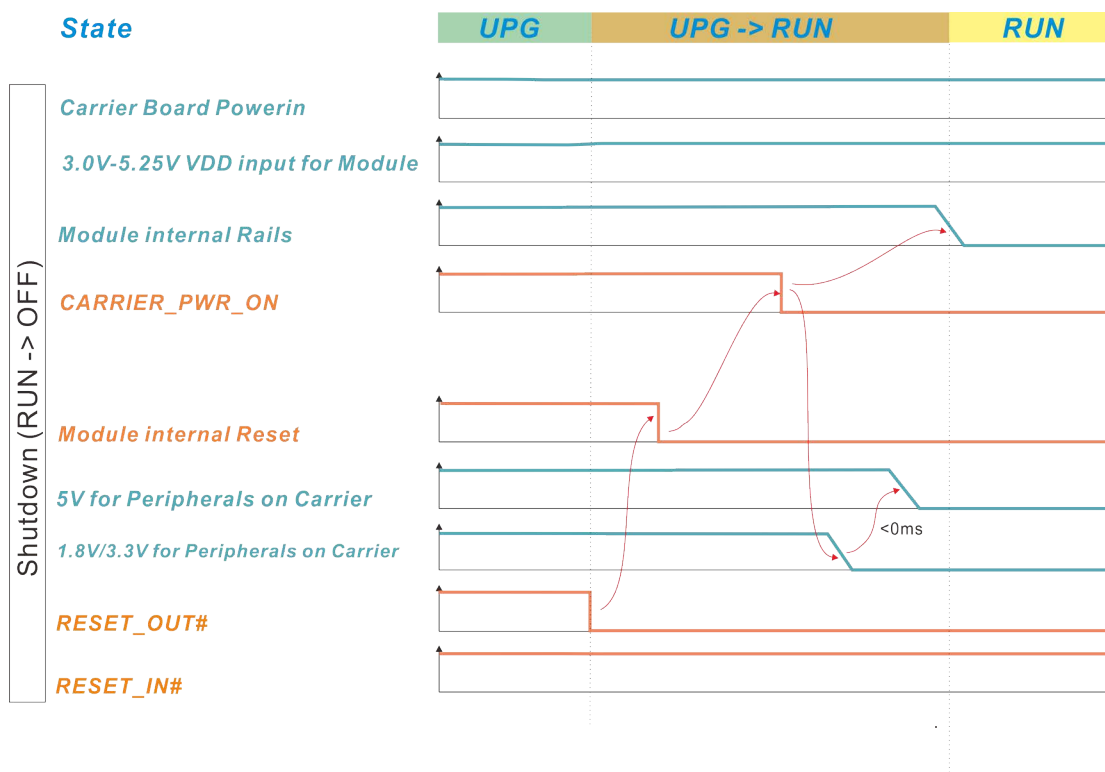


Figure 29: Shutdown Sequence

When the *RESET_IN#* is asserted, a reset cycle is initiated. The module internal reset and the external reset output *RESET_OUT#* are asserted as long as *RESET_IN#* is asserted. If the reset input *RESET_IN#* is de-asserted, the internal reset and the *RESET_OUT#* will remain low for at least 1ms until they are also de-asserted and the module starts booting again. This guarantees a minimum reset time of 1ms even if the reset input *RESET_IN#* is triggered for a short time.

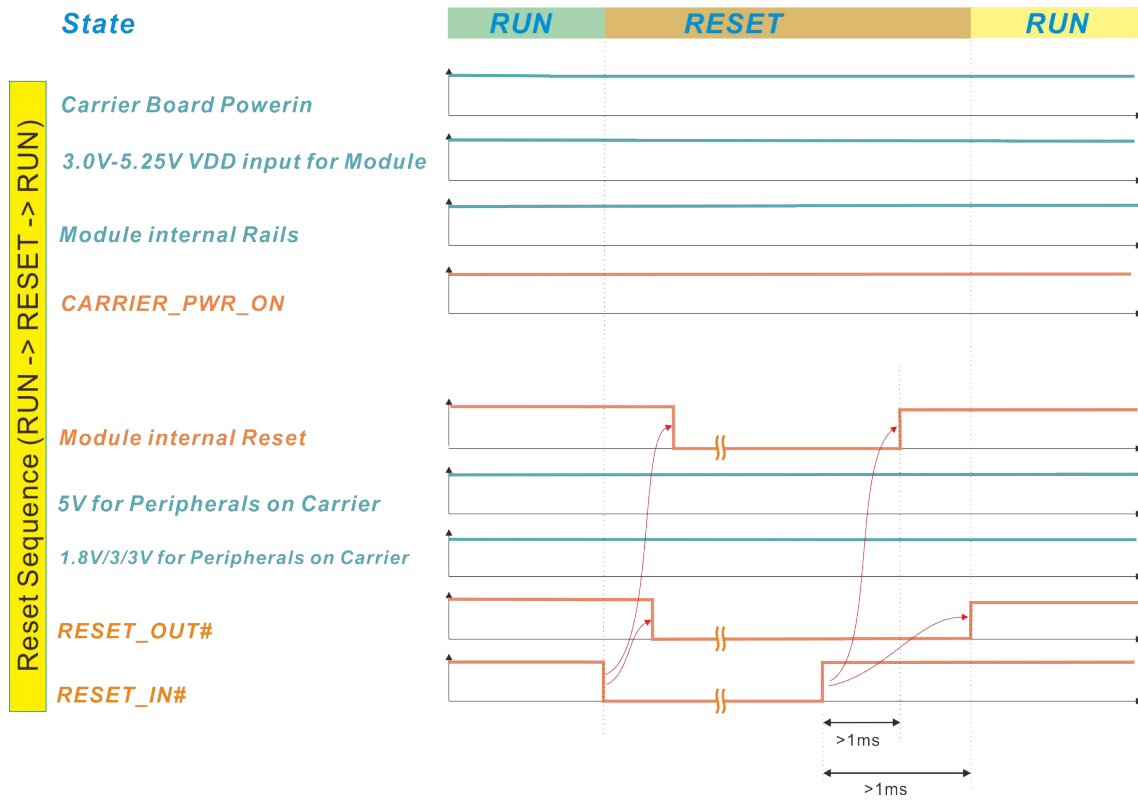


Figure 30: Reset Sequence

4.6 Terminations

4.6.1. Module Terminations

The Module signals listed below will be terminated on the Module. The terminations follow the guidance given in the table below.

<i>Signal Name</i>	<i>Series Termination</i>	<i>Parallel Termination</i>	<i>Notes</i>
HDMI_CTRL_DAT		1.5k pull-up to 1.8V	Carrier pull-up required
HDMI_CTRL_CK		1.5k pull-up to 1.8V	Carrier pull-up required
PCIE_[A:B]_TX+	0.2uF Capacitor		
PCIE_[A:B]_TX-	0.2uF Capacitor		
I2C_PM_DAT		2.2K pull-up to 1.8V	
I2C_PM_CK		2.2K pull-up to 1.8V	
I2C_LCD_DAT		2.2K pull-up to 1.8V	
I2C_LCD_CK		2.2K pull-up to 1.8V	
I2C_CAM[0:1]_DAT		2.2K pull-up to 1.8V	
I2C_CAM[0:1]_CK		2.2K pull-up to 1.8V	
I2C_GP_DAT		2.2K pull-up to 1.8V	
I2C_GP_CK		2.2K pull-up to 1.8V	
SDIO_CD#		10k pull-up to 3.3V	
SDIO_WP		10k pull-up to 3.3V	

<i>Signal Name</i>	<i>Series Termination</i>	<i>Parallel Termination</i>	<i>Notes</i>
USB[0:4]_EN_OC#		10K pull-up to 3.3V or a switched 3.3V on the Module	x is '0' or '1' Switched 3.3V: if a USB channel is not used, then the USBx_EN_OC# pull-up rail may be held at GND to prevent leakage currents.
VIN_PWR_BAD#		200k pull-up to VIN	
USB[2:3]_SSTX+	0.2uF Capacitor		
USB[2:3]_SSTX-	0.2uF Capacitor		

4.6.2. Carrier/Off-Module Terminations

The following Carrier terminations are required, if the relevant interface is used. If unused, the SMARC Module pins may be left un-connected.

<i>Module Signal</i>	<i>Carrier Series</i>	<i>Carrier Parallel</i>	<i>Notes</i>
<i>Group Name</i>	<i>Termination</i>	<i>Termination</i>	
GBE_MDI	<i>Magnetics module appropriate for 10/100/1000 GBE transceivers</i>	<i>Secondary side center tap terminations appropriate for Gigabit Ethernet implementations</i>	
GBE_LINK (GBE status LED sinks)		<i>If used, current limiting resistors and diodes to pulled to a positive supply rail</i>	<i>The open drain GBE status signals, GBE_LINK100#, GBE_LINK1000# and GBE_LINK_ACT#, if used, need Carrier based current limiting resistors and LEDs. The LED may be integrated into a Carrier RJ45 jack. A resistor of 68 ohms, and a LED with the anode tied to Carrier 3.3V, is typical.</i>
LVDS LCD		<i>100 ohm resistive termination across the differential pairs at the endpoint of the signal path, usually on the display assembly</i>	

<i>Module Signal</i>	<i>Carrier Series</i>	<i>Carrier Parallel</i>	<i>Notes</i>
<i>Group Name</i>	<i>Termination</i>	<i>Termination</i>	
HDMI_CTRL_DAT HDMI_CTRL_CK			<i>Pull-ups to VDD_IO on each of these lines is required on the Carrier.</i> <i>The pull-ups may be part of an integrated HDMI ESD protection and control-line level shift device, such as the Texas Instruments TPD12S016.</i> <i>If discrete Carrier pull-ups are used, they should be 10K.</i>
PCIe_A_RX+ PCIe_A_RX-	<i>Series coupling caps near the TX pins of the Carrier board PCIe device (0.2uF)</i>		
USB[2:3]_SSRX+ USB[2:3]_SSRX-	<i>Series coupling caps near the TX pins of the Carrier board USB 3.0 device (0.2uF)</i>		

<i>Module Signal</i>	<i>Carrier Series</i>	<i>Carrier Parallel</i>	<i>Notes</i>
<i>Group Name</i>	<i>Termination</i>	<i>Termination</i>	
DP1_AUX_SEL		Carrier DP1_AUX_SEL should be connected to pin 13 of the DisplayPort connector to enable a dual-mode DisplayPort interface.	
DP1_LANE[0:3]+ DP1_LANE[0:3]-		DC blocking capacitors shall be placed on the Carrier for the DP1_LANE[0:3] signals.	
DP1_HPD		The carrier shall include a blocking FET on DP1_HPD to prevent back-drive current from damaging the module.	

4.7 Boot Device Selection

SMARC hardware specification defines three pins (*BOOT_SEL[0:2]*) that allow the Carrier board user to select from eight possible boot devices. *SMARC-iMX8MM* does not support boot up from SPI flash. If *TEST#* is not shunt cross to GND, the first stage of bootloader on *SMARC-iMX8MM* will boot up from on-module *eMMC* first. The firmware on *eMMC* will read the boot device configuration and load the second stage bootloader from selected boot devices. The *BOOT_SELx#* pins are weakly pulled up on the Module and the pin states decoded by module logic. The Carrier shall either leave the Module pin Not Connected (“Float” in the table below) or shall pull the pin to GND, per the table below.

Carrier Connection				Boot Source
	<i>BOOT_SEL2#</i>	<i>BOOT_SEL1#</i>	<i>BOOT_SEL0#</i>	
0	GND	GND	GND	Carrier SATA
1	GND	GND	Float	Carrier SD Card
2	GND	Float	GND	Carrier eSPI (CS0#)
3	GND	Float	Float	Carrier SPI
4	Float	GND	GND	Module Device (USB)
5	Float	GND	Float	Remote Boot (GBE)
6	Float	Float	GND	Module eMMC Flash
7	Float	Float	Float	Module SPI

If *TEST#* pin is shunt cross to GND, the first stage of bootloader on *SMARC-iMX8MM* will boot up from off-module *SD* card. This is a back door to restore/upgrade the firmware in on-module *eMMC*.